



Whirlpool RT1209 Health & Safety, Use & Care And Installation Manual

1
2
3
4
5
6
7
8
9
10
11
12

--

•

Bookmarks

[Download this manual](#)

Quick Links



†
guid
and
RT1209
RT1211



[Next Page](#)

1
2
3
4
5

Related Manuals for Whirlpool RT1209

[Heater Whirlpool HB124 Operation Manual](#)

Bathroom ventilation heater (18 pages)

[Heater Whirlpool HT015 User Manual](#)

(24 pages)

[Heater Whirlpool WCC Installation Instructions](#)

Upflow/downflow cased evaporator coil (4 pages)

[Heater Whirlpool FHT1200 Health & Safety, Use & Care And Installation Manual](#)

2 in 1 fan heater (36 pages)

[Heater Whirlpool HT220 User Manual](#)

Ceramic heater (17 pages)

Summary of Contents for Whirlpool RT1209

[Page 1](#) RT1209 RT1211...

[Page 2](#) 2500-3000 220-240V 50Hz RT1209 2250-2700 220-240V 50Hz RT1211
1. 2. 3. 4. 5. 6. 7. 8. 9. 10. 11. 12. ...

[Page 3](#) 23. 24. 25. 26. 27. 28. 29. 30. 31. 32. 33. 34. 35. 36. 37. 38. 39. 40. ...

[Page 4](#) WARNING ...

[Page 5](#) ...

[Page 6](#) 220-240V~ 50Hz RT1209/RT1211 ...

[Page 7](#) Remarks Max Heat Output(W) Freauency Voltage m³ RT1209 2250-2700 220-240V 50Hz With Fan Heating function RT1211 2500-3000 220-240V 50Hz With Fan Heating function
Remarks: Based on test result obtained from testing chamber, the room height is 2.5 m high. The suggested room height and the sizes are for reference only.

[Page 8](#) 22. Do not touch hot surface when in use. 23. Turn off all switches and remove plug from outlet when not in use or before cleaning any part of the appliance. 24. Avoid crushing the power cord with the oil radiator wheels. 25.

[Page 9: Special Instructions](#)

SPECIAL INSTRUCTIONS This heater is filled with a precise quantity of special oil. Repairs requiring of the oil container are only to be made by the manufacturer or an appointed service agent who should be contacted if there is an oil leak. At the end of service life of the oil radiator.

[Page 10](#) Warning: Before using the product, make sure the casters are opened to the maximum, failure to do so may lead to tip over.

[Page 11](#) For the RT1209/RT1211 model, the rated voltage is 220-240V~ 50Hz. Before operation, please confirm that Heat exhaust(Do Not Cover) A Temperature control knob Turn the knob clockwise. Set the temperature from the minimum to the maximum. C Press the switch to "ON"...

This manual is also suitable for:

[Rt1211](#)