



Toshiba VC-GC31CPT Owner's Manual

Household vacuum cleaner

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38

--

•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks

--

Available languages


EN


TH

 

VN

Quick Links

[Download this manual](#)




Follow-up Service



Follow-up Service

 Theo dõi Dịch Vụ*





40

VC-GC32,31CP

Vietnam

Do not attempt to repair it by yourself.

Go to Toshiba Repair Center nearby with the appliance and warranty to get service.

Please call Customer Service number: 18001529 for further support.

Thailand

Do not attempt to repair it by yourself.

Go to Toshiba Repair Center nearby with the appliance and warranty to get service.

Please call Customer Service number: 02-511-7777 for further support.

Việt Nam

Không tự tháo lắp hay sửa chữa thiết bị.

Mang thiết bị đến Trạm bảo hành ủy quyền của Toshiba Việt Nam gần nhất để được sửa chữa.

Vui lòng gọi đến số điện thoại của Trung tâm tư vấn và hỗ trợ khách hàng của Toshiba 18001529 (miễn phí) để được hỗ trợ thêm.



この製品は、保証期間内に故障した場合、保証書と製品を、近隣のToshiba修理センターに持ち込み、修理を受けることができます。詳しくは、お客様サポートセンター（1800-1529）までお問い合わせください。

[Table of Contents](#)

[Next Page](#)

- 1
- 2
- 3
- 4
- 5

Chapters

English 3

Tiếng Việt 15

□□□ 27

Related Manuals for Toshiba VC-GC31CPT

[Vacuum Cleaner Toshiba VC-GC33BSA Owner's Manual](#)

(48 pages)

[Vacuum Cleaner Toshiba VC-GC32BSA Owner's Manual](#)

Household vacuum cleaner (40 pages)

[Vacuum Cleaner Toshiba VC-EA100CV Owner's Manual](#)

(5 pages)

[Vacuum Cleaner Toshiba VC-PD9 Instructions](#)

(2 pages)

[Vacuum Cleaner Toshiba VC-CLS1BF User Manual](#)

(10 pages)

[Toshiba VC-CLS1BF - HAND STICK VACUUM CLEANER Manual](#)

(article)

[Vacuum Cleaner Toshiba VC-CL3000XBF User Manual](#)

(18 pages)

[Toshiba VC-CLX50BF - 1.5KG HAND STICK VACUUM CLEANER Manual](#)

(article)

[Vacuum Cleaner Toshiba HCV-6KALU Instruction Manual](#)

Vacuum contactor (30 pages)

Summary of Contents for Toshiba VC-GC31CPT

[Page 1](#) このマニュアルは、Toshiba VC-GC31CPT の安全に使用するための重要な情報を含んでいます。必ずこのマニュアルをよく読んで、安全に使用してください。

[Page 2](#) 必ずこのマニュアルをよく読んで、安全に使用してください。Toshiba VC-GC31CPT の安全に使用するための重要な情報を含んでいます。

[Page 3: Table Of Contents](#)

Contents Safety Precautions Product Structure Parts identification Accessories How to operate your vacuum cleaner Schematic diagram How to clean floor and carpet Dust Cup 1. Structure 2. Disassembly and assembly of dust cup 3. Disassembly of dust cup parts 4. Assembly of dust cup parts How to clean 1.

[Page 4: Safety Precautions](#)

Safety Precautions Please Do Comply. Caution Mark Interpretation Caution Mark Indication Death or serious injury may occur Warning if the safety requirements are Never do what the mark describes. ignored while using this product. Injury or property damage may Always do what the mark describes. result if the safety requirements Caution are ignored while using this...

[Page 5](#) Warning Do not try to vacuum sharp Do not block the air vent while fragments such as glass, pin, operating the appliance to avoid blades and other objects with fire. Prohibition Prohibition sharp edges to avoid damaging the appliance or injury. Do not keep the appliance close to Do not operate the appliance when flammable materials such as...

[Page 6: Product Structure](#)

Accessories: Hose Telescopic Wand Floor Head Crevice Nozzle Futon Brush Round Brush VC-GC31CPT/CPV VC-GC31CPT/CPV VC-GC31CPT/CPV VC-GC31CPT/CPV VC-GC32CPT/CPV only VC-GC32CPT/CPV only VC-GC32CPT/CPV VC-GC32CPT/CPV VC-GC32CPT/CPV VC-GC32CPT/CPV VC-GC32,31CP...

[Page 7: How To Operate Your Vacuum Cleaner](#)

How to operate your vacuum cleaner Schematic diagram Power switch Fuse Power cord Self-resetting thermal cut-out Motor Do not use the vacuum cleaner without proper installation of the dust Warning cup and filter. How to clean floor and carpet Clean floor To increase the cleaning effect and avoid scratching the floor surface, move floor head lightly along the floor.

[Page 8: Dust Cup](#)

Dust Cup 1. Structure Cup cover Cup button Separation chamber Dust cleaning Max. line Dust cup Pleat filter slider The dust should not Do install the pleat exceed the Max. line Slide it right and left filter properly to to avoid suction to clean the dust avoid motor declining because of...

[Page 9: Disassembly Of Dust Cup Parts](#)

3. Disassembly of dust cup parts " " in the Press the cup button to remove the pleat filter direction of the arrow to remove it. and separation net. cover Cup button Press the button on both sides of the pleat * Disassemble the pleat filter above the garbage bin, filter to disassemble it.

[Page 10: How To Clean](#)

Increase the cleaning frequency of the pleat filter and separation net after frequent suction to avoid blocking. It is advisable for allergy sufferers to wear disposable gloves and a face mask Caution while emptying the cleaner. Do clean the dust cup when the dust reaches the Max. line to avoid the suction declining.

[Page 11: How To Clean The Pleat Filter](#)

t l i " " in the Slide the dust cleaning slider right and left for direction of the arrow to remove it. about 5 times. Dust cleaning slider cover Press the button on both sides of the pleat t l i filter to disassemble it.

[Page 12: Function Of Accessories](#)

Function of Accessories The handgrip could be disconnected from the hose. For Model: VC-GC31CPT/CPV VC-GC32CPT/CPV For Model: VC-GC31CPT/CPV VC-GC32CPT/CPV * Crevice nozzle's continuous use For Model: shall not exceed VC-GC31CPT/CPV 20 minutes to VC-GC32CPT/CPV avoid causing motor overload. For Model:...

[Page 13: Maintenance](#)

Maintenance How to clean the appliance and accessories The appliance should not be washed with water or a dripping rag to avoid an electrical shock or a breakdown. Warning The parts should be hung in the shade to dry after cleaning. Do not attempt to dry with a hair dryer, electric heater or warm fans to avoid mechanical injury or performance decline.

[Page 14: Troubleshooting](#)

Clean the pleat filter and restart the vacuum t l i cleaner. suddenly. valve opens. Vacuum cleaner causes smell Clean the pleat filter and dust cup. during operation. Specifications Model No. VC-GC31CPT/CPV VC-GC32CPT/CPV Rated Voltage 220V 220V Rated Frequency 50Hz 50Hz Rated Input Power 950W 950W...

[Page 15](#) Nội dung Cần trọng an toàn Cấu tạo của thiết bị Xác định các bộ phận Phụ kiện Vận hành máy hút bụi Sơ đồ mạch điện Cách vệ sinh sàn và thảm Hộp chứa bụi 1. Cấu tạo 2. Tháo và lắp hộp chứa bụi 3.

Page 29

Page 30: 00000000 0 0000 0 00 0 0
00000000000000000000 0 000000 0 0000 00 0 00 0 0 0000000 0 000000000000 00 0 00 0 00 0 0
0000000 0 00 0 0 0000 00 0 00 0 00 0 00 000000 VC-GC31CPT/CPV VC-GC31CPT/CPV VC-
GC31CPT/CPV VC-GC31CPT/CPV...

[Page 31:](#)

[Page 32:](#)

Page 33: [\[Page 33: 00000000 0 0 00 0 0000 0 00 000000 0 00000 0 00 0 0\]](#)

00000000 0 0 00 0 0000 0 0000 0 00 0 0 0000 0 00000000 0 00000 0 0000 0 0 00000 00
00 0 0 00 0 0000 0 00000000 0 000000 0 0000 0000...

Page 34:

Page 35: [\[Page 35\]](#)

Page 36:

VC-GC31CPT/CPV VC-GC32CPT/CPV

[Page 37:](#)

Page 38: 000000 0 0 00 0 0 00

0000000000000000 0 0000000000 0 000000 0 000000 0 000000 0 00 00 0 0 0 0 0 0 00000000
00 0 0 00 0 VC-GC31CPT/CPV VC-GC32CPT/CPV 0000 0 00000 0 00000 0 000 0 000...

This manual is also suitable for:

Vc-gc32cptVc-gc31cpvVc-gc32cpv