

Limited Operation By Group Control - Toshiba MML-AP0074NH-E Owner's Manual

Indoor unit

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68

69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118

119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167
168

169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217
218

219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237
238
239
240
241
242
243
244
245
246
247
248
249
250
251
252
253
254
255
256
257
258
259
260
261
262
263
264
265
266
267
268



-

[Table of Contents](#)

•

 
Bookmarks

Available languages

- EN
- FR
- DE
- ES
- IT
- NL
- PT
- TR



CN



More



6 |

LIMITED OPERATION BY GROUP CONTROL

NOTE

Group control: Operate air conditioners in more than one system in same time.

Header indoor unit: The representative unit during group control. Receive commands from wired remote controller and transmit the commands to follower units.

(Header indoor unit is indoor unit that receives START/STOP signal from the wireless remote control.)

Follower indoor unit: Indoor units other than the Header unit are called follower unit.

A wired remote controller (separately available) is required for the group control.

9

Example of group combination

Wired Remote controller

When using indoor unit in group control,

1. Hi-POWER operation will not function.

When Hi-POWER is transmitted from wireless remote controller the receiving sound will be heard from the indoor unit and display on the wireless remote controller will also change. However, the indoor unit does not operate Hi-POWER operation. Restore the display on the wireless remote controller pushing Hi-POWER button.

2. COMFORT SLEEP

When COMFORT SLEEP is transmitted from wireless remote controller, the receiving sound will be heard from the indoor unit and the display on the wireless remote controller will also be changed as same as Hi-POWER operation. However, the set temperature and the fan speed will not be automatically adjusted. Only off timer function is activated.

3. Units other than the Header unit cannot be operated with remote controller and the TEMPORARY operation.

When operating air conditioner with wireless remote controller transmission should be sent to the Header unit. Header and follower indoor units are decided through address setting upon installation. Follower unit will not receive any signals from wireless remote controller.

Air conditioner will not work even if the

(Some Follower units may receive SWING and FIX, but these operations are performed only on the unit that received the signal.)

(When wireless remote controller is used, only the Header unit receives SWING signal. If the SWING signal is transmitted to follower unit, the sound to refuse receiving signal (3 beeps) is heard and the follower unit does not receive the signal.

For FIX operation, both Header and follower unit perform the operation by itself.

When wired remote controller is used, airflow direction can be changed on each unit by selecting the indoor unit.)

4. TIMER lamp lights up only on the Header unit.

When the timer is set with wired remote controller, even the TIMER lamp on the Header unit will not light up.

14-EN

1112750104.indb 14

Indoor

Indoor

Outdoor

Outdoor

button on the follower unit is pressed.

Indoor

Outdoor

CAUTION


- 14 -

Owner's Manual

Control line

Other connecting line

12/8/2559 BE 5:07 PM

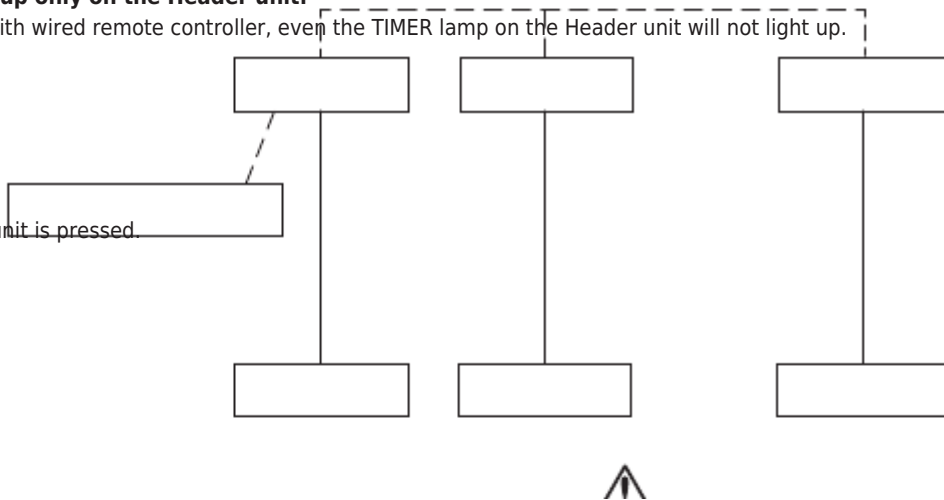

[Previous Page](#)
[Next Page](#)

1
...
13
14
15
16
17
18
19
20

Quick Links:

[Table of Contents](#)

[Maintenance](#)

[Specifications](#)

[Specifiche](#)

Chapters

[English](#) 3

[Français](#) 27

[Deutsch](#) 51

[Italiano](#) 75

[Español](#) 99

[Português](#) 123

[Dutch](#) 147

[Türkçe](#) 219

Related Manuals for Toshiba MML-AP0074NH-E

[Air Conditioner Toshiba MML-AP0074NH-E Service Manual](#)

(132 pages)

[Air Conditioner Toshiba MML-AP0074NH-E Installation Manual](#)

Super modular multi system air conditioner (32 pages)

[Remote Control Toshiba MML-AP0074NH-E Owner's Manual](#)

Super modular multi system air conditioner wireless remote controller (26 pages)

[Air Conditioner Toshiba Super Modular Unit MMU-AP0091H Installation Manual](#)

(20 pages)

[Air Conditioner Toshiba MMU-AP0091H Owner's Manual](#)

Super heat recovery multi, indoor/outdoor unit, 1-way / 2-way / 4-way air discharge cassette type, floor standing cabinet type, for commercial use (220 pages)

[Air Conditioner Toshiba MMU-AP0091H Installation Manual](#)

Super modular multi outdoor / indoor unit air conditioners (181 pages)

[Air Conditioner Toshiba MMU-AP0091H Owner's Manual Installation And Operation](#)

Super heat recovery multi system (91 pages)

[Air Conditioner Toshiba MMU-AP0074YH-E Service Manual](#)

(219 pages)

[Air Conditioner Toshiba MML-AP0074BH-E Installation Manual](#)

(24 pages)

[Air Conditioner Toshiba MMU-AP0074YH-E\(-TR\) Service Manual](#)

(226 pages)

[Air Conditioner Toshiba MMU-P0121H Service Manual](#)

Modular multi system, indoor unit, outdoor unit. (216 pages)

[Air Conditioner Toshiba MMS Series Design Manual](#)

Modular multi system (98 pages)

[Air Conditioner Toshiba MMU-UP0091HP-E Service Manual](#)

Air conditioner (multi type) (295 pages)

[Air Conditioner Toshiba MML-UP0071NHP-E Installation Manual](#)

Super modular multi system air conditioner (39 pages)

[Air Conditioner Toshiba MML-UP0071BH-E Installation Manual](#)

(28 pages)

[Air Conditioner Toshiba MML-UP0071H-E Installation Manual](#)

Multi type indoor unit floor standing cabinet type (30 pages)

Related Content for Toshiba MML-AP0074NH-E

[RAV-GM301KRTP-A Limited Operation By Group Control](#)

Toshiba RAV-GM301KRTP-A
[RAV-SM122KRTP-UL Limited Operation By Group Control](#)
Toshiba RAV-SM122KRTP-UL
[RAV-HM301KRTP-E Limited Operation By Group Control](#)
Toshiba RAV-HM301KRTP-E
[RAV-RM301KRTP-NZ Limited Operation By Group Control](#)
Toshiba RAV-RM301KRTP-NZ
[MMK-AP0074MHP-E Limited Operation By Group Control](#)
Toshiba MMK-AP0074MHP-E
[RAV-GM1101KRTP-E Limited Operation By Group Control](#)
Toshiba RAV-GM1101KRTP-E
[RBC-AX33UYP-E Limited Operation By Group Control](#)
Toshiba RBC-AX33UYP-E
[MMK-AP0057HP-E Limited Operation By Group Control](#)
Toshiba MMK-AP0057HP-E

This manual is also suitable for:

[Mml-ap0074nh-tr](#)[Mml-ap0094nh-e](#)[Mml-ap0094nh-tr](#)[Mml-ap0124nh-e](#)[Mml-ap0124nh-tr](#)[Mml-ap0154nh-e](#) ... [Show all](#)