



# Sanyo FWBP507FF Owner's Manual



1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57

---

•

[Table of Contents](#)

- 

Troubleshooting

•

## Bookmarks



## Quick Links

[1 Table of Contents](#)

[2 Front Panel](#)


[3 Remote Control](#)

[4 Playing Back Contents from a Usb Memory Stick](#)

[5 Software Update](#)

[6 Troubleshooting](#)

[Download this manual](#)

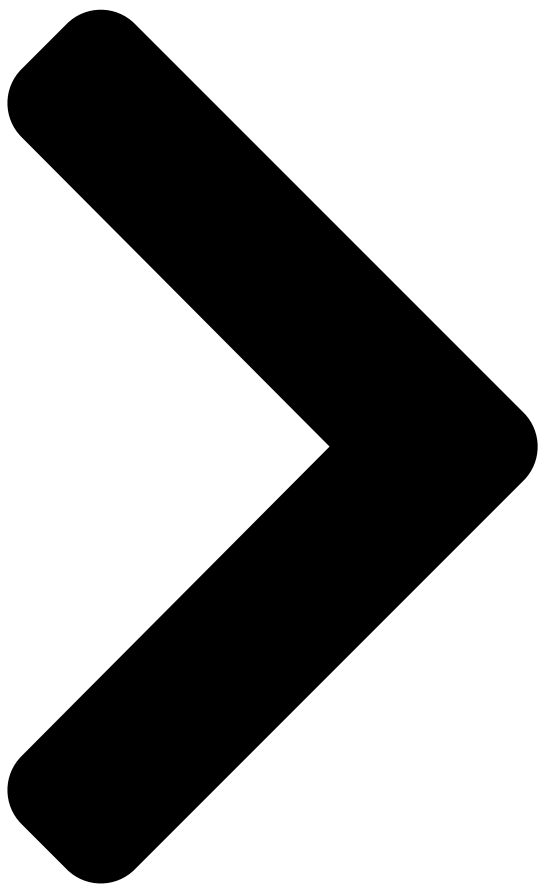

# Blu-ray Disc™ / DVD Player

## Owner's Manual

INSTRUCCIONES SIMPLIFICADAS  
INCLUIDOS EN ESPAÑOL.

**FWBP507FF / FWBP505F Q**

To obtain a more detailed electronic copy of this manual or much further contents, go to

The image shows the partial logo for Samsung, consisting of the letters 'SA' in a bold, black, sans-serif font.

Para obtener una copia electrónica más detallada de este manual o mucho otras contenido, visite

**Need help?**

Please call toll free

¿Necesita ayuda?



**www.sanyo-av.com**

**1 866 212 0436**

Llame por favor sin costo al 1 866 212 0436 ó visite nuestro sitio web en:

or visit our web site above:

[Table of Contents](#)

[Next Page](#)

1  
2  
3  
4  
5

## Related Manuals for Sanyo FWBP507FF

[Blu-ray Player Sanyo FWBP505F Setup Manual](#)

(2 pages)

[Blu-ray Player Sanyo FWBP706F Owner's Manual](#)

(72 pages)

[Blu-ray Player Sanyo FWBP706F Quick Start Manual](#)

With built-in wi-fi (2 pages)

[Blu-ray Player Sanyo FWBP706F Setup Manual](#)

(2 pages)

[Blu-ray Player Sanyo FWBP807FP Quick Start Manual](#)

(2 pages)

[Blu-ray Player Sanyo FWBP808F A Owner's Manual](#)

4k ultra hd blu-ray player (64 pages)

[Blu-ray Player Sanyo FWBP506FF Owner's Manual](#)

(54 pages)

[Blu-ray Player Sanyo FWBP706FA Owner's Manual](#)

Blu-ray disc & dvd player with built-in wi-fi (74 pages)

## Summary of Contents for Sanyo FWBP507FF

[Page 1](#) Owner's Manual INSTRUCCIONES SIMPLIFICADAS INCLUIDOS EN ESPAÑOL. FWBP507FF / FWBP505F Q To obtain a more detailed electronic copy of this manual or much further contents, go to Para obtener una copia electrónica más detallada de este manual o mucho otras contenido, visite [www.sanyo-av.com](http://www.sanyo-av.com)...

### [Page 2: Table Of Contents](#)

CONTENTS INTRODUCTION .....3 LIST OF SETTINGS .....33 Safety instructions .....3  
SETUPS .....37 Included accessories .....4 HDMI CEC .....37 FEATURES .....5  
HDMI video resolution .....38 Features .....5 Parental control .....40 System  
information .....6 Software update .....42 Symbols used in this owner's manual .....6  
Voice guide .....43 Restore default settings .....43 FUNCTIONAL OVERVIEW .....7...

### [Page 3: Introduction](#)

Register Online at [www.sanyo-av.com/support/](http://www.sanyo-av.com/support/) today to get the most benefits from your purchase. Registering your model with SANYO makes you eligible for all of the valuable benefits such as software upgrades and important product notifications. Register Online at [www.sanyo-av.com/support/](http://www.sanyo-av.com/support/) 1. INTRODUCTION 1.1.

### [Page 4: Included Accessories](#)

• Remote control (NC092UH or NC092UL) • Quick Start Guide SANYO is a registered trademark of SANYO Electric Co., Ltd. and is used by Funai Electric Co., Ltd. and Funai Corporation, Inc. under license from SANYO Electric Co., Ltd. Any liability related to SANYO products, including design and quality, is the sole responsibility of Funai Electric Co., Ltd.

### [Page 5: Features](#)

2. FEATURES 2.1. Features Blu-ray Disc™ Pop menu You can enjoy Blu-ray Disc™ which is capable of Some BD-Videos have a pop menu which is a navigation menu that can be called up and be operated storing five times more data than a conventional DVD. on the TV screen without interrupting playback.

## [Page 6: System Information](#)

"System Information" screen provides information about this unit's software version. You can also download the latest software from the SANYO website and update it yourself if it is newer than the version currently on your unit. The current version of software on your unit can be seen on the "System Information"...

## [Page 7: Functional Overview](#)

3. FUNCTIONAL OVERVIEW 3.1. Front panel 3\* 4\* 5\* 6 \* The unit can also be turned on by pressing this button. 1. Disc tray (POWER) button\* 2. Infrared sensor window 6. Power-on indicator (OPEN/CLOSE) button\* 7. USB input (PLAY/PAUSE) button\* • Press to start playback.

## [Page 8: Remote Control](#)

3.3. Remote control (SKIP) button • During playback, press once to return to the beginning of the current title, chapter, track or file. • During playback, press twice to return to the previous title, chapter, track or file. • During the JPEG playback, press to return to the previous file.

[Page 9](#) Note C Using the remote control • Use the included remote control. Remote-control Remote control usage guidelines: operation on any other remote control, such as a • Make sure that there are no obstacles between the universal remote control, is not guaranteed. remote control and the infrared sensor window on the unit.

## [Page 10: Guide To On-Screen Display](#)

3.4. Guide to on-screen display C Home menu When you turn on the unit, home menu will appear automatically. Otherwise, press [HOME]. Disc Setup 1. "Disc": Initiates playback of inserted disc, displays a list of tracks / files. 2. "USB": Displays a list of tracks / files on the connected USB memory stick.

## [Page 11: Connections](#)

4. CONNECTIONS 4.1. Connection to a TV C HDMI connection (supports up to 1080i , 1080p , 1080p/24 resolution.) Your TV HDMI cable (not included) HDMI OUT HDMI IN (\*1) 1080i: Outputs video data with a frame rate of 30 frames per second. (\*2) 1080p: Outputs video data with a frame rate of 60 frames per second.

## [Page 12: Connection To An Audio System](#)

4.2. Connection to an audio system • When you change the connections, all devices should be turned off. • When connecting the unit to an external audio system, refer to the user manual for setup / configuration help. C HDMI audio connection AV receiver/amplifier with an HDMI input jack HDMI IN...

## [Page 13: Hdmi Audio Output](#)

4.3. HDMI audio output "HDMI" > "HDMI" setting Bitstream Re-encode Media Source Dolby Digital Dolby Digital 2ch PCM Dolby Digital Dolby Digital Plus Dolby Digital Plus 2ch PCM Dolby Digital Plus (\*1) Dolby TrueHD Dolby TrueHD 2ch PCM Dolby TrueHD (\*1) 2ch PCM DTS-HD...

## [Page 14: Before You Start](#)

5. BEFORE YOU START 5.1. Finding a viewing HDMI input on your TV After you have completed all of the connections to your TV, review the steps below. 1. Press [ (POWER)] to turn on the unit. 2. Turn on your TV. 3.

[Page 15](#) C How to reset the OSD language You can reset the OSD language if you selected the wrong Language. 1. Press [HOME] to display the home menu. 2. Use [ ] to select " ", then press [OK]. • This item is "Setup" (English) / "Instalación" (Spanish) / "Installation" (French). • From here on, please select one of the following items you can find on screen: 3.

## [Page 16: Information On Playback](#)

6. INFORMATION ON PLAYBACK 6.1. Information on playback C Playable discs and files Playable discs Logos Blu-ray Disc™ - BD-Video - BD-RE\* (ver. 2.1) (Recorded in BDMV format) - BD-R\* (ver. 1.1 / 1.2 / 1.3) (Recorded in BDMV format) (Unfinalized disc may not be played back.) DVD-Video DVD-RW...



[Page 17](#) C Recommended specifications AVCHD This unit cannot play back stand-alone AVCHD files (\*.m2ts, \*.mts or \*.m2t) written to a DVD or copied to an SD memory card. The DVD or SD memory card containing AVCHD files must have a proper file and folder structure meeting AVCHD format specifications.

[Page 18](#) C Unplayable media and files The following discs will not be played back on this unit.

- CD-ROM • CD-I (compact disc-interactive) • DVD-RAM • VSD (video single disc) • DVD-audio • video CD • HD DVD • SVCD • SDXC memory card • microSDXC memory card • unfinalized disc • BD-RE (ver.

## [Page 19: Guide To File List](#)

C Description for icons ] : Folder icon ] : Music file icon ] : Photo file icon - “Folders” refers to the group of files. - “Track” refers to the contents recorded on the Audio CD. - “Files” refers to the contents on a disc which are recorded in AVCHD or JPEG / PNG / FLAC / WAV file format. Note • Unrecognizable characters will not be displayed.

## [Page 20: How To Insert A Disc](#)

6.3. How to insert a disc 1. Press [ (OPEN/CLOSE)] to open the disc tray. 2. Place the disc on the disc tray with its label side facing up. 3. Press [ (OPEN/CLOSE)] to close the disc tray. • It may take a while to load the disc. Align the disc to the disc tray guide.

## [Page 21: Basic Playback](#)

7. BASIC PLAYBACK 7.1. Playing back a disc PHOTO PHOTO MUSIC MUSIC [DVD Video] [BD Video] AVCHD AVCHD [AVCHD] [JPEG] [CD] [MUSIC] FILE FILE FILE FILE VIDEO VIDEO VIDEO 1. Insert a disc (refer to “How to insert a disc” on page 20). • When the disc is BD / DVD / AVCHD / Audio CD, playback starts automatically.

## [Page 22: Playing Back Contents From A Usb Memory Stick](#)

C Resume-on-stop mode Blu-ray Disc™ / DVD / AVCHD When you press [OK] next time, playback will start from the point where it had been stopped. If you press [RETURN] instead of [OK], playback will start from the beginning. Audio CD Playback will start from the point where it was stopped next time you press [OK].

## [Page 23: Using The Title / Disc / Pop Menu](#)

7.3. Using the title / disc / pop menu [DVD Video] [BD Video] AVCHD AVCHD [AVCHD] VIDEO VIDEO VIDEO VIDEO Some BD-Videos, DVD-Videos or AVCHD files may contain a title menu which describes the contents of the disc, or a disc menu which guides you through the available functions on the disc. • With such discs, a title menu or a disc menu may appear automatically when you insert the disc.

## [Page 24: Special Playback](#)

8. SPECIAL PLAYBACK 8.1. Fast forward / fast reverse MUSIC MUSIC [DVD Video] [BD Video] AVCHD AVCHD [AVCHD] [CD] [MUSIC] FILE FILE VIDEO VIDEO VIDEO VIDEO 1. During playback, press [ (FORWARD)] repeatedly for fast forward. During playback, press [ (REVERSE)] repeatedly for fast reverse.

## [Page 25: Repeat Playback](#)

8.4. Repeat playback Available repeat functions vary depending on the disc. 1. During playback, press [REPEAT]. 2. Use [ ] to select the desired repeat mode. • You can also change the repeat mode by pressing [REPEAT] repeatedly. REPEAT MODE AVAILABLE MEDIA Chapter repeat [DVD Video]...

## [Page 26: Slide Show](#)

8.6. Slide show PHOTO PHOTO [JPEG] FILE FILE 1. Follow steps 1 and 2 in “Playing back a disc” on page 21. 2. Open the folder which contains the desired photo files. 3. Use [ ] to select a desired file to be played back, then press [ (PLAY)] (or [ (PLAY/PAUSE)] on the unit) or [OK].

## [Page 27: Pip \(Bonusview™\) Setting](#)

8.7. PIP (BONUSVIEW™) setting [BD Video] VIDEO VIDEO Some BD-Videos have the PiP function which enables you to display the secondary video in the primary video. 1. During playback, press [MODE] to display the play menu. 2. Use [ ] to select “PiP” then press [OK]. • PiP

information will appear.

### [Page 28: Title / Chapter Search](#)

8.8. Title / chapter search [DVD Video] [BD Video] AVCHD AVCHD [AVCHD] VIDEO VIDEO VIDEO VIDEO C Using [ (SKIP BACK/DOWN)] / [ (SKIP FORWARD/UP)] 1. During playback, press [ (SKIP FORWARD/UP)] to skip the current title or chapter and move to the next. The title or chapter will move forward one at a time.

### [Page 29: Time Search](#)

8.10. Time search MUSIC MUSIC [DVD Video] [BD Video] AVCHD AVCHD [AVCHD] [CD] [MUSIC] FILE FILE VIDEO VIDEO VIDEO VIDEO 1. During playback, press [SEARCH] to display the search menu. 2. Use [ ] to select Time Search, then press [OK]. • Blu-ray Disc™...

### [Page 30: Switching Subtitles](#)

8.12. Switching subtitles Some Video materials may have subtitles in one or more languages. For commercially available discs, the supported languages can be found on the disc case. Follow the steps below to switch the subtitle language during playback. [DVD Video] [BD Video] AVCHD AVCHD...

### [Page 31: Switching Audio Soundtrack](#)

8.13. Switching audio soundtrack When playing back video material recorded with two or more soundtracks (these are often in different audio languages or audio formats), you can switch between them during playback. [DVD Video] [BD Video] AVCHD AVCHD [AVCHD] VIDEO VIDEO VIDEO VIDEO...

### [Page 32: Switching Camera Angles](#)

8.14. Switching camera angles [DVD Video] [BD Video] VIDEO VIDEO VIDEO VIDEO Some BD-Videos and DVD-Videos contain scenes which have been shot simultaneously from various angles. You can change the camera angle when appears on the TV screen. 1. During playback, press [MODE] to display the play menu. 2.

### [Page 33: List Of Settings](#)

9. LIST OF SETTINGS In "Setup", you can customize various kinds of settings as you prefer. Refer to the following instructions to navigate through the setup menu. 1. Press [HOME] to access the home menu. 2. Use [ ] to select "Setup", then press [OK]. 3.

[Page 34](#) Settings Category Menus / Options Display Setting TV Screen 16:9 Full 4:3 Pan&Scan 16:9 Normal 4:3 Letterbox Resolution Auto 1080i 480p 1080p 720p HDMI 1080p 24Hz Picture Control Noise Reduction Medium High Angle Mark Closed Caption CC Attribute Auto Custom Font color Default Yellow...

[Page 35](#) Settings Category Menus / Options Display Setting Closed Caption Font style Default Monospaced with serifs Proportionally spaced with serifs Monospaced without serifs Proportionally spaced without serifs Casual font type Cursive font type Small capitals Font opacity Solid Translucent Transparent Font edge Default Uniform None...

[Page 36](#) Settings Category Menus / Options Audio Setting Voice Guide Voice Guide Voice Guide Volume Loud Medium Soft Voice Guide Speed Fast Normal Slow Voice Guide Pitch High Medium Voice Guide Detailed Verbosity Basic Audio Output HDMI Bitstream Re-encode Dolby DRC Auto System Information...

### [Page 37: Setups](#)

10. SETUPS 10.1. HDMI CEC HOME A "Setup" A " " A "System" A "HDMI CEC" HDMI CEC allows integrated system control over HDMI and is part of the HDMI standard. This function may not work properly depending on the device connected to the unit. When "HDMI CEC" setting is set to "On" the functions listed below will be available.

### [Page 38: Hdmi Video Resolution](#)

10.2. HDMI video resolution HOME A "Setup" A " " A "TV" A "Resolution" Sets the resolution of the video signal output from the HDMI OUT jack. C Set up resolution 1. Use [ ] to select "Setup"

in the home menu, then press [OK]. 2.

[Page 39](#) Note • The selected resolution must also be supported by your display device. • If your TV and the unit are connected by a DVI cable and if “Auto” is selected, “480p” will be automatically in effect. Refer also to your TV’s manual. • When connected to an HDCP incompatible display device, the picture will not be displayed properly.

### [Page 40: Parental Control](#)

10.3. Parental control Some BD-Videos or DVD-Videos feature parental lock levels. playback will stop if the ratings of the content exceed the levels you set on the player, it will require you to enter a password before the disc will play back. This feature prevents your children from viewing inappropriate material.

[Page 41](#) C BD / DVD rating level HOME A “Setup” A “ ” A “Security” A “Parental Control” 1. Use [ ] to select “Setup” in the home menu, then press [OK]. 2. Use [ ] to select “ ” , then press [OK]. 3.

### [Page 42: Software Update](#)

Prepare a blank disc or USB memory stick for software update: Navigate to [www.sanyo-av.com](http://www.sanyo-av.com) website, and download the latest software version to a blank disc or USB memory stick using a PC by following the directions described on the website.

### [Page 43: Voice Guide](#)

10.5. Voice guide HOME A “Setup” A “ ” A “Voice Guide” Menus to configure various settings for the voice guide function. 1. Use [ ] to select “Setup” in the home menu, then press [OK]. 2. Use [ ] to select “ ” , then press [OK].

### [Page 44: Troubleshooting](#)

11. TROUBLESHOOTING Problem Tip No power. Check if the AC power cord is properly connected. Try another power outlet. Unplug the AC power cord, and wait for about 5-10 seconds. Plug it back in and attempt to power on the unit. No sound or picture.

[Page 45](#) Problem Tip A music/photo file does not play. Confirm that the file type is supported. Refer to page 17 for the compatible file extensions. The file may be corrupted. Check to see if it is playable on a PC or other devices. No return to start-up screen when Soft Reset this unit by turning it off for 30 seconds, then on again.

[Page 46](#) Problem Tip Cannot read a USB memory stick. The format of the USB memory stick is not compatible with this unit. If the USB memory stick has been formatted on a PC or another device, the file system may be incompatible with this unit. This unit supports the FAT16 / FAT32 file systems.

### [Page 47: Specifications](#)

12. SPECIFICATIONS General Signal system NTSC Color Power requirements 120 V AC, 60 Hz Power consumption 15 W (standby: 0.5 W) Dimensions (width x height x depth) 11.1 x 1.7 x 7.9 inches (280.0 x 41.0 x 198.5 mm) Weight 2.2 lbs.

### [Page 48: Maintenance](#)

• If this unit becomes inoperative, do not try to correct the problem by yourself. There are no user-serviceable parts inside. Eject the disc (if possible), disconnect the USB memory stick (if connected to the unit), place the unit into standby mode, unplug the AC power cord, and please contact: 1-866-212-0436 or visit : [www.sanyo-av.com](http://www.sanyo-av.com) C Cleaning the cabinet • Wipe the front panel and other exterior surfaces of the unit with a soft cloth.

### [Page 49: Trademark Information](#)

14. TRADEMARK INFORMATION “Blu-ray Disc™”, “Blu-ray” and “Blu-ray Disc™” logo are trademarks of the Blu-ray Disc Association. “x.v.Color” and “x.v.Color” logo are trademarks of Sony Corporation. “BONUSVIEW™” and “BONUSVIEW™” logo are trademarks of the Blu-ray Disc Association. is a trademark of DVD Format/Logo Licensing Corporation.

[Page 50](#) THIS PRODUCT IS LICENSED UNDER THE AVC PATENT PORTFOLIO LICENSE FOR THE

PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER TO (i) ENCODE VIDEO IN COMPLIANCE WITH THE AVC STANDARD ("AVC VIDEO") AND/OR (ii) DECODE AVC VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NON-COMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE AVC VIDEO.

### [Page 51: Glossary](#)

15. GLOSSARY AAC S Cinavia™ Advanced Access Content System (AAC S) is the Cinavia Notice content protection scheme used with Blu-ray™ discs. This product uses Cinavia technology to limit the use of unauthorized copies of some commercially- Analog Audio produced film and videos and their soundtracks. When An electrical signal that directly represents sound.

[Page 52](#) Dolby Audio - Dolby Digital Local Storage The system to compress digital sound developed by A storage area of sub contents for playing virtual Dolby Laboratories. It offers you stereo sound (2ch) or packages on BD-Video. multi-channel audio. PCM (Pulse Code Modulation) Dolby Audio - Dolby Digital Plus The most common system of encoding digital audio, Dolby Digital Plus is the next generation digital audio...

### [Page 53: Limited Warranty](#)

Contact the Customer Care Center at: Replacement product can only be sent if all warranty requirements are met. Failure to follow all requirements can www.sanyo-av.com result in delay. 1 866 212 0436 WHAT IS NOT COVERED - EXCLUSIONS AND LIMITATIONS:...

### [Page 54: Español](#)

16. ESPAÑOL 16.1. Mando a distancia 6. Botón (REPRODUCIR)\* • Púlselo para iniciar o reanudar la reproducción. 7. Botón (SALTAR) • Durante la reproducción, púlselo una vez para volver al comienzo del título, capítulo, pista o archivo actual. • Durante la reproducción, pulse dos veces sobre la tecla para volver al título, capítulo, pista o archivo anterior.

### [Page 55: Encontrar El Hdmi En Su Televisor](#)

20. Botón AUDIO • Púlselo para seleccionar el canal de sonido (como idiomas de sonido) de un disco. 21. Botón SUBTITLE • Púlselo para seleccionar los subtítulos de un disco. Nota • Use el control remoto incluido. No se garantiza la operación de control remoto en cualquier otro control remoto, tal como un control remoto universal.

### [Page 56: Instalacion Inicial](#)

16.3. Instalacion inicial Por favor, siga las instrucciones que se exponen a continuacion para completar la configuracion inicial. 1. Mientras se muestra la pantalla de bienvenida, presione [OK]. 2. Aparece la pantalla de configuracion del idioma. Utilice [ ] para seleccionar su idioma y pulse luego [OK]. Page: 1/3 Easy Setup Language Setting...

### [Page 57: Garantía Limitada](#)

PARA OBTENER AYUDA... limitada de noventa (90) días. Comuníquese con el Centro de Atención al Cliente al: www.sanyo-av.com El producto de reemplazo sólo se puede enviar si se cumplen todos los requisitos de la garantía. El incumplimiento de tales requisitos 1 866 212 0436 puede ocasionar un retardo.

This manual is also suitable for:

[Fwbp505f q](#)