



Toshiba 32WD2A63DB Quick Start Manual

1	
2	
3	
4	
5	
6	
7	
8	
9	
10	
11	
12	
13	
14	
15	
16	
Table Of Contents	
17	

--	--

•

[Table of Contents](#)

•

Bookmarks

--

[Download this manual](#)

Quick Links



32WD2A63DB

QUICK START GUIDE

TOSHIBA

Please visit www.toshiba-tv.com to download the full user manual.



[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba 32WD2A63DB

[Smart TV Toshiba 46TL933F How To Upgrade The Software](#)

(4 pages)

[Smart TV Toshiba 32WK3A63DB Quick Start Manual](#)

(12 pages)

[Smart TV Toshiba 32WK3C63DB Quick Start Manual](#)

(13 pages)

[Smart TV Toshiba 43 UF3D Series Quick Start Manual](#)

(113 pages)

[Smart TV Toshiba 24WK3C63DB Quick Start Manual](#)

(13 pages)

[Smart TV Toshiba 24W3163DB Quick Start Manual](#)

(12 pages)

[Smart TV Toshiba 32L2163DB Quick Start Manual](#)

(12 pages)

[Smart TV Toshiba 32WL3C63DB Quick Start Manual](#)

(12 pages)

[Smart TV Toshiba 43LL3C63DB Quick Start Manual](#)

(13 pages)

Summary of Contents for Toshiba 32WD2A63DB

[Page 1](#) 32WD2A63DB QUICK START GUIDE Please visit www.toshiba-tv.com to download the full user manual.

[Page 3: Inserting The Batteries Into The Remote](#)

Building and fitting stand Inserting the batteries into the remote Remove the back cover to reveal the battery compartment. Insert two size AAA batteries. Make sure the (+) and (-) signs match (observe correct polarity). Do not mix old and new batteries. Replace only with same or equivalent type.

[Page 4: Switching On The Tv](#)

Connections Antenna External Devices Connect the antenna cable/s to your TV. PLEASE ENSURE BOTH UNITS ARE SWITCHED OFF BEFORE CONNECTING satellite Use the proper cable to connect two units together. dish To select the desired input source, press the Source rear side of the TV button on the remote control.

[Page 5: Remote Control](#)

Settings menu, select Manuals and press OK. For quick access to E-Manual press Menu “ ” button and then Info “ ” button. You can also review your TV user manual online or download as you like. Scan this QR code or visit <https://toshiba-tv.com/uk-uk/support> English - 3 -...

[Page 6: Accessories Included](#)

- Do not expose the TV to direct sunlight or do and control refer to the full manual on our the website at not place open flames such as lit candles on <https://toshiba-tv.com/uk-uk/support> the top of or near the TV. English - 4 -...

Page 7: Markings On The Product

- Do not place any heat sources such as electric heaters, radiators, etc. near the TV set.
- Do not place the TV on the floor and inclined WARNING surfaces. Do not ingest the battery, Chemical Burn Hazard
- To avoid danger of suffocation, keep plastic bags This product or the accessories supplied with the out of the reach of the babies, children and domestic product may contain a coin/button cell battery.

Page 8 Using the special functions to change the size of the YouTube and the YouTube logo are trademarks of displayed image (i.e. changing the height/width ratio) Google Inc. for the purposes of public display or commercial gain For DTS patents, see <http://patents.dts.com>. may infringe on copyright laws.

Page 9: Wireless Lan Transmitter Specifications

Corporation, and is intended for home and other Specification limited viewing uses only unless otherwise authorized by Rovi Corporation. Reverse engineering and PAL BG/I/DK disassembly are prohibited. TV Broadcasting SECAM BG/DK The "CI Plus" Logo is a trademark of CI Plus LLP. VHF (BAND I/III) - UHF Receiving Channels This product is protected by certain intellectual...

Page 10: Reach Information

1 June 2007. The crossed out wheeled dust bin symbol indicates that products must be collected and Toshiba will meet all REACH requirements and disposed of separately from household waste. is committed to provide our customers with Integrated batteries and accumulators can information about the presence in our articles of be disposed of with the product.

Page 11 Product Fiche Commercial Brand: TOSHIBA Model No. 32WD2A63DB Energy efficiency class Visible screen size 32 inches 80 cm (diagonal,approx.) (inch/cm) On mode average power 31.0 W consumption (Watt) Annual energy consumption 45.0 kWh (kWh/annum)(*) Standby power consumption 0.50 W (Watt)