

TOSHIBA

Toshiba COLOR STREAM 15DL15 Owner's Manual

Lcd color television

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

Table Of Contents

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37

--

•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks

--

[Download this manual](#)

Quick Links



Test Report No.: GETEC-E3-05-028

FCC Class B Certification

APPENDIX H

: USER'S MANUAL

EUT Type: 15" LCD TV/Monitor

FCC ID: BEJT15DL15A

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba COLOR STREAM 15DL15

[LCD TV Toshiba 15DL15 Service Manual](#)

Lcd color television (76 pages)

[LCD TV Toshiba T20DL75A Owner's Manual](#)

Lcd color television (37 pages)

[LCD TV Toshiba 15DL15 Owner's Manual](#)

Toshiba lcd color television owner's manual 15dl15, 20dl15 (36 pages)

[LCD TV Toshiba 20DL75 Owner's Manual](#)

Lcd color television (36 pages)

[LCD TV Toshiba 15DL75 Owner's Manual](#)

Lcd color television (36 pages)

[LCD TV Toshiba 20DL75 Specifications](#)

Signature series 20" lcd television (2 pages)

[LCD TV Toshiba 15DLV76 Service Manual](#)

15-inch diagonal lcd tv/dvd combination (34 pages)

[LCD TV Toshiba 15DL72 Service Manual](#)

(57 pages)

[LCD TV Toshiba 15VL56B Owner's Manual](#)

Lcd colour tv (36 pages)

[LCD TV Toshiba 15VL56B Service Manual](#)

Lcd color television toshiba 15vl56b; 20vl56b; 20vl56g (77 pages)

[LCD TV Toshiba 15VL63 Series Owner's Manual](#)

Toshiba television owner's manual (27 pages)

[LCD TV Toshiba 15DV703R Service Manual](#)

15, 19, 22, 26, 32-inch class lcd tv/dvd combination (93 pages)

[LCD TV Toshiba 15CL7A Owner's Manual](#)

Lcd colour tv (40 pages)

[LCD TV Toshiba 15VL26P Service Manual](#)

(58 pages)

[LCD TV Toshiba 15SLDT1 Manual](#)

Combination 15 lcd tv and dvd video player (40 pages)

[LCD TV Toshiba 19C100U Owner's Manual](#)

(62 pages)

Summary of Contents for Toshiba COLOR STREAM 15DL15

[Page 1](#) Test Report No.: GETEC-E3-05-028 FCC Class B Certification APPENDIX H : USER'S MANUAL EUT Type: 15" LCD TV/Monitor FCC ID: BEJT15DL15A...

[Page 2](#) The model number and serial number are on the back of your TV. Record these numbers in the spaces below. 15DL15 Refer to these numbers whenever you communicate with your Toshiba dealer about this TV. Model number: 20DL75 Serial number:...

[Page 3](#) FCC Declaration of Conformity Compliance Dear Customer, Statement (Part 15): Thank you for purchasing this Toshiba LCD TV. This manual will help you use the many exciting features of your new The Toshiba 15DL15/20DL75 LCD Color Televisions LCD TV. Before

operating the TV, please read this comply with Part 15 of the FCC rules.

[Page 4](#) If the provided plug does not fit into causing unnecessary injury. your outlet, consult an electrician for replacement of the obsolete outlet. Toshiba Cares! 10) Protect the power cord from being The consumer electronics industry walked on or pinched, particularly at...

[Page 5](#) TV. For better performance and safer operation of your TOSHIBA 22) Never block or cover the slots TV, follow these recommendations and precautions: or openings in the TV cabinet back, bottom, and sides.

[Page 6](#) Toshiba Authorized Service Center. there may be an occasional pixel (dot of light) that does not operate properly (that does not light, that remains WARNING: RISK OF constantly lit, etc.).

[Page 7: Table Of Contents](#)

Introduction7 Adjusting the sound26 Muting the sound 26 Welcome to Toshiba7 Selecting stereo/SAP broadcasts26 Supplied accessories7 Using the WOW™ surround sound feature ... 27 Connecting the power cord7 Selecting the audio mode

[Page 8: Introduction](#)

Introduction Welcome to Toshiba Thank you for purchasing this Toshiba LCD TV. The goal of this manual is to guide you through setting up and operating your Toshiba TV as quickly as possible. The model and serial numbers are on the back of your TV. Write these numbers in the space provided on the front cover of this manual for your records.

[Page 9: Exploring Your New Tv](#)

Exploring your new TV You can operate your TV by using the buttons on the top panel or the remote control. The A/V terminals for connecting other equipment to your TV are on the back panel and side panel (see illustrations below). Also see "Connecting your TV"...

[Page 10: Rear Terminal Cover](#)

Rear terminal cover The connection panel is hidden behind the terminal cover. 1. Remove the cover. Release the two hooks on the bottom of the cover. 2. Install cables as necessary. 3. Reinstall the cover. Align the holes on the TV back with the three tabs on the rear terminal cover as shown.

[Page 11: Connecting Your Tv](#)

Component video cables video devices with component video output. These cables are typically color-coded red, green, and blue. (ColorStream ® is Toshiba's brand of component video.) Separate audio cables are required for a complete connection. Mini D-sub 15-pin cable Note: Component video cables provide better picture performance than a standard (composite) video or S-video cable.

[Page 12: Connecting A Vcr](#)

Connecting a VCR This connection allows you to watch local channels and video Note: programs, play or record on the VCR while watching TV, and record If you have a mono VCR, connect L/Mono to from one channel while watching another channel. VCR Audio OUT using only one audio cable.

[Page 13: Connecting A Dvd Player With Colorstream \(Component Video\) And A Vcr](#)

® Connecting a DVD player with ColorStream (component video) and a VCR This connection allows you to watch DVD, VCR, and TV programs, Note: and record TV programs. For the highest possible picture quality, use component video cables between the TV and ®...

[Page 14: Connecting A Dtv Receiver/Set-Top Box With Colorstream \(Component Video\) And A Vcr](#)

Connecting a DTV receiver/set-top box with ® ColorStream (component video) and a VCR This connection allows you to watch DTV (digital TV), VCR, and Note: TV programs, and record DTV

(composite video only) and TV For the highest possible picture quality, use programs.

[Page 15: Connecting An Audio System](#)

Connecting an audio system This connection allows you to hear the TV sound through external speakers connected to an audio amplifier. The audio signal level Set the TV's volume to the minimum level if necessary. (fixed) is not affected by pressing the volume buttons on the TV or the TV's remote control.

[Page 16: Connecting A Personal Computer \(Pc\)](#)

Connecting a personal computer (PC) This connection allows you to see the image of the personal computer Note: on the TV screen. When connecting a personal computer to the TV, • Some PC models cannot be connected to use an analog RGB (15pin) computer cable and an audio cable for this TV.

[Page 17: Using The Remote Control](#)

Using the remote control MUTE POWER Learning about the remote control TV/VIDEO RECALL turns the TV on and off (Standby) POWER mutes the sound (page 26) MUTE displays on-screen information (page 30) RECALL switches Stereo or SAP sound (page 26) selects the video input source (page 20) TV/VIDEO allow direct access to channels (page 20)

[Page 18: Setting Up Your Tv](#)

Setting up your TV Learning about the menu system After you have installed the batteries, you will need to set some preferences on the TV by using the menu system. You can access the menu system using the buttons on your TV or the remote control. 1.

[Page 19: Changing The On-Screen Display Language](#)

Changing the on-screen display language You can choose from three different languages (English, French and Spanish) for the on-screen display of adjustment menus and messages. To select a language: 1. Press MENU, and then press x or • until the Special menu CH RTN appears.

[Page 20: Adding And Erasing Channels Manually](#)

Adding and erasing channels manually After you have automatically programmed the active channels into TV top panel the TV's channel memory, you can manually add or erase specific channels. TV/VIDEO VOLUME CHANNEL POWER To add or erase channels: 1. Press MENU, and then press x or • until the Channel menu appears.

[Page 21: Using The Tv's Features](#)

Using the TV's features Switching between two channels using Channel Return The Channel Return feature allows you to switch between two channels without entering an actual channel number each time. MUTE POWER To switch between two channels: TV/VIDEO TV/VIDEO RECALL 1.

[Page 22: Using The V-Chip Menu](#)

Using the V-Chip menu Note: Some TV programs and movies include signals that classify the The V-Chip function is available for the U.S. content of the program (violence, sex, dialog, language). The V-Chip V-Chip system only. The Canadian V-Chip control feature in this TV detects the signals and blocks the programs system is not supported.

[Page 23: V-Chip \(Parental Menu\) Setup](#)

V-Chip (Parental menu) setup 1. Press MENU, and then press x or • until the Special menu appears. MUTE POWER 2. Press ENTER, and then press y or z to highlight V-Chip. TV/VIDEO RECALL Press ENTER. Special Special Language Language Caption/Text Caption/Text Number...

[Page 24: Adjusting The Picture](#)

Adjusting the picture Selecting the picture mode You can select your desired picture type from four picture modes: Note: Dynamic, Standard, Movie, or Memory. If you select one of the factory-set picture modes (Dynamic, Standard, or Movie) and Mode Picture Quality then adjust a picture quality setting (for example, increase the contrast), the picture Dynamic...

[Page 25: Using The Closed Caption Feature](#)

Using the closed caption feature The closed caption feature has two options: • Captions—An on-screen display of the dialogue, narration, and MUTE POWER sound effects of TV programs and videos that are closed TV/VIDEO RECALL captioned (usually marked as “CC” in TV listings). •...

[Page 26: To Turn On Or Off The Closed Caption Feature](#)

To turn on or off the Closed Caption feature 1. Press MENU, and then press x or • to display the Special menu. 2. Press ENTER, and then press y or z to highlight Captions. 3. Press ENTER, and then press y or z to select On, Advanced Mute or Off.

[Page 27: Adjusting The Sound](#)

Adjusting the sound Muting the sound Press MUTE to temporarily turn off the sound. While the sound is MUTE off, the screen will display “ Mute” in the lower left corner. MUTE POWER When you select “MUTE” mode, the closed caption feature is RECALL TV/VIDEO RECALL...

[Page 28: Using The Wow™ Surround Sound Feature](#)

Using the WOW™ surround sound feature WOW surround widens and deepens audio listening field to deliver Note: exceptional sound from the TV's speakers. The feature uses stereo If the broadcast is monaural, the WOW sound signals from a TV broadcast or video input. effect will not work.

[Page 29: Adjusting The Sound Quality](#)

Adjusting the sound quality You can change the quality of your TV's sound by adjusting the bass, Note: treble, and balance. If you continue to adjust the other item, press y or z in step 4. To adjust the sound quality: 1.

[Page 30: Using The Pc Setting Feature](#)

Using the PC setting feature TV top panel You can adjust the horizontal/vertical picture position, clock (to minimize vertical stripes on the screen), and phase (to remove horizontal noise and sharpen the picture). TV/VIDEO VOLUME CHANNEL POWER You can auto-configure and reset these settings. 1.

[Page 31: Using The Auto Off Feature](#)

Using the Auto off feature With the Auto off feature On, the TV will automatically turn itself off after approximately 15 minutes if it is tuned to a vacant channel or a MUTE POWER station that completes its broadcast for the day. This feature does not work in the blue screen off mode.

[Page 32: Appendix](#)

WARNING: RISK OF ELECTRIC SHOCK ! Never attempt to service the TV yourself. Opening and removing the covers may expose you to dangerous voltage or other hazards. Refer all servicing to a Toshiba Authorized Service Center. Television System Dimensions (Including TV stand)

[Page 33: Troubleshooting](#)

Troubleshooting Before calling a service technician, please check the following table for a possible cause of the symptom and some solutions. Symptom Solution TV will not turn on • Make sure the power cord is plugged in, then press POWER. •...

[Page 34: Limited United States Warranty](#)

Limited United States Warranty for LCD Televisions, 20" and smaller Toshiba America Consumer Products, L.L.C. (“TACP”) makes the (5) Warranties extend only to defects in materials or following limited warranties to original consumers in the United workmanship as limited above, and do not extend to any States.

[Page 35: Limited Canada Warranty](#)

Limited Canada Warranty for LCD Televisions, 32" and smaller Toshiba Canada Limited, (“TCL”) makes the following limited systems are not covered by this warranty. Reception warranties to original consumers in Canada. THESE LIMITED problems caused by inadequate antenna systems, WARRANTIES EXTEND TO THE ORIGINAL CONSUMER...

[Page 36: Index](#)

Index S-video cables10 Antenna cables10 SAP sound26 Audio
mode selection31 Set-top box13 Audio system connection14 Sleep
timer25 Auto off30 Sound quality adjustments28 A/V cables
.....10 Specifications31 Back of the TV

[Page 37](#) TORONTO: 191 McNABB STREET MARKHAM, ONTARIO L3R 8H2, CANADA TEL: (905)
470-5400 MONTREAL: 18050 TRANS CANADA, KIRKLAND, QUEBEC, H9J-4A1, CANADA
TEL:(514)390-7766 VANCOUVER: 22171 FRASERWOOD WAY, RICHMOND, B.C. V6W 1J5,
CANADA TEL: (604) 303-2500 ColorStream and StableSound are registered trademarks of
Toshiba America Consumer Products, L.L.C.

This manual is also suitable for:

[Color stream 20dl75](#)