

TOSHIBA

Toshiba MV9DM2 Service Manual

Color television/ video cassette recorder

1

2

3

Table Of Contents

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

--	--

•

•

Bookmarks

--

[Download this manual](#)

Quick Links



All manuals and user guides at all-guides.com

FILE NO. 140-200203

TOSHIBA
SERVICE MANUAL

COLOR TELEVISION/

VIDEO CASSETTE RECORDER



MV9DM2 TOSHIBA

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba MV9DM2

[Toshiba MV9DM2 Service Manual](#)

Color television/video cassette recorder (68 pages)

[TV VCR Combo Toshiba MV 9DM2 Specifications](#)

Combination television/vcr (2 pages)

[TV Toshiba MV9KD1 Service Manual](#)

Color television/video cassette recorder (68 pages)

[TV Toshiba MV13N2 Service Manual](#)

Color television/ video cassette recorder (66 pages)

[TV Toshiba MV13K2 Service Manual](#)

Color television/ video cassette recorder (70 pages)

[TV Toshiba MV19K2 Service Manual](#)

Color television/video cassette recorder (71 pages)

[TV Toshiba MV14FM4 Service Manual](#)

Color television/ video cassette recorder (81 pages)

[TV Toshiba MV13N2W Service Manual](#)

Color television/video cassette recorder (64 pages)

[TV Toshiba MV13L3 Service Manual](#)

Color television/ video cassette recorder (46 pages)

[TV Toshiba MV13K1WR Service Manual](#)

Color television/ video cassette recorder (63 pages)

[TV Toshiba MV13L2W Manual](#)

Color television/video cassette recorder (62 pages)

[TV Toshiba MV13L2 Service Manual](#)

Color television/video cassette recorder (62 pages)

[TV Toshiba MV19M4 Service Manual](#)

Color television/video cassette recorder (66 pages)

[TV Toshiba MV19M2 Service Manual](#)

Color television/video cassette recorder (66 pages)

[TV Toshiba MV19L2W Service Manual](#)

Color television/ video cassette recorder (62 pages)

[TV Toshiba MV20FM3 Service Manual](#)

Color television/video cassette recorder (82 pages)

Summary of Contents for Toshiba MV9DM2

[Page 1](#) All manuals and user guides at all-guides.com FILE NO. 140-200203 SERVICE MANUAL COLOR TELEVISION/ VIDEO CASSETTE RECORDER MV9DM2...

[Page 2: Servicing Notices On Checking](#)

All manuals and user guides at all-guides.com SERVICING NOTICES ON CHECKING 1. KEEP THE NOTICES 6. AVOID AN X-RAY As for the places which need special attentions, Safety is secured against an X-ray by consider- they are indicated with the labels or seals on the ing about the cathode-ray tube and the high cabinet, chassis and parts.

[Page 3: Tape Removal Method At No Power Supply](#)

All manuals and user guides at all-guides.com TAPE REMOVAL METHOD AT NO POWER SUPPLY
Remove the VCR block from the main unit. (Refer to item 1 of the DISASSEMBLY INSTRUCTIONS.) Remove the screw 1 of the Deck Chassis and remove the Loading Motor. Rotate the Pinch Roller Cam in the direction of the arrow by hand to slacken the Video Tape.

[Page 4: Table Of Contents](#)

All manuals and user guides at all-guides.com TABLE OF CONTENTS SERVICING NOTICES ON CHECKINGA1-1 HOW TO ORDER PARTSA1-1 TAPE REMOVAL METHOD AT NO POWER SUPPLYA1-2 TABLE OF CONTENTSA2-1 GENERAL SPECIFICATIONSA3-1~A3-5 DISASSEMBLY INSTRUCTIONS 1.

[Page 5: General Specifications](#)

All manuals and user guides at all-guides.com GENERAL SPECIFICATIONS CRT Size / Visual Size 9 inch / 222.8mmV System CRT Type Normal Deflection degree Magnetic Field BV/BH +0.45G / 0.18G Color System NTSC Speaker 1Speaker Position Side Size 3 Inch Impedance Sound Output 10%(Typical)

[Page 6](#) All manuals and user guides at all-guides.com GENERAL SPECIFICATIONS On Screen Menu Display Menu Type Character Timer Rec Set Channel Setup TV/CATV Auto ch Memory Add/Delete Guide ch Set TV Setup V-chip Set On/Off Timer Set Picture Audio Sap On/Off Auto Repeat On/Off On/Off Timer Set System Setup...

[Page 7](#) All manuals and user guides at all-guides.com GENERAL SPECIFICATIONS G-12 Remote Unit RC-DQ Control Glow in Dark Remocon Format Custom Code 40-BF/44-BB h Power Source Voltage(D.C) UM size x pcs UM-4 x 2 pcs Total Keys Keys Keys Power CH Up CH Down Volume Up Volume Down...

[Page 8](#) All manuals and user guides at all-guides.com GENERAL SPECIFICATIONS G-14 Accessories Owner's Manual Language English w/Guarantee Card Remote Control Unit Rod Antenna Poles 2pole Terminal F type w/300 ohm to 75 ohm Antenna Adapter Loop Antenna Terminal U/V Mixer DC Car Cord (Center+) Guarantee Card Warning Sheet Circuit Diagram...

[Page 9](#) All manuals and user guides at all-guides.com GENERAL SPECIFICATIONS G-18 Carton Master Carton Content Material Dimensions W x D x H(mm) Description of Origin Gift Box Material Double/White CORRUGATED Dimensions W x D x H(mm) 338 x 376 x 386 Design As per Buyer's Description of Origin...

[Page 10: Disassembly Instructions](#)

All manuals and user guides at all-guides.com DISASSEMBLY INSTRUCTIONS 1. REMOVAL OF MECHANICAL PARTS 1-3: TV/VCR BLOCK (Refer to Fig. 1-3) Remove the 2 screws 1. AND P.C. BOARDS Disconnect the following connectors: 1-1: BACK CABINET (Refer to Fig. 1-1) (CP353, CP401 and CP403).

[Page 11](#) All manuals and user guides at all-guides.com DISASSEMBLY INSTRUCTIONS 1-5: DECK SHIELD PLATE (Refer to Fig. 1-5) 1-7: JACK PLATE AND SYSCON PCB (Refer to Fig. 1-7) Remove the 2 screws 1. Remove the screw 1. Remove the screw 2. Remove the Syscon PCB in the direction of arrow (A).

[Page 12: Removal Of Deck Parts](#)

All manuals and user guides at all-guides.com DISASSEMBLY INSTRUCTIONS 2. REMOVAL OF DECK PARTS NOTE In case of the Locker R installation, check if the two 2-1: TOP BRACKET (Refer to Fig. 2-1) positions of Fig.2-3-B are correctly locked. Extend the 2 supports 1. When you install the Cassette Side R, be sure to move Slide the 2 supports 2 and remove the Top Bracket.

[Page 13](#) All manuals and user guides at all-guides.com DISASSEMBLY INSTRUCTIONS 2-6: LOADING MOTOR/WORM (Refer to Fig. 2-6-A) Tension Arm Ass'y Remove the screw 1. Remove the Loading Motor. Remove the Worm. Fig. 2-7-A Loading Motor Worm Tension Connect Tension Band Main Chassis Tension Spring Tension Arm Ass'y Tension Holder...

[Page 14](#) All manuals and user guides at all-guides.com DISASSEMBLY INSTRUCTIONS 2-8: T BRAKE ARM/T BRAKE BAND (Refer to Fig. 2-8-A) Remove the T Brake Spring. Idler Gear Turn the T Brake Arm clockwise and bend the hook Idler Arm Ass'y section to remove it. Unlock the 2

supports 1 and remove the T Brake S Reel Band.

[Page 15](#) All manuals and user guides at all-guides.com DISASSEMBLY INSTRUCTIONS 2-10: CASSETTE OPENER/PINCH ROLLER BLOCK/ P5 ARM ASS'Y (Refer to Fig. 2-10-A) Unlock the support 1 and remove the Cassette Opener. Remove the Pinch Roller Block and P5 Arm Ass'y. Cassette Opener Spring Position Fig.

[Page 16](#) All manuals and user guides at all-guides.com DISASSEMBLY INSTRUCTIONS 2-14: CAPSTAN DD UNIT (Refer to Fig. 2-14-A) 2-15: MAIN CAM/PINCH ROLLER CAM/JOINT GEAR (Refer to Fig. 2-15-A) Remove the Capstan Belt. Remove the 3 screws 1. Remove the E-Ring 1, then remove the Main Cam. Remove the E-Ring 2, then remove the Pinch Roller Remove the Capstan DD Unit.

[Page 17](#) All manuals and user guides at all-guides.com DISASSEMBLY INSTRUCTIONS NOTE 2-18: CASSETTE GUIDE POST/INCLINED BASE S/T UNIT/P4 CAP (Refer to Fig. 2-18-A) 1. When you install the Loading Arm S Unit, Loading Arm T Unit and Main Loading Gear, align each marker. Remove the P4 Cap.

[Page 18: Removal Of Anode Cap](#)

All manuals and user guides at all-guides.com DISASSEMBLY INSTRUCTIONS 3. REMOVAL OF ANODE CAP 3. After one side is removed, pull in the opposite direction to remove the other. Read the following NOTED items before starting work. NOTE After turning the power off there might still be a potential Take care not to damage the Rubber Cap.

[Page 19: Removal Of Deflection Yoke](#)

All manuals and user guides at all-guides.com DISASSEMBLY INSTRUCTIONS 4. Insert one end of the Anode Support into the anode button, then the other as shown in Fig. 3-5. Support Fig. 3-5 Confirm that the Support is securely connected. Put on the Rubber Cap without moving any parts. 4.

[Page 20: Removal And Installation Of Flat Package Ic](#)

All manuals and user guides at all-guides.com DISASSEMBLY INSTRUCTIONS REMOVAL AND INSTALLATION OF When IC starts moving back and forth easily after desoldering completely, pickup the corner of the IC using FLAT PACKAGE IC a tweezers and remove the IC by moving with the IC desoldering machine.

[Page 21](#) All manuals and user guides at all-guides.com DISASSEMBLY INSTRUCTIONS INSTALLATION When bridge-soldering between terminals and/or the soldering amount are not enough, resolder using a Thin- Take care of the polarity of new IC and then install the tip Soldering Iron. (Refer to Fig. 5-8.) new IC fitting on the printed circuit pattern.

[Page 22: Key To Abbreviations](#)

All manuals and user guides at all-guides.com KEY TO ABBREVIATIONS Audio/Control H.SW Head Switch Automatic Color Control Hertz Audio Erase Integrated Circuit Automatic Frequency Control Intermediate Frequency Automatic Fine Tuning Indicator AFT DET Automatic Fine Tuning Detect Inverter Automatic Gain Control Killer Amplifier Left...

[Page 23](#) All manuals and user guides at all-guides.com KEY TO ABBREVIATIONS SYNC Synchronization SYNC SEP Sync Separator, Separation Transistor TRAC Tracking TRICK PB Trick Playback Test Point UNREG Unregulated Volt Voltage Controlled Oscillator Video Intermediate Frequency Vertical Pulse, Voltage Display V.PB Video Playback Variable Resistor V.REC...

[Page 24: Service Mode List](#)

All manuals and user guides at all-guides.com SERVICE MODE LIST This unit provided with the following SERVICE MODES so you can repair, examine and adjust easily. To enter SERVICE MODE, unplug AC cord till lost actual clock time. Then press and hold Vol (-) button of main unit and remocon key simultaneously.

[Page 25: Preventive Checks And Service Intervals](#)

All manuals and user guides at all-guides.com PREVENTIVE CHECKS AND SERVICE INTERVALS The following standard table depends on environmental conditions and usage. Parts replacing time does not mean the life span for individual parts. Also, long term storage or misuse may

cause transformation and aging of rubber parts. The following list means standard hours, so the checking hours depends on the conditions.

[Page 26](#) All manuals and user guides at all-guides.com PREVENTIVE CHECKS AND SERVICE INTERVALS CLEANING NOTE 2. TAPE RUNNING SYSTEM After cleaning the heads with isopropyl alcohol, do not When cleaning the tape transport system, use the run a tape until the heads dry completely. If the heads gauze moistened with isopropyl alcohol.

[Page 27: When Replacing Eeprom \(Memory\) Ic](#)

All manuals and user guides at all-guides.com WHEN REPLACING EEPROM (MEMORY) IC If a service repair is undertaken where it has been required to change the MEMORY IC, the following steps should be taken to ensure correct data settings while making reference to TABLE 1. NOTE: Initial Data setting will not be possible if clock has been set.

[Page 28: Servicing Fixtures And Tools](#)

All manuals and user guides at all-guides.com SERVICING FIXTURES AND TOOLS Alignment Tape Back tension cassette gauge Torque cassette gauge Taper nut driver (KT-300NR) ST-N5 ST-NF 70909103 70909199 70909228 VTR cleaning kit VTR lubrication kit Grease JG002B Adapter JG002E Dial Torque Gauge (10~90gf•cm) JG002F (60~600gf•cm)

[Page 29: Mechanical Adjustments](#)

All manuals and user guides at all-guides.com MECHANICAL ADJUSTMENTS 1. CONFIRMATION AND ADJUSTMENT 1-2: CONFIRMATION AND ADJUSTMENT OF TENSION POST POSITION Read the following NOTES before starting work. Set to the PLAY mode. • Place an object which weighs between 450g~500g on Adjust the adjusting section for the Tension Arm the Cassette Tape to keep it steady when you want to position so that the Tension Arm top is within the...

[Page 30](#) All manuals and user guides at all-guides.com MECHANICAL ADJUSTMENTS 1-4: CONFIRMATION OF VSR TORQUE NOTE Install the Torque Gauge (JG002F) and Adapter (JG002B) If the torque is out of the range, replace the following on the S Reel. Set to the Picture Search (Rewind) mode. parts.

[Page 31](#) All manuals and user guides at all-guides.com MECHANICAL ADJUSTMENTS 2-2: CONFIRMATION AND ADJUSTMENT OF AUDIO/ 2-3: TAPE RUNNING ADJUSTMENT CONTROL HEAD (X VALUE ADJUSTMENT) When the Tape Running Mechanism does not work well, Confirm and adjust the height of the Reel Disk. adjust the following items.

[Page 32](#) All manuals and user guides at all-guides.com MECHANICAL ADJUSTMENTS 3. MECHANISM ADJUSTMENT PARTS LOCATION GUIDE 1. Tension Connect P4 Post 2. Tension Arm T Brake Spring 3. Guide Roller T Reel 4. Audio/Control Head S Reel 5. X value adjustment driver hole Adjusting section for the Tension Arm position D2-4...

[Page 33: Electrical Adjustments](#)

All manuals and user guides at all-guides.com ELECTRICAL ADJUSTMENTS 1. BEFORE MAKING ELECTRICAL 2. BASIC ADJUSTMENTS ADJUSTMENTS (VCR SECTION) Read and perform these adjustments when repairing the 2-1: PG SHIFTER circuits or replacing electrical parts or PCB assemblies. Connect CH-1 on the oscilloscope to TP1002 and CH-2 CAUTION to TP4201.

[Page 34](#) All manuals and user guides at all-guides.com ELECTRICAL ADJUSTMENTS 2-3: VCO FREERUN 2-8: SUB BRIGHTNESS Place the set with Aging Test for more than 10 minutes. Receive the black pattern*. (RF Input) Connect the digital voltmeter between the pin 7 of Using the remote control, set the brightness, contranst, CP602 and the pin 1 (GND) of CP602.

[Page 35](#) All manuals and user guides at all-guides.com ELECTRICAL ADJUSTMENTS 2-10: SUB COLOR 2-13: VERTICAL SHIFT Receive the color bar pattern. (RF Input) Receive the monoscope pattern. Connect the oscilloscope to TP801. Activate the adjustment mode display of Fig. 1-1 and Using the remote control, set the brightness, contranst, press the channel button (07) on the remote control to color and tint to normal position.

[Page 36](#) All manuals and user guides at all-guides.com ELECTRICAL ADJUSTMENTS 3. PURITY AND CONVERGENCE 3-3: STATIC CONVERGENCE ADJUSTMENTS NOTE Adjust after performing adjustments in section 3-2. NOTE Receive the crosshatch pattern from color bar Turn the unit on

and let it warm up for at least 30 generator.

[Page 37](#) All manuals and user guides at all-guides.com ELECTRICAL ADJUSTMENTS 4. ELECTRICAL ADJUSTMENT PARTS LOCATION GUIDE (WIRING CONNECTION) CP803A MAIN PCB J503 CP502 CP850 FB401 T502 CP801 J801 CD503 CRT PCB F502 R554 T501 CP503 CP401 VR402 CP402 S501 AC IN CP403 S502 L508...

[Page 38: Y/C/Audio/Ccd/Head Amp](#)

All manuals and user guides at all-guides.com WAVEFORMS Y/C/AUDIO/CCD/HEAD AMP MICON POWER ON 11 PB 0.5V 20µs/div 1.0V 20µs/div 0.5V 0.5ms/div POWER ON POWER ON 13 PB 100mV 0.1µs/div 0.5V 10ms/div 1.0V 5ms/div TV POWER POWER ON 15 5.0V 20ms/div 1.0V 10µs/div 10mV 20µs/div 16 500mV 5µs/div...

[Page 39](#) All manuals and user guides at all-guides.com WAVEFORMS 10.0V 5ms/div 50.0V 20µs/div IN/OUT 19 2.0V 20µs/div 0.5V 1ms/div 20 200mV 20µs/div 0.5V 20µs/div CHROMA 21 50.0V 20µs/div 200mV 20µs/div SOUND AMP 22 50.0V 20µs/div 200mV 2ms/div NOTE: The following waveforms were measured at the point of the corresponding balloon number in the schematic diagram.

[Page 40](#) All manuals and user guides at all-guides.com MECHANICAL EXPLODED VIEW J801 PCB110 (CRT PCB) CD602 L508 V801 FB401 PCB070 (MAIN PCB) SP351 I1-1...

[Page 41](#) All manuals and user guides at all-guides.com MECHANICAL EXPLODED VIEW TU601 PCB010 (SYSCON PCB) I1-2...

[Page 42](#) All manuals and user guides at all-guides.com CHASSIS EXPLODED VIEW (TOP VIEW) M2003 UN4001 H5002 H5001 D1100 M101 NOTE: Applying positions AA for the grease are CLASS MARK displayed for this section. GREASE Check if the correct grease is applied for each position.

[Page 43](#) All manuals and user guides at all-guides.com CHASSIS EXPLODED VIEW (BOTTOM VIEW) CD1501 M2001 CD1502 NOTE: Applying positions AA for the grease are CLASS MARK displayed for this section. GREASE Check if the correct grease is applied for each position. I2-2...

[Page 44](#) All manuals and user guides at all-guides.com MECHANICAL REPLACEMENT PARTS LIST Location No. TSB P/N Reference No. Description BZ610319 A5B006I720 CABINET,FRONT ASSY BZ710607 701WPJB559 CABINET,FRONT BZ710282 752WSAA033 SHIELD,IC BZ710608 712WPJB307 FLAP BZ710010 743WKA0032 SPRING,FLAP BZ710288 713WPA0124 GUIDE,REMOCON BZ710287 713WPA0123 GLASS,LED BZ710609 735WPJA528 BUTTON,FRAME...

[Page 45](#) All manuals and user guides at all-guides.com CHASSIS REPLACEMENT PARTS LIST Location No. TSB P/N Reference No. Description BZ610320 A5B006B420A DECK ASSY A5B006B420A BZ710564 850A400234 PINCH ROLLER BLOCK BZ710514 850P900746 BRACKET,TOP 3V BZ710193 850P200290 BELT,CAPSTAN (S) BZ710515 850P600581 WORM BZ710094 850P500083 BASE,AC HEAD BZ710112...

[Page 46](#) All manuals and user guides at all-guides.com ELECTRICAL REPLACEMENT PARTS LIST Location No. TSB P/N Reference No. Description RESISTORS ! R404 BZ210112 R4X5T6152F R,METAL 1.5K OHM 1/6W R409 BZ210225 R3X181271J R,METAL OXIDE 270 OHM 1W ! R439 BZ210089 R4X5T6273F R,METAL 27K OHM 1/6W ! R440 BZ210090...

[Page 47](#) All manuals and user guides at all-guides.com ELECTRICAL REPLACEMENT PARTS LIST Location No. TSB P/N Reference No. Description DIODES D508 BZ410006 D1VT001330 DIODE,SILICON 1S5133T-77 ! D509 BZ410080 D2WXRU2AM0 DIODE,SILICON RU2AM-EIC ! D510 BZ410080 D2WXRU2AM0 DIODE,SILICON RU2AM-EIC D511 BZ410101 D28TELS6N6 DIODE RECTIFIER 10ELS6N-TA1B2 D512 BZ410043...

[Page 48](#) All manuals and user guides at all-guides.com ELECTRICAL REPLACEMENT PARTS LIST Location No. TSB P/N Reference No. Description IC4001 BZ611085 I03F301MN0 LA71201M-N-MPB TRANSISTORS Q401 BZ510086 TPATB03003 COMPOUND TRANSISTOR KRA102MAT Q402 BZ510052 TF2002P4M0 THYRISTOR 2P4M Q404 BZ510078 TNATJ03003 COMPOUND TRANSISTOR KRC111MAT ! Q405 BZ510089 TC5T01627Y...

[Page 49](#) All manuals and user guides at all-guides.com ELECTRICAL REPLACEMENT PARTS LIST Location No. TSB P/N Reference No. Description COILS & TRANSFORMERS L614 BZ310165 021LA6151K COIL 150 UH L618 BZ310152 0331920018 COIL 3192001 L801 BZ310002 021673101K COIL 100 UH L1001 BZ310009 021LA62R2K COIL 2.2 UH L4001...

[Page 50](#) All manuals and user guides at all-guides.com ELECTRICAL REPLACEMENT PARTS LIST Location No. TSB P/N Reference No. Description MISCELLANEOUS CP502 BZ614250 069R2B0589 CONNECTOR PCB SIDE 52147-1110 CP503 BZ614137 069X620030 CONNECTOR PCB SIDE RE-H022TD-1130 CP602 BZ614039 069E270129 CONNECTOR PCB SIDE 8283_0712_00_000 CP801 BZ614269 069S320010...

[Page 51](#) All manuals and user guides at all-guides.com FILE NO. 140-200203 SERVICE MANUAL COLOR TELEVISION/ VIDEO CASSETTE RECORDER MV9DM2...

[Page 52: Micon/In/Out](#)

All manuals and user guides at all-guides.com TV BLOCK DIAGRAM V. OUTPUT IC IC401 AN5522 THERMAL PROTECTION PUMP 8.7VREF 5.7VREF AT+13V Q601 TU_AUDIO 5.7VREF(P.CON) Y/C/AUDIO/CCD/ TU_VIDEO BUFFER HEAD AMP Y/C_AUDIO CHROMA IC Q405 Q406 IC601 M61206FP H. OUTPUT H-DRIVE 33 39 46 AUDIO OUT FB401 RF AGC OUT...

[Page 53](#) All manuals and user guides at all-guides.com Y/C/AUDIO/CCD/HEAD AMP BLOCK DIAGRAM X4001 3.579545MHz Q4010 Q4012 BUFFER BUFFER Y/C/AUDIO/CCD/HEAD AMP IC IC4001 LA71201M-N-MPB VX01 3.58M BPF2 CP4001 CLAMP AUTO-BIAS Main CONV Y/C_CLK SP-CH2 (L) SERAIL Y/C_DATA MICON/IN/OUT DECODER SP_COM B-UP Y/C_CS SP-CH1 (R) C-LPF 3.58M...

[Page 54](#) All manuals and user guides at all-guides.com MICON/IN/OUT BLOCK DIAGRAM TIMER SYSCON MICON IC IC1001 OEC7071A SW1001 SYSTEM RESET IC RESET-L 1 OUT IC1003 TAB SW R3111N311A/C POWER FAIL2 AT+5.6V POWER_FAIL_L MSSEN-A P. CON+5V X-OUT(12MHz) MS_SEN A X1001 J4204 FRONT_A Q1009 12MHz X-IN(12MHz)

[Page 55: Printed Circuit Boards](#)

All manuals and user guides at all-guides.com PRINTED CIRCUIT BOARDS MAIN/CRT SOLDER SIDE S802Y CP820 W040 W831 CP803A C514 D505 J503 D518 T502 CP502 D515 W020 ICP502 W019 C542 D514 C511 W842 R523 RY503 D524 D537 VR501 R423 W001 D550 D512 VR502 D523...

[Page 56: Syscon](#)

All manuals and user guides at all-guides.com PRINTED CIRCUIT BOARDS SYSCON (INSERTED PARTS) SOLDER SIDE CD604 C354 W174 W172 W173 TP1001 OS4201 W079 W077 Q1013 IC351 HS351 W002 W001 CD601 W159 W028 W120 W119 L607 X4001 W833 L608 SW1001 W131 W044 W130 CF604...

[Page 57](#) All manuals and user guides at all-guides.com PRINTED CIRCUIT BOARDS SYSCON (CHIP MOUNTED PARTS) SOLDER SIDE R3001 R1048 Q3002 Q4206 Q4205 C602 Q604 C1024 Q4210 C1042 Q4212 R4232 R1083 C4212 R1003 Q1004 C1076_1 Q4203 R1012 C1027 C1019 C1064 C4069 Q603 C1025 R1011 C1028...

[Page 58: Y/C/Audio/Ccd/Head Amp](#)

All manuals and user guides at all-guides.com Y/C/AUDIO/CCD/HEAD AMP SCHEMATIC DIAGRAM (SYSCON PCB) BUFFER Q4012 2SC2412K R4041 1.8K FROM REGULATOR FROM/TO IN/OUT P.CON+5V REAR_A REAR_V C4058 FRONT_A FRONT_V 6.3V Y/C_AUDIO C4059 CHROMA_V 0.1 F R4038 C4061 680K 0.01 F FROM/TO MICON Y/C_CLK C4079 Y/C_DATA...

[Page 59](#) All manuals and user guides at all-guides.com MICON SCHEMATIC DIAGRAM FROM/TO REGULATOR (SYSCON PCB) D1005 D1006 SB140-EIC AT+5.6V SB140-EIC MOTOR_GND P.CON+5V C1041 AT+12V 0.1 F X-RAY_STOP C1034 SERVICE POWER_FAIL[DC] TP1001 0.1 F C1035 R1015 AT+5V FROM/TO Y/C/A/CCD/HEAD AMP 220P CH Y/C_CLK POWER_FAIL Y/C_DATA...

[Page 60](#) All manuals and user guides at all-guides.com REGULATOR SCHEMATIC DIAGRAM (SYSCON PCB) TO Y/C/A/CCD/H.AMP P.CON+5V 11.7 P.CON+8V REG. Q3007 D3003 2SD400E P.CON+5V[CHROMA] TO MICON 1N4005-EIC REG. Q3006 AT+5.6V 2SD400E P.CON+5V[TU1] AT+12V REG. REG. P.CON+5V Q3001 Q3005 MOTOR_GND 2SB1131 2SD400E AT+13V X-

RAY_STOP POWER_FAIL[DC] R3008...

[Page 61: In/Out](#)

All manuals and user guides at all-guides.com IN/OUT SCHEMATIC DIAGRAM (SYSCON PCB)
L4201 100uH Vout OS4201 PIC-37243SR FRONT A/V JACKK (MONO) J4204 J4205 R4207 R4208
R4210 AV1-09D-4 AV1-09D-3 1.5K R4211 R4214 R4215 R4216 R4217 5.6K 2.7K 1.5K REC LED
SW T-REC LED SW Q4205 Q4206...

[Page 62](#) All manuals and user guides at all-guides.com CHROMA/IF SCHEMATIC DIAGRAM
FROM/TO MICON (SYSCON PCB) PROTECT POWER_FAIL OSD_R OSD_G OSD_B OSD_BLK L608
C663 390P CH L614 100uH 0305 150uH AFT_M TUNER_V VCR_POWER_H B602 R620
W4BRH3.5X6X1 X-RAY_TEST BUFFER TV_POWER_H Q601 CF604 H_CTL 2SA1037AK C648_1
R651...

[Page 63: Sound Amp](#)

All manuals and user guides at all-guides.com SOUND AMP SCHEMATIC DIAGRAM (SYSCON PCB)
CD351 CP353 CH12437A SPEAKER A2502WV2-2P SP OUT + SP OUT - SP351 SG08G26BNB 8
OHM R301 FROM MICON HEADPHONE JACK W821 R360 56 1/2W J351 TV_A_MUTE MSJ-2000 56
1/2W C362 TV_POWER_H...

[Page 64](#) All manuals and user guides at all-guides.com TV POWER SCHEMATIC DIAGRAM
+5V_REG IC IC501 KIA7805API DC JACK J503 (MAIN PCB) HEC0824-010010 RY503 ALKS325
D550 MTZJ5.6B D502 R549 1SS133 DC POWER SW HS504 220 1/4W D526 Q501 763WSA0017
KTC3198 PROTECTOR DC POWER SW. 1SS133 PROTECTOR Q518...

[Page 65](#) All manuals and user guides at all-guides.com DEFLECTION SCHEMATIC DIAGRAM
(MAIN PCB) CP403 A1561WV2-2P DEGAUSS COIL V.OUTPUT IC L508 K001 K002 K003 IC401
AN5522 8R090008 W888 TMM17538 TMM17538 TMM17538 THERMAL PROTECTION PUMP UP
DEGAUSE SW Q401 26.3 12.5 25.9 KRA102MAT FROM/TO DY W884 DY801...

[Page 66](#) All manuals and user guides at all-guides.com CRT SCHEMATIC DIAGRAM (CRT PCB)
132.9 104.1 132.8 132.5 FROM CHROMA TP801 R802 CP850 (CD850) J801 52147-0510
HPS3200-010501 15K 1W RED AMP CUT OFF Q804 G.OUT KTC3207 132.5 R807 R.OUT 2.7K
1/2W B.OUT R811 470 1/4W C809...

[Page 67](#) All manuals and user guides at all-guides.com INTERCONNECTION DIAGRAM TM101
FROM OS4201 TM101 OS4201 FRONT A/V JACK (MONO) J4204 J4205 HALL MAIN ROTOR SENSOR
COIL MAGNET FG SENSOR V.OUT HEADPHONE JACK HEADPHONE JACK J351 J352 LOADING
MOTOR M101 HALL HALL SWITCH LOGIC CP1002...

[Page 68](#) All manuals and user guides at all-guides.com TOSHIBA VIDEO PRODUCTS PTE. LTD.
438B ALEXANDRA ROAD, BLOCK B #06-01 ALEXANDRA TECHNOPARK SINGAPORE 119968...