

Programming Channel Memory - Toshiba S5ES Series Service Manual

1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46

--

•

[Table of Contents](#)

•

Bookmarks



Preset the channels automatically (ASM function)

Use remote control for this operation. The buttons on the TV with similar name may also be use.

1

Select the starting position for channel to be preset.
Press the Number buttons (-/--, 0~9) or CH s/t.

PROGRAMMING CHANNEL MEMORY

2

Preset the channels automatically (ASM function)

Set the correct broadcast system for your region. Press

MENU and then **-/±** to highlight the "TUNING" icon.
Use remote control for this operation. The buttons on the TV with similar name may also be use.

To use the SEARCH f

1

Press **MENU** and then the "TUNING" icon.

SETUP
LANGUAGE
COLOR MODE
SOUND MODE
SKIP
BLUE SCREEN
TEXT
SELECT /

1

Select the starting position for channel to be preset.
Press the Number buttons (-/--, 0~9) or CH ▲/▼.



Confirm "COLOR MODE" is set to "AUTO" and "SOUND MODE" is set to proper system. If not, press **CH s/t to select "COLOR MODE" or "SOUND MODE"** and press ; -/+ to set each proper system.

3

Press MENU and then ; -/+ to highlight the "

TUNING" icon. Select "ASM", then press ; + to start the search. When the TV screen returns to the start position, the procedure is complete.

PROGRAMMING CHANNEL MEMORY

Preset the channels automatically (ASM function)

Use remote control for this operation. The buttons on the TV with similar name may also be use.

Presetting channel

1 Select the starting position for channel to be preset. First, use the ASM (Automatic Search Memory) function to preset all active channels in your area automatically.

Then, arrange the preset channels with the SEARCH, SKIP and MFT (Manual Fine Tuning) functions so that you can tune into only desired channels.

2 Set the correct broadcast system for your region. Press MENU and then ; -/+ to highlight the "SET UP" icon. Use the SEARCH function if desired channels cannot be preset with the ASM or if you would like to preset channels to specific position numbers one by one.

PROGRAMMING CHANNEL MEMORY

1
SETUP
ENGLISH
AUTO
BIG
OFF
ON
FAST
ADJUST
MFT
OFF
P001
ADJUST
MFT

 


Confirm "COLOR MODE" is set to "AUTO" and "SOUND MODE" is set to proper system. If not, press **CH ▲/▼** to select "COLOR MODE" or "SOUND MODE" and press ; -/+ to set each proper system.

To use the SEARCH function

1 Press MENU and then ; -/+ to highlight the "TUNING" icon. Select "ASM", then press ; + to start the search. When the TV screen returns to the start position, the procedure is complete.

Press MENU and then ; -/+ to highlight the "TUNING" icon.

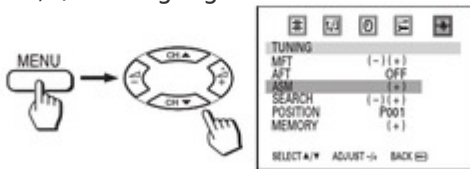

TUNING
MFT
AFT
ASM
SEARCH
POSITION
MEMORY
SELECT

2

Presetting channel

 
Press CH s/t to select "SEARCH". Press ; -/+ to start searching. Press ; -/+ to search for lower frequencies while pressing ; + searches for channels at higher frequencies. Then, arrange the search channels with the SEARCH, SKIP and MFT (Manual Fine Tuning) functions so that you can tune into only desired channels.

To use the SEARCH function

1 Press MENU and then the "TUNING" icon.




2 Press CH ▲/▼ to select start searching. Pressing lower frequencies while pressing the opposite direction button, and respectively, will cancel

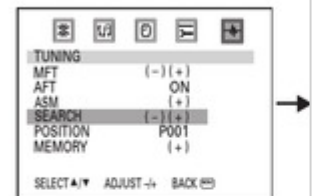

Repeat this process until channel.

 3 When the desired channel is selected, repeatedly press the "POSITION" button until the position number is shown.

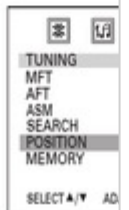

4 Press CH ▲/▼ to select to memorize the channel.



TUNING
MFT
ON
AFT
ASM
SEARCH
POSITION
P001
MEMORY
SELECT /
ADJUST +/-
BACK

Repeat this process until you can get the desired channel.

3

PROGRAMMING CHANNEL MEMORY

When the desired channel is shown, press CH t to select "POSITION". Press the ; -/+ buttons repeatedly until the position (P001) to be preset is shown.

Preset the channels automatically (ASM function)

Use remote control for this operation. The buttons on the TV with similar name may also be use.

- 1 Select the starting position for channel to be preset. Press the Number buttons (-/--, 0~9) or CH ▲/▼.

TUNING
MFT
AFT
ASM
SEARCH
POSITION
MEMORY
SELECT /

4

Press CH s/t to select "MEMORY", then press ; + to memorize the channel at the current position.

- 2 Set the correct broadcast system for your region. Press MENU and then ◀ -/+ to highlight the "SET UP" icon.



Confirm "COLOR MODE" is set to "AUTO" and "SOUND MODE" is set to proper system. If not, press CH ▲/▼ to select "COLOR MODE" or "SOUND MODE" and press ◀ -/+ to set each proper system.

TUNING
MFT
AFT
ASM
SEARCH
POSITION
MEMORY
SELECT /

5

When you program other channels, repeat steps 2 to 4.

4.

ON
P001
MENU +/-
BACK
SEARCH
VHF H
P001
STOP
OFF
P002
ADJUST +/-
BACK
OFF
P002
ADJUST +/-
BACK

 
SPECIFIC INFORMATIONS

To use the SEARCH function

- 1 Press MENU and then the "TUNING" icon.



- 2 Press CH ▲/▼ to select start searching. Pressing lower frequencies which channels at higher frequencies by pressing the opposite respectively, will cancel.

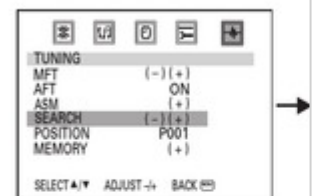

[Previous Page](#)
[Next Page](#)

1
...
11
12
13
14
15
16
17
18

Related Manuals for Toshiba S5ES Series

[TV Toshiba S5ES Series Service Manual](#)

(50 pages)

[TV Toshiba CPBRO2005Eu Catalog](#)

Home cinema catalogue 2005-6 (21 pages)

[TV Toshiba Stasia 17WL46 Catalogue](#)

Television plasma, lcd, projector, dvd video (9 pages)

[TV Toshiba 32SL863B Owner's Manual](#)

Sl86* digital series, ul86* digital series (102 pages)

[TV Toshiba 22BL704B Owner's Manual](#)

Digital series (48 pages)

[TV Toshiba 32BV801B User Manual](#)

Digital series (45 pages)

[TV Toshiba 32BV501B User Manual](#)

Digital series (49 pages)

[TV Toshiba 42VL963B Owner's Manual](#)

VI96 digital series (92 pages)

[TV Toshiba 32SL753B Owner's Manual](#)

SI75* digital series, wl75* digital series, rw75* digital series (78 pages)

[TV Toshiba 46SV685DB Owner's Manual](#)

Sv6 digital series (62 pages)

[TV Toshiba 29CJZ5SR Service Manual](#)

(52 pages)

[TV Toshiba 50L711U18 Manual](#)

50"/55" 2160p (4k), 60hz, led chromecast built-in tv (100 pages)

[TV Toshiba 24L4200U User Manual](#)

Integrated high definition television (141 pages)

[TV Toshiba fire tv 43C350KU Quick Setup Manual](#)

(19 pages)

[TV Toshiba 55UA2B63DG Operating Instructions Manual](#)

(34 pages)

[TV Toshiba 34HF84 Owner's Manual](#)

Colorstream color television (64 pages)

Related Content for Toshiba S5ES Series

[CF27C30 Programming Channel Memory](#)

Toshiba CF27C30

[14AS20 Programming Channel Memory](#)

Toshiba 14AS20

[14CS2R Programming Channel Memory](#)

Toshiba 14CS2R
[CF32H40 Programming Channel Memory](#)
Toshiba CF32H40
[CE35E15 Programming Channel Memory](#)
Toshiba CE35E15
[55A10A Programming Channel Memory](#)
Toshiba 55A10A
[CF19H22 Programming Channel Memory](#)
Toshiba CF19H22
[TAC0326 Programming Channel Memory](#)
Toshiba TAC0326

This manual is also suitable for:

[21cz8de](#)