



Asus XitePad Operation Manual

2x vibration feedback gamepad

1
2
3
4
5
6
7
8
9
10
11
12

--


•

Bookmarks

--

[Download this manual](#)

Quick Links

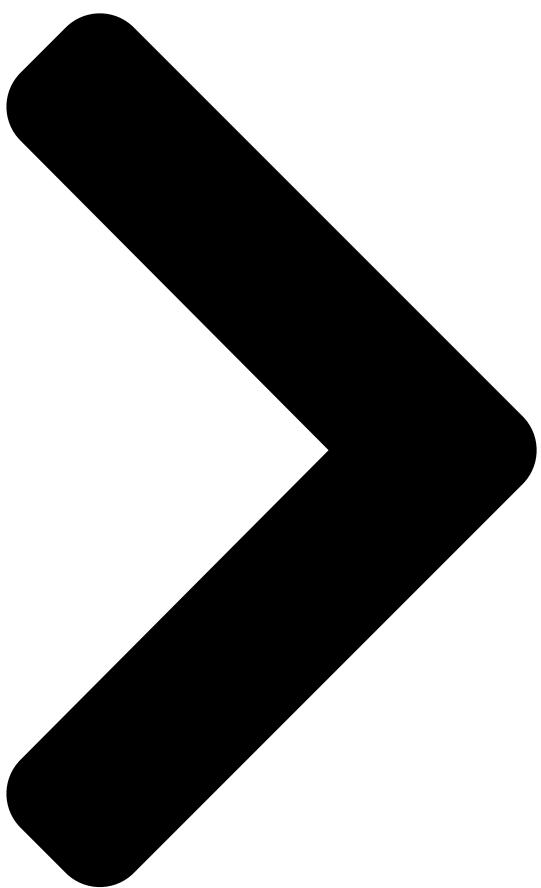

ASUS
HEART OF TECHNOLOGY

*X*itePad

2X Vibration Feedback Gamepad

[Next Page](#)

1
2
3
4
5

Related Manuals for Asus XitePad

[Video Game Controller Asus ROG KUNAI 3 User Manual](#)

(13 pages)

[Video Game Controller Asus REPUBLIC OF GAMERS Raikiri Pro GD300X Manual](#)

(146 pages)

[Video Game Controller Asus ROG Kunai Gamepad User Manual](#)

(16 pages)

[Video Game Controller Asus ROG KUNAI CORE GAMEPAD User Manual](#)

(29 pages)

[Video Game Controller Asus TV500BG Quick Start Manual](#)

Gamepad for nexus player (23 pages)

[Video Game Controller Asus TV500BG Quick Start Manual](#)

(34 pages)

[Video Game Controller Asus ZS660KLCL A User Manual](#)

Rog kunai gamepad (106 pages)

[Video Game Controller Asus Eee Stick GMC-1 User Manual](#)

User manual (29 pages)

Summary of Contents for Asus XitePad

[Page 2: Brief Introduction](#)

Game Controller; Insert the plug of controller into PC USB port Install the driving system according to indication PC will find out “ASUS XitePad 2X Vibration Feedback Gamepad” driving system automatically Attribute. 4. Testing of Game Controller Enter “Text Page”...

[Page 3](#) Enter “Calibration” for correction The calibration is proceeded under the Analog Mode (Led Indicator is on) while “+” cursor isn’t in the center position. You only need to press “Default” first, then “set” to calibrate. Enter the “Effect Page” to test the vibration of motor: Under Analog mode, press the right or the left of the Left Stick, and the corresponding left motor vibrates.

[Page 4: Troubleshooting](#)

The definition and clearance of Turbo function (A), Definition of Turbo function Under Digital mode, the buttons “1 to 8” can be defined with Turbo function. Under Analog mode, the buttons “1 to 8” and “11, 12” can be defined with Turbo function.

[Page 5](#) The GameLiveShow and GameReplay provided in the CD-ROM are the latest features in one application that will only work with ASUS graphic cards. Please install the provided ASUS Enhanced Driver in the CD- ROM first then install the GameLiveShow/GameReplay application.

[Page 6](#) 2X... 1. ...USB ... Windows 98... Direct7.0a... 2. ... Windows 98/98se/ME/2000/XP... {...} ...:2 ...:4 ...12... (TURBO)... (CLEAR)... Left Joystick... Right Joystick... 1 2 3 4... (1) (2)... 3. ... MACRO CLEAR MACRO ANALOG 1/2/3/4 6 5 7 ...

[Page 7](#) 4. ...USB... Windows 98/98se...: ... 98/98SE... 98/98SE... ..

ASUS XitePad 2X Vibration Feedback Gamepad " " " (A) " 5. 412 () () : 210 1011 : 412 (3D) 1112 (TURBO) (CLEAR) : TURBO 1-12 (CLEAR) (Vibration feed back) : (Vibration feed back) ...

[Page 8](#) 5,6,11,12, 5, Macro, Macro, Macro (C) Macro Macro: Macro: 6. 5~35°C/41~95°F) . GameLiveShow/GameReplay 05, GameLiveShow/GameReplay, ASUS Enhanced Driver GameLiveShow/GameReplay, ...

[Page 9](#) 2X, . . .

[Page 10](#) . . . ASUS XitePad 2X Vibration Feedback Gamepad . . .

[Page 11](#) . . .

[Page 12](#) 15-061122000 MANUEL FOR XITEPAD R1.0 SC/TC/EN...