



Toshiba TWD-BL160D4 Series Owner's Manual

Dual drum washer dryer

1	
Table Of Contents	
2	
3	
4	
5	
6	
7	
8	
9	
10	
11	
12	
13	
14	
15	
16	
17	

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36

--

•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks

--

[Download this manual](#)

Quick Links



DUAL DRUM WASHER

DRYER **TOSHIBA**

OWNER'S MANUAL

MODEL:

TWD-BL160D4 Series

Read this manual

Use all instructions and explanations of

The installation and use. Follow the
Instructions carefully. Keep the original

Instructions handy for later use. If the

Application is sold or passed on then ensure

That the new owner always receives those

Operation instructions.

CAUTION: HOT SURFACE !

CAUTION: RISK OF FIRE !

CAUTION: READ THE INSTRUCTIONS!

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba TWD-BL160D4 Series

[Washer/Dryer Toshiba TW-G520L User Manual](#)

(6 pages)

[Washer/Dryer Toshiba TWD-BM105GF4 Series Owner's Manual](#)

(36 pages)

[Washer/Dryer Toshiba TWD-BH90W4H Owner's Manual](#)

Front loading washer dryer (32 pages)

[Washer/Dryer Toshiba TWD-BK90S2H Owner's Manual](#)

Front loading washer dryer (30 pages)

[Washer/Dryer Toshiba TWD-BJ120M4M Owner's Manual](#)

Front loading washer dryer (30 pages)

[Washer/Dryer Toshiba TWD-BH90W4M Owner's Manual](#)

Front loading washer dryer (32 pages)

[Washer/Dryer Toshiba TWD-BH90W4PH Owner's Manual](#)

Front loading washer dryer (32 pages)

[Washer/Dryer Toshiba TWD-BK90S2 Series Owner's Manual](#)

(29 pages)

[Washer/Dryer Toshiba TWD-BN90GF4H Owner's Manual](#)

Front loading washer dryer (36 pages)

[Washer/Dryer Toshiba TWD-T25BZU105MWS Owner's Manual](#)

Front loading washer dryer (36 pages)

[Washer/Dryer Toshiba TWD-T27BZP115MW Series Owner's Manual](#)

Front loading washer dryer (36 pages)

[Washer/Dryer Toshiba TWD-T25BZU115MWS Owner's Manual](#)

Front loading washer dryer (36 pages)

[Washer/Dryer Toshiba TWD-T25BZU115MWM Owner's Manual](#)

Front loading washer dryer (36 pages)

[Washer/Dryer Toshiba TWD-T25BZU115MWT Owner's Manual](#)

Front loading washer dryer (36 pages)

Summary of Contents for Toshiba TWD-BL160D4 Series

Page 1 DUAL DRUM WASHER DRYER OWNER'S MANUAL MODEL: TWD-BL160D4 Series Read this manual Use all instructions and explanations of The installation before use. Follow the Instructions carefully. Keep the operation Instructions handy for later use. If the Application is sold or passed on then ensure That the new owner always receives those Operation instructions.

Page 2: Table Of Contents

CONTENTS SAFETY INSTRUCTIONS Safety Instructions INSTALLATION Product DescriptionInstallationOPERATIONS Quick StartBefore Each WashingDetergent DispenserControl Panel Option.....Setting guide..... Programmes.....Washing Programmes TableMAINTENANCES Cleaning And Care Trouble ShootingTechnical Specifications

[Page 3: Safety Instructions](#)

SAFETY INSTRUCTIONS Safety Instructions • This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. •...

[Page 4](#) SAFETY INSTRUCTIONS Safety Instructions For your safety, the information in this manual must be followed to minimize the risk of fire or explosion, electric shock, or to prevent property damage, personal injury or loss of life. Explanation of the symbols: Warning! This combination of symbol and signal word indicates a potentially dangerous situation which may result in death or serious injuries unless it's avoided.

[Page 5](#) SAFETY INSTRUCTIONS • The new hose-sets supplied with the appliance must be used and the old hose-sets must not be used. • Before maintenance, unplug the appliance. • Always unplug the machine and turn off the water supply after use. The standard inlet water pressure: 0.05MPa~1MPa.

[Page 6](#) SAFETY INSTRUCTIONS • Pull out its plug from the power socket before cleaning or maintenance. • Do not use any socket with rated current less than that of appliance. Never pull out power plug with wet hand. • Please remember to disconnect water and power supply immediately after the clothes are washed.

[Page 7](#) SAFETY INSTRUCTIONS Risk of explosion! • Do not wash or dry articles that have been cleaned in, washed in, soaked in, or spotted with combustible or explosive substances (such as wax, oil, paint, gasoline, degreasers, dry-cleaning solvents, kerosene, etc.) This may result in fire or explosion.

[Page 8](#) SAFETY INSTRUCTIONS • Remove all packages and transport bolts before using the appliance. Otherwise, serious damage may result. Risk of damaging appliance! • Your product is only for home use and is only designed for the textiles suitable for machine washing. •...

[Page 9](#) SAFETY INSTRUCTIONS • Make sure that all pockets are emptied. Sharp and rigid items such as coin, brooch, nail, screw or stone etc. may cause serious damages to this machine. • Please check whether the water inside the drum has been drained before opening its door. Please do not open the door if there is any water visible.

[Page 10](#) SAFETY INSTRUCTIONS • Fabric softeners, or similar products, should be used as specified by the fabric softener instructions. • The final part of a washer dryer cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that the items will not be damaged.

[Page 11: Product Description](#)

INSTALLATION Product Description Power supply cord Upper drum Detergent Upper door dispenser Under door Under drum Drain pump filter Note! • The product line chart is for reference only, please refer to real product as standard. Accessories Transport Screw(optional) Supply hose Owner's manual Rat resistance Spanner assembly...

[Page 12](#) INSTALLATION Transport Bolt-1 Inlet valve Transport Bolt-4 Transport Bolt-2 Transport Bolt-5 Transport Bolt-3 Transport Bolt-6 Transport Bolt-8 Drain Hose Transport Bolt-9 Transport Bolt-7 Power supply cord Adjustable Legs Note! • The product line chart is for reference only, please refer to real product as standard.

[Page 13: Installation](#)

INSTALLATION Installation Installation area Warning! • Stability is important to prevent the product from wandering! • Make sure that the product should not stand on the power cord. W>20mm Before installing the machine, the location characterized as follows shall be selected: 1. Rigid, dry, and level surface 2. Avoid direct sunlight 3. Sufficient ventilation...

[Page 14](#) INSTALLATION Levelling the washing machine Warning! • Check with the gradienter if the machine placement is balanced and steady. • If there is no gradienter, check the balance as per the following method. 1. Whether it's balanced from left to right •...

[Page 15](#) INSTALLATION Levelling the washing machine Warning! • The lock nuts on all four

feet must be screwed tightly against the housing. Check if the legs are closely attached to the cabinet. If not, please turn them to their original positions tighten the nuts. 2. Loosen the lock nut turn the feet until it closely contacts with the floor.

[Page 16](#) **INSTALLATION** Connect the other end of inlet pipe to the inlet valve at the backside of product and fasten the pipe tightly clockwise. water supply hose water Inlet valve Drain Hose Warning! • Do not kink or protract the drain hose. • ...

[Page 17: Operations](#)

OPERATIONS Quick Start Caution! • Before washing, please make sure it's installed properly. • Before washing at first time, the washing machine shall be operated in one round of the whole procedures without clothes in as follows. The suggested program is "DRUM CLEAN". 1.

[Page 18: Before Each Washing](#)

OPERATIONS Before Each Washing • The working condition of the washer should be (0-40)°C. If used under 0°C, the inlet valve and draining system may be damaged. If the machine is placed under condition of 0°C or less, then it should be transferred to normal ambient temperature to ensure the water supply hose and drain hose are not frozen before use.

[Page 19: Detergent Dispenser](#)

OPERATIONS Detergent Dispenser Liquid detergent Softener If you want to use powder detergent, you can add it directly into the drum with clothes by using the container. Please put the container on the top of the load to make powder well dissolved.

[Page 20: Control Panel](#)

OPERATIONS Control Panel Turn on the Machine, The display shows UPPER" & "UNDER" Mode. " You can touch the screen to select "UPPER" or "UNDER" Drum. " UPPER" and UNDER" Drum operation display, you can touch and slide to " choose program and option. 1:10 1:10 UPPER drum UNDER drum...

[Page 21](#) **OPERATIONS Option DELAY** Set the Delay function: 1. Select a programme 2. Press the DELAY button to choose the time (the delaying end time is 1-24 H.) 3. Press [START/PAUSE] to commence the delay operation Cancel the Delay function: Touch the "off" to cancel delay function. Caution! • ...

[Page 22](#) **OPERATIONS DRYING** Press the button to select drying level and select drying time (AUTO/EXTRA/30/60/90/120/180) The default level is AUTO. Note! • Drying hints - Clothes could be dried after spinning - To ensure quality dry the textiles, please classify them according to their kinds and the drying temperature.

[Page 23](#) **OPERATIONS OPTION** There are four useful options for your choice: EXTRA RINSE, FAST WASH, PREWASH, STEAM. EXTRA RINSE The laundry will undergo extra rinse once after you select it. FAST WASH The function can decrease the washing time. PREWASH The PREWASH function can get an extra wash before main wash, it is suitable for washing the dust rises to surface of the clothes.

[Page 24: Setting Guide](#)

OPERATIONS Setting guide • Touch the setting button " " to set some useful function. Touch Here CHILD LOCK Wi-Fi BRIGHTNESS MUTE DEFAULT REMOTE RESTORE CHILD LOCK Touch the "CHILD LOCK" to avoid misoperation by children. If you want to cancel the "CHILD LOCK", touch the display screen, it will show "unlock" ...

[Page 25](#) **OPERATIONS Setting guide Wi-Fi** Touch the "Wi-Fi", the washing machine will be connected to the internet on your smartphone. The details of Wi-Fi connect, please check page 25. This is the Wi-Fi switch, if you want make your appliance connect to the internet. You need turn on the "Wi-Fi" ...

[Page 26](#) • If there is a large number of devices connecting with the WiFi router, the network stability might be affected. Toshiba is not obliged to advise you that how many devices you shall connect to your WiFi router, for it depends on router quality and many other factors.

[Page 27: Programmes](#)

OPERATIONS Programmes Programmes are available according to the laundry type. Under Drum Program Mixed Load of Cotton and Synthetic SANITIZE Continuous 60°C sterilization THE GREATWAVES Prevent Decoloring From Dark or Colorful Clothing QUICK 15' Wash Lightly Soiled and Small Loads SPIN ONLY Spin Only Program QUICK 30'...

[Page 28](#) OPERATIONS Programmes Programmes are available according to the laundry type. Upper Drum Program Mixed Load of Cotton and Synthetic SANITIZE Continuous 60°C Sterilization QUICK 15' Wash Lightly Soiled and Small Loads BABY CARE High Temperature Wash Baby Clothes SPIN ONLY Spin Only Program QUICK 30' Wash Lightly Soiled and Small Loads...

[Page 29: Washing Programmes Table](#)

OPERATIONS Washing Programmes Table Note! • The parameters in this table are only for user's reference. The actual parameters maybe different with the parameters in above mentioned table.

[Page 30](#) OPERATIONS Washing Programmes Table Default Wash Wash/Dry Time 0:59 *Wash and Dry Time Note! • The parameters in this table are only for user's reference. The actual parameters maybe different with the parameters in above mentioned table.

[Page 31: Maintenances](#)

MAINTENANCES Note! • In the program " DRY ONLY", you can touch button to change drying duration (30min, 60 , 90 , 120), suitable for different loading (0.5kg, 1kg, 1.5kg, 2kg).This program contains 10 minutes of default dehydration time, so the actual display time is 40min, 70min, 100min, 130min.

[Page 32: Cleaning And Care](#)

MAINTENANCES Cleaning And Care Warning! • Before your maintenance starts, please unplug the machine and close the tap. Cleaning The Cabinet Proper maintenance on the washing machine can extend its working life. The surface can be cleaned with diluted non-abrasive neutral detergents when necessary. If there is any water overflow, use the dry cloth to wipe it off immediately.

[Page 33](#) MAINTENANCES Cleaning The Gasket And Glass Wipe the glass and gasket after each wash to remove lint and stains. If lint builds up it can cause leaks. Remove any coins, buttons and other objects from the gasket after each wash. Cleaning The Inlet Filter Note! •...

[Page 34](#) MAINTENANCES Note! • Do not use alcohol,solvents or chemical products to clean the machine. Cleaning The Drain Pump Filter Warning! • Be careful of the hot water! • Wait for the water to cool down. • Unplug the machine to avoid electrical shock before maintenance. •...

[Page 35: Trouble Shooting](#)

MAINTENANCES Trouble Shooting The start of the appliance does not work or it stops during operation. First try to find a solution to the problem, If not, contact the service centre.
Description Reason Solution Washing machine Restart after the door is closed Door is not closed properly cannot start up Check if the clothes is stuck...

[Page 36: Technical Specifications](#)

MAINTENANCES Technical Specifications Power Supply 220V-240V~,50Hz MAX.Current 0.05MPa~1MPa Standard Water Pressure Model Under Drum Upper Drum Under Drum Dry Capacity Washing Capacity Washing Capacity 5.0kg 10.0kg 7.0kg Dimension Rated TWD-BL160D4 Series (W*D*H mm) Weight Power Power 600*630*1350 116kg 2000W 1300W...