

TOSHIBA

Toshiba EC034A2XC-S1 Instruction Manual

1	
Table Of Contents	
2	
3	
4	
5	
6	
7	
8	
9	
10	
11	
12	
13	
14	
15	
16	
17	

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36

--

•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks

--

[Download this manual](#)

Quick Links



MICROWAVE OVEN

INSTRUCTION MANUAL

TOSHIBA

EC034A2XC-S1

Please review this instruction manual before operating.

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba EC034A2XC-S1

[Microwave Oven Toshiba EC042A5C-BS Instructions Manual](#)

Microwave convection oven (37 pages)

[Microwave Oven Toshiba EC042A5C-BS Instruction Manual](#)

Microwave convection oven (44 pages)

[Microwave Oven Toshiba EC042A5C-BS Instructions Manual](#)

Convection oven (60 pages)

[Microwave Oven Toshiba EC9P032SV-SV Instruction Manual](#)

(27 pages)

[Microwave Oven Toshiba EC0P042SV-SSHA Instruction Manual](#)

(34 pages)

[Microwave Oven Toshiba EC042A5C-SS Instructions Manual](#)

Microwave convection oven (36 pages)

[Microwave Oven Toshiba EC0P042SV-S Instruction Manual](#)

(40 pages)

[Microwave Oven Toshiba EM131A5C-BS Instruction Manual](#)

Microwave solo oven (32 pages)

[Microwave Oven Toshiba EM131A5C-BS Instruction Manual](#)

Microwave solo oven (40 pages)

[Microwave Oven Toshiba EM925A5A-BS Instructions Manual](#)

Microwave solo oven (33 pages)

[Microwave Oven Toshiba EM925A5A-BS User Manual](#)

(47 pages)

[Microwave Oven Toshiba ER-TD5000HK Instruction Manual](#)

Microwave oven with superheated steam oven for household appliances (64 pages)

[Microwave Oven Toshiba ER-LD430C Instruction Manual](#)

Microwave oven with superheated steam oven (66 pages)

[Microwave Oven Toshiba EM131A5C-SS Instruction Manual](#)

Microwave solo oven (28 pages)

[Microwave Oven Toshiba EM925A5A-SS Instruction Manual](#)

Microwave solo oven (40 pages)

[Microwave Oven Toshiba EM925A5A-SS Instructions Manual](#)

Microwave solo oven (32 pages)

Summary of Contents for Toshiba EC034A2XC-S1

[Page 1](#) MICROWAVE OVEN INSTRUCTION MANUAL EC034A2XC-S1 Please review this instruction manual before operating.

[Page 2: Table Of Contents](#)

CONTENTS PRODUCT SAFETY Precautions to avoid possible exposure to excessive microwave energy Important safety instructions Grounding instructions Radio interference Utensils Materials you can use in microwave oven Materials can not be used in microwave oven PRODUCT SETTING Setting up your oven INSTRUCTION FOR USE Before using for the first time

Operation...

[Page 3](#) 11. Multi-stage cooking 12. Speed Cooking 13. Inquiring Function 14. Lock Function 15. Wi connection MAINTENANCE Trouble shooting One year limited warranty BEFORE OPERATING THIS PRODUCT, READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS. NOTE BE SURE TO SAVE THIS BOOKLIST FOR FUTURE REFERENCE. The hardware and software after-sale service can be received from the authorized dealer.

[Page 4: Product Safety](#)

(2). HINGES AND LATCHES (broken or loosened) (3). DOOR SEALS AND SEALING SURFACES (d). The oven should not be adjusted or repaired by anyone except properly qualified service personnel. SPECIFICATIONS MODEL EC034A2XC-S1 120 V~ 60 Hz RATED VOLTAGE 1500W MICROWAVE INPUT 1000W...

[Page 5: Important Safety Instructions](#)

IMPORTANT SAFETY INSTRUCTIONS When using electrical appliances basic safety precautions should be followed, including the following. To reduce the risk of burns, electric shock, fire, injury to persons or WARNING exposure to excessive microwave energy. Read all instructions before using When cleaning surfaces of door the appliance.

[Page 6](#) IMPORTANT SAFETY INSTRUCTIONS Oversized food or oversized metal Liquids, such as water, coffee, or utensils should not be inserted in toaster oven as they may reach the boiling point without create a fire or risk of electric shock. appearing to be boiling.

[Page 7](#) IMPORTANT SAFETY INSTRUCTIONS Do not let cord hang over edge of Use this appliance only for its table or counter. intended use as described in the manual. Do not use corrosive chemicals or vapors in this appliance. This type Do not use paper products when of oven is specifically designed to appliance is operated in the toaster heat, cook or dry food.

[Page 8: Grounding Instructions](#)

GROUNDING INSTRUCTIONS This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

[Page 9: Radio Interference](#)

RADIO INTERFERENCE 1. Operation of the microwave oven may cause interference to your radio, TV or similar equipment. 2. When there is interference, it may be reduced or eliminated by taking the following measures: (1). Clean door and sealing surface of the oven. (2).

[Page 10: Materials You Can Use In Microwave Oven](#)

MATERIALS YOU CAN USE IN MICROWAVE OVEN UTENSILS REMARKS Follow manufacturer's instructions. The bottom of browning dish must be at least 3/16 inch (5mm) above the turntable. Incorrect usage may cause Browning dish the turntable to break. Microwave-safe only. Follow manufacturer's instructions. Do not use cracked or chipped dishes.

[Page 11](#) MATERIALS YOU CAN USE IN MICROWAVE OVEN UTENSILS REMARKS Microwave-safe only. Follow the manufacturer's instructions. Should be labeled "Microwave Safe". Some plastic containers soften, as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be Plastic slit, pierced or vented as directed by package.

[Page 12: Materials Can Not Be Used In Microwave Oven](#)

MATERIALS CAN NOT BE USED IN MICROWAVE OVEN UTENSILS REMARKS May cause arcing. Transfer food into microwave-safe dish. Aluminum tray May cause arcing. Transfer food into microwave-safe dish. Food carton with metal handle Metal shields the food from microwave energy. Metal trim may cause arcing.

[Page 13: Product Setting](#)

PRODUCT SETTING SETTING UP YOUR OVEN NAMES OF MICROWAVE OVEN PARTS AND ACCESSORIES Remove the oven and all materials from the carton and oven cavity. Glass turntable Grill Rack(Can not be used in microwave function and must be placed on the glass

tray) Bake Tray (Only used for Instruction Manual Airfry)

[Page 14](#) **SETTING UP YOUR OVEN TURNTABLE INSTALLATION** Cleaning the cooking compartment and putting the turntable in place. For new installations, make sure all packaging and shipping tape has been removed from the turntable shaft. Before using the appliance to prepare food for the first time, you will need to put the turntable in place correctly.

[Page 15](#) **COUNTERTOP INSTALLATION** Remove all packing material and accessories. Examine the oven for any damage such as dents or broken door. Do not install if oven is damaged. Cabinet: Remove any protective film found on the microwave oven cabinet surface. Do not remove the light brown Mica cover that is attached to the oven cavity to protect the magnetron.

[Page 16: Instruction For Use](#)

INSTRUCTION FOR USE BEFORE USING FOR THE FIRST TIME It is normal that the stove may produce unpleasant odors when it is used for the first time. This section tells you what you need to do before using your microwave to prepare food for the first time.

[Page 17: Operation](#)

OPERATION CONTROL PANEL AND FEATURES...

[Page 18: Power Levels](#)

1. **POWER LEVELS** Ten power levels are available. **LEVEL POWER DISPLAY 100% PL10** 2. **CLOCK SETTING** When the microwave oven is plugged into an outlet, "0:00" will display. Press Clock once. Press number keys to set the time, it should be within 1:00~12:59.

[Page 19: Kitchen Timer](#)

3. **KITCHEN TIMER** When the microwave oven is plugged into an outlet, "0:00" will display. Timer Press Timer once. Press number keys to set the time, it should be within 00:01~99:99. Press to start counting down. • The Kitchen Timer setting is different from the Clock setting; it is simply a timer.

[Page 20: Grill Or Combination](#)

Press to confirm the power level. Press number keys to set the cook time, it should be within 00:01~99:99. Press to start cooking. • Press to increase the cook time by 30 seconds during cooking. **NOTE 5. GRILL Bake** Press Bake once, "G-1" will display. Press number keys to set the cook time, it should be within 00:01~99:99.

[Page 21: Convection With Preheat](#)

6. **Convection with preheat Conv.** Press Conv. once, "100°F" will display. Press number keys to set the temperature, "100°F, 150°F.....425°F" are available. Press to confirm. Press to start preheating. When the temperature has arrived, please open and then close the door to cancel preheat. Press number keys to set the cook time, it should be within 00:01~99:99.

[Page 22](#) Press number keys to set the temperature, "100°F, 150°F.....425°F" are available. Press to confirm. Press number keys to set the cook time, it should be within 00:01~99:99. Press to start cooking. 8. **COMBINATION** Press Combo once, "C-1" will display. Combo press Combo repeatedly to choose the mode, "C-1 and C-2"...

[Page 23: Auto Menu](#)

9. **WEIGHT DEFROST Pro Defrost** Press Pro Defrost once, "dEF1" will display. Press number keys to set the defrost weight, it should be within 4~2000Oz. Press to start defrosting. • The buzzer will sound twice to remind you of turning over the food during defrosting.

[Page 24: Multi-Stage Cooking](#)

Press to start defrosting. • The buzzer will sound to remind you of turning over the food when half of the time has passed. **NOTE** • The default power level is P30, it can not be changed. 11. **MULTI-STAGE COOKING Pro Defrost** Press Pro Defrost twice, "dEF2" will display.

[Page 25: Speed Cooking](#)

• Two cooking stages can be set in multi-stage cooking. • If you set defrost function, it will work

automatically in the rst stage. • Kitchen Timer, Auto menu, Speed cooking and Preheat cannot be set NOTE as one of the multi-stage. 12.

[Page 26](#) 13. AUTO MENU MENU CHART WEIGHT/ MENU DISPLAY POWER LEVEL PORTION 8.00 Oz 8.00 Oz 400°F 14.00 Oz 14.00 Oz PIZZA 1(about 8Oz) P100 POTATO 8.00 Oz 8.00 Oz 12.00 Oz 12.00 Oz MEAT 16.00 Oz 16.00 Oz 8.00 Oz 8.00 Oz 12.00 Oz 12.00 Oz...

[Page 27](#) WEIGHT/ MENU DISPLAY POWER LEVEL PORTION 4.00 Oz 4.00 Oz 8.00 Oz 8.00 Oz P100 VEGETABLE 16.00 Oz 16.00 Oz 1 Cup(120ml) P100 2 Cups BEVERAGE 3 Cups 1.75 Oz(with cold water15.8Oz) 1.75 Oz PASTA 3.5 Oz(with cold water28.2Oz) 3.5 Oz 3.0 Oz 3.0 Oz P100...

[Page 28](#) MENU CHART WEIGHT/ MENU DISPLAY POWER LEVEL PORTION Frozen French 11 Oz 425°F(without preheat) Fries Frozen croquettes 11 Oz 425°F(without preheat) Frozen Squid 10 Oz 425°F(without preheat) Frozen Onion 10 Oz 425°F(without preheat) rings Frozen chicken 12 Oz 425°F(without preheat) nuggets Frozen Escalope 14 Oz...

[Page 29: Inquiring Function](#)

16. ECO FUNCTION To enter ECO mode: In waiting state, press “Stop/Clear” once , the screen will turn o To cancel ECO mode: In ECO mode, press any keys to cancel it. 17. MUTE MODE To activate the mute mode: In waiting state, press and hold “8”...

[Page 30](#) CLEANING With good care and cleaning, your appliance will retain its appearance and remain fully functioning for a long time to come. We will explain here how you should correctly care for and clean your appliance. • Scratched glass in the appliance door may develop into a crack. Do not use a glass scraper, sharp or abrasive cleaning aids or detergents.

[Page 31](#) APPLIANCE FRONT WITH STAINLESS STEEL Hot soapy water: Clean using a dish cloth and then dry with a soft cloth. Remove splashes and patches of limescale, grease, starch and albumin immediately. Corrosion can form under these patches or splashes. Do not use glass cleaners or metal or glass scrapers for cleaning.

[Page 32: Maintenance](#)

MAINTENANCE TROUBLE SHOOTING Check your problem by using the chart below and try the solutions for each problem. If the microwave oven still does not work properly, contact the nearest authorized service center. TROUBLE POSSIBLE CAUSE POSSIBLE REMEDY a. Electrical cord for oven is not a.

[Page 33: One Year Limited Warranty](#)

If service is required during the warranty period, properly pack your unit. We recommend using the original carton and packing materials. If additional assistance is needed, please contact customer assistance at: customercare@us.toshiba-lifestyle.com 855-204-5313 Midea America Corp. expressly disclaims all responsibility for consequential damages or incidental losses caused by use of the appliance.

[Page 34](#) #DetailsMatter Customercare@us.toshiba-lifestyle.com 855-204-5313...