



# TOSHIBA

## Toshiba RG4-E02 User Manual

Toshiba pocket pc user manual



1	
Table Of Contents	
2	
3	
4	
5	
6	
7	
8	
9	
10	
11	
12	
13	
14	
15	
16	
17	

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67

68  
69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100  
101  
102  
103  
104  
105  
106  
107  
108  
109  
110  
111  
112  
113  
114  
115  
116  
117

118  
119  
120  
121  
122  
123  
124  
125  
126  
127  
128

--

•

- 

Troubleshooting



•

Bookmarks

--

[Download this manual](#)

### Quick Links





# TOSHIBA

## Pocket PC (RG4-E02)

### User Manual

Version 1.0

1

ManualsLib.com

[Table of Contents](#)

[Next Page](#)

1  
2  
3  
4  
5

# Related Manuals for Toshiba RG4-E02

## [PDA Toshiba e330 User Manual](#)

Pocket pc (105 pages)

## Summary of Contents for Toshiba RG4-E02

### [Page 1: User Manual](#)

TOSHIBA Pocket PC (RG4-E02) User Manual Version 1.0...

### [Page 2: Table Of Contents](#)

Contents NETWORK SERVICES ... 5 TOSHIBA CORPORATION ... 6 LICENSES TBD ... 10  
DECLARATION OF CONFORMITY ... 12 CARE AND MAINTENANCE TBD... 12 ... 12 ARE AND  
MAINTENANCE USB H TBD... 13 SING THE OST CABLE ... 13 ESTARTING YOUR OSHIBA PHONE ...

[Page 3](#) ... 67 USTOMER FEEDBACK ... 68 NCRYPTION ... 68 RROR EPORTING ... 69 XTERNAL  
SETTING ... 69 ASTER LEAR ... 69 ANAGING EMORY HANGING POWER MANAGEMENT SETTINGS  
... 70 HANGING REGIONAL SETTINGS ... 70 EMOVING ROGRAMS ... 71 CREEN DJUSTING ...

[Page 4](#) MENU TREE ... 127...

### [Page 5: Network Services](#)

Network services To use your Toshiba phone you must have service from a wireless service provider. Many of the features in your Toshiba phone depend on features in the wireless network to function. These Network Services may not be available on all networks or you may have to make specific arrangements with your service provider before you can utilise Network Services.

### [Page 6: Toshiba Corporation](#)

Toshiba Corporation IMPORTANT NOTE: PLEASE READ BEFORE USING YOUR MOBILE PHONE BY ATTEMPTING TO USE ANY SOFTWARE ON THE SUPPLIED PHONE CONSTITUTES YOUR ACCEPTANCE OF THESE EULA TERMS. IF YOU REJECT OR DO NOT AGREE WITH ALL THE TERMS OF THIS EULA, PLEASE DO NOT ATTEMPT TO ACCESS OR USE THE SUPPLIED SOFTWARE.

[Page 7](#) reserved to Toshiba, Toshiba's affiliates and/or their suppliers. 3. Reverse Engineering. You agree that you will not attempt, and if you are a business organisation, you will use your best efforts to prevent your employees, workers and contractors from attempting to reverse engineer, decompile, modify, translate or disassemble the Software in whole or in part except to the extent that such actions cannot be...

[Page 8](#) ARISING OUT OF: (I) THE USE OR INABILITY TO USE THE SOFTWARE, EVEN IF TOSHIBA, TOSHIBA'S AFFILIATES OR THEIR SUPPLIER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES; OR (II) ANY CLAIM BY A THIRD PARTY. SAVE AS SET OUT IN THIS SECTION, TOSHIBA'S ENTIRE LIABILITY UNDER THIS EULA SHALL NOT EXCEED THE PRICE PAID FOR THE SOFTWARE, IF ANY.

[Page 9](#) EU Warranty Your Toshiba phone contains no user serviceable parts. For further information on service please contact your retailer or service provider.

### [Page 10: Licenses Tbd](#)

Licenses Licensed by QUALCOMM Incorporated under one or more of the following United States Patents and/ or their counterparts in other nations: 4,901,307 5,504,773 5,109,390 5,535,239 5,267,262 5,600,754 5,416,797 5,778,338 5,490,165 5,101,501 5,511,073 5,267,261 5,568,483 5,414,796 5,659,569 5,056,109 5,506,865 5,228,054 5,544,196 5,337,338 5,657,420 5,710,784



Microsoft, MS-DOS, Windows, Windows NT, Windows Server, Windows Mobile, ActiveSync,...

[Page 11](#) This miniSDTM logo is a Trademark. Wi-Fi CERTIFIED is a Certification Mark of the Wi-Fi Alliance Pictel, Pictel Powered, Pictel Viewer, Pictel File Viewer, Pictel Document Viewer , Pictel PDF Viewer and the Pictel cube logo are trademarks or registered trademarks of Pictel Technologies and/ or its affiliates.

## [Page 12: Declaration Of Conformity](#)

Declaration of conformity Care and Maintenance Care and maintenance You can greatly enhance the life span of your Toshiba phone, and the parts and accessories, by following the suggestions below. TIP: Maintaining your Toshiba phone, and the parts and accessories, in a good condition will help you fulfil the warranty obligations •...

## [Page 13: Using The Usb Host Cable Tbd](#)

or cleaning solvents to clean your Toshiba phone. Use a soft, clean, dry, lint-free cloth to clean the phone. • Do not use water to clean the Touch screen. • Keep the Touch screen and tip of the Stylus clean for avoiding permanent damage.

## [Page 14: Initialising Your Toshiba Phone](#)

(refer Getting Started section for instructions) and re-insert the battery turn your Toshiba phone on (refer Getting Started section for instructions). If you reset your Toshiba phone, the data that you have saved might be lost. Initialising your Toshiba phone You should only use this procedure as a last resort.

## [Page 15: Fcc Notice](#)

Please take care when using the Bluetooth feature. FCC notice This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

## [Page 16: Getting Started Tbd](#)

Getting started Unpacking Please ensure that the contents of your sales pack include: • Your Toshiba phone • Stylus • AC adapter • AC cable • Battery pack • USB Client cable • USB Host cable • Earphones • User guide •...

[Page 17](#) Phone layout and functions Program button 4 Program button 1,2 (left ,right) Program button 3 Program button initial settings Program button 1 = Contacts Program button 2 = Messaging Program button 3 = Camera Program button 4 = Internet 1. Earpiece 2.

[Page 18](#) 18. Fingerprint sensor 19. Cover lock button - locks and unlocks battery cover. 20. Power key - press and hold to turns power on/off. Press to enter to suspend mode / wakeup from suspend mode. 21. Battery cover 22. Flash light 23.

## [Page 19: Today Screen](#)

Today screen You can access the Today screen from any menu by pressing the End key. Important information such as date, time, status indicators, appointments and profile are displayed on the Today screen. You can open a program directly by selecting the relevant icon and pressing the Action key.

## [Page 20: Start Menu](#)

Start Menu 1. From the Today screen, tap Start. 2. Tap a program with the stylus. 1. Today 2. Pinned applications. 3. Most Recent Program (Maximum 10 items) 4. Programs. 5. Settings 6. Help. NOTE: The Pinned applications and Help can be selected from a list of items in the menu Control Panel application.

[Page 21](#) Display indicators Slot Type 1 Notification icons 2 Roaming icons Icon Description Missed call New Voice mail(s) (\* 1) New Voice mail(s) (\*1) no voicemail (\* 1) New Voice mail(s) (\*1) New Voice mail(s) (\*1) voice mail at line1 Voice mail at line2 Voice mail at both lines New e-mail(s) or text message(s) New instant message(s)

[Page 22](#) Slot Type Alarm icon Speakerphone icon Caution 3 Data icons Icon Description CDMA

in range (Not supported) EDGE in range EDGE Roaming 3G in range 3G Roaming Pending Alarm  
Speakerphone is on Duplication of notifications Data call Off Data call connected GPRS in  
progress ActiveSync over GPRS in use 3G in progress...

[Page 23](#) Slot Type 4 Signal strength icons 5 Volume icons Icon Description ActiveSync over  
EDGE in use Wi- Fi on ActiveSync over Wi- Fi in use ActiveSync in progress Signal strength  
Voice/ Video Call in progress Data call in progress Radio off Radio no service Radio connected  
Radio lost signal...

[Page 24](#) Slot Type 6 Mini time Battery st rength icons (\* 2) \*1: Missed Call Notification icon is  
depended on the Network Provider. "New voicemail" is displayed when the network supports  
the voicemail Mailbox status in SMS. The other case displays 2 "New voicemail".

### [Page 25: Installing The Sim Card, Battery And Minisd Card](#)

Installing the SIM card, battery and miniSD card IMPORTANT: The SIM card is easily damaged  
into by scratching and bending, so take care with handling it. • Press the Cover Lock button (1)  
down, lift the battery cover (2) upwards and remove the battery from the battery compartment.

[Page 26](#) • Insert the battery into the battery compartment with the gold connectors facing  
downwards. Gently push down to snap into place. • Gently click battery cover (2) into position.  
• Open the memory card slot cover. Slide the miniSD card into the miniSD slot (5). •...

### [Page 27: Pull Out / Put In The Stylus](#)

Pull out / put in the stylus Pull out the stylus from stylus slot (7). Put in the stylus to stylus slot  
(7). Using the stylus The stylus is used for menu selection or data input on the Touch screen of  
your Toshiba phone. •...

### [Page 28: Charging The Battery](#)

Charging the battery You need to fully charge the battery before you can switch your Toshiba  
phone on for the first time. The battery will only achieve optimum performance after two or  
three complete charges. You can charge your battery in the following two ways: 1.

### [Page 29: Switching The Power On And Off](#)

Optimizing the power performance Refer to Changing power management settings and  
Backlight setting sections. Managing a low battery When the low battery warning is displayed,  
do the following: 1. Save your current data. 2. Charge the battery as soon as possible. 3.

### [Page 30: Synchronizing](#)

Synchronizing ActiveSync allows you to create a synchronization relationship between your  
Toshiba phone and PC, and between your Toshiba phone and your Exchange server. This means  
that the shared data is always consistent. If you make a change, it is automatically made to the  
corresponding information on the other computer.

[Page 31](#) Changing ActiveSync settings Once you have set up synchronization using the  
ActiveSync Setup Wizard on the PC, you can change your synchronization settings at a later  
stage: • If you want to change ActiveSync settings for synchronizing with a PC, use ActiveSync  
on the PC.

### [Page 32: Call Functions](#)

Call functions Making a call You can make calls from the Today screen, Phone screen, Contacts,  
SIM contacts or Call history menus, or via speed dial. Before making a call, ensure that your  
Toshiba phone is switched on, that there is a valid SIM card installed, and that the signal is  
sufficiently strong.

[Page 33](#) Assigning the number You can assign a work phone number (w), mobile phone  
number (m) and a home phone number (h) to a contact. The mobile phone number is dialled by  
default, unless you expand the list and scroll down to the phone number required.

### [Page 34: Receiving A Call](#)

Voice mail speed dial The voice mail speed dial is normally pre-configured. If it is not pre-  
configured, you can save your voice mail number by tapping Phone > Speed Dial > Voice mail

and create a speed dial entry, as explained above. Contact your Service Provider to access the voice mail number.

**Page 35** 1. From the Today screen, tap Start > Settings > Phone > Service tab > Call Waiting 2. Tap Get Settings... A tick is placed in the box. 3. Tap ok. Once the call waiting option has been enabled on your Toshiba phone and the settings have automatically been sent and accepted by your Service Provider, you will receive an audible and visual notification on your...

### **Page 36: Special Dialing Requirements**

speakerphone is activated. 2. To switch the speakerphone off, tap Menu > Speakerphone Off. NOTE: The speakerphone mode will not be automatically enabled in your next call, even if you left the function switched on in the previous call Placing a call on hands free mode When the hands free equipment is attached the phone, hands free mode option will be enabled.

### **Page 37: Ideo Telephony**

from the keypad. Video telephony Video calls allow you to enjoy live 'face-to-face' conversations with friends, family and colleagues. Making a video call Before making a video call, you must confirm that the person you are video calling also has a video enabled phone.

### **Page 38: Messaging**

Messaging This chapter describes how you can create, send, receive, organise, delete and store the following message types on your Toshiba phone: • Text (SMS, Short Message Service) message • Outlook email • Multimedia message (MMS) You can also use the instant messaging application, Windows Live Messenger, from your Toshiba phone.

### **Page 39: Text (Sms) Messaging**

sure) Message tab: Set up the following messaging • features ; when replying to e-mail, include body, keep copies of sent items in sent folder, and the display after deleting or moving a message feature. Address tab: Select whether to get E-mails from all •...

**Page 40** Delivery notification To request Delivery notification: 1. Tap Menu > Message Options whilst in the Text Message creation screen. 2. Tap the box in the Request message delivery notification field. 3. Tap OK. Your request is sent to your Service Provider.

### **Page 41: E-Mail**

want to delete and tap Delete Menu> E-mail Before you can send or receive emails, you need to set up an email account. Your Toshiba phone supports the following types of email accounts (all of which are covered in this section): •...

**Page 42** WARNING: If you save your password and then lose your Toshiba phone, you run the risk of someone else being able to access your email account. 7. Tap Next. 8. Enter the name of your outgoing email server (SMTP). 9. Tap the box in the Outgoing mail requires authentication if the outgoing server requires authentication.

**Page 43** password for sending e-mail when you want. 15. Tap Next. 16. Select the frequency to send and receive your e-mail from Automatic Send/Receive field 17. Download messages field enables you to set download message range from the server.. 18. Tap the Advanced Setting to set additional settings if you want.

**Page 44** Viewing your Inbox message list From the Today screen, Tap Start > Messaging, and tap an account. The Inbox message list displays your received messages. Create an email message 1. From the Today screen, tap Start > Messaging. 2. Tap an email account. 3.

**Page 45** Sending and receiving email messages 1. From the Today screen, tap Start > Messaging. 2. Tap the email account that you want to send and receive messages. 3. Tap Menu > Send/Receive. Your Toshiba phone connects to your Internet email server and sends and receives your messages.

### **Page 46: Mms Messaging**

2. Tap the new folder you wish to view. MMS messaging The Multimedia Messaging Service (MMS) allows you to exchange multimedia messages containing data such as text, pictures, sounds, animation and video clips. You can send MMS messages to other mobile phones or to

email addresses.

**Page 47** Adding text to the MMS message Tap the Insert Text here area and enter your message. To use predefined text, tap Menu > Insert Media > My Text. Using/creating templates Tap Menu > Template > New From Template... and choose a template to use or create a new one yourself. Selecting a message background colour To choose the message background colour, tap Menu >...

**Page 48** • New: create new message. • Reply: replies to all and forwards current message. • Mark as read/unread: marks current item as unread/read. • Move: moves current message into another folder. • Go to: switches to other folder (including Drafts, Outbox, Inbox, Sent Items and Deleted Items) and between Text Message, Outlook Email and MMS.

### **Page 49: Windows Live Messenger**

•Server address: enter the address of the server, as supplied by your Service Provider.  
•Connect Via: point the MMS server towards the correct connection point. If you set up the MMS using the Secure WAP network setting, you must select the Secure WAP network setting here.  
•Max sending size: please contact your Service Provider to obtain this value.

### **Page 50: Text Input**

To obtain a Passport, go to: <http://www.passport.com>. To create a Hotmail account, go to: <http://www.hotmail.com>. Windows Live Messenger overview With Windows Live Messenger you can send instant messages to your contacts' mobile device or PC. To use Windows Live Messenger, you need Microsoft Passport Network credentials.

### **Page 51: Keyboard**

write individual letters, numbers and punctuation, which are then converted into typed text. To use Block Recognizer, Tap the Selector arrow, and tap Block Recognizer. The handwriting area is divided into two designated parts: abc, and 123 (both dimmed). Write characters, numbers, symbols, and punctuation in separate area: •...

### **Page 52: Transcriber**

Write characters, numbers, symbols, and punctuation in separate area: • Write in the ABC area to enter capital letters. • Write in the abc area to enter lowercase letters. • Write in the 123 area to enter numbers. • Tap the box in the right corner labeled "@\$\*" to open table of symbols and punctuation.

**Page 53** toolbar. The keyboard remains visible until you tap the button again. TIP: To reposition the keyboard, tap and hold the title bar, and then drag to the desired location. When no text is selected, you can also open the keyboard by doing the To edit text 1.

**Page 54** Change capitalization selected letter, word, or block of text. Do the gesture by drawing a line straight up. Undo the last action. Do the gesture by drawing a line straight up and back down. Copy the selected text. Do the gesture by drawing a line from left to right and back.

**Page 55** you do not use or to learn methods of writing characters that will make them easier for Transcriber to recognize. • Try writing in another format. If you have been printing, try writing cursive, or if you have been writing in both cursive and print, try printing alone. •...

**Page 56** the default mode once you lift the stylus. Insert a space at the cursor. Insert a paragraph return at the cursor. Move the cursor one space to the left. Move the cursor one space to the right. Move the cursor one space back and erase any text.

### **Page 57: Searching**

To draw a note To draw on the screen, use the stylus. 1. Tap Start > Programs > Notes. 2. In the note list, tap New. 3. Tap Menu > Draw, and cross at least three ruled lines. 4. A selection box labeled Drawing appears around your drawing.

### **Page 58: Settings**

Settings Reassigning button functions There already are programs that assigned to the hardware buttons, however, you may not satisfied with some assignments as you want those

often-in-use programs to replace the ones rarely run. To reassign a button: 1. From the Today screen, tap Start > Settings >...

### [Page 59: Input Method Setting](#)

Input method setting 1. From the Today screen, tap Start > Settings > Personal tab > Input. 2. On the Input method tab, tap a desired input method. On the Word Completion tab, tap a desired setting for word completion. On the Options tab, tap the desired options for writing and recording.

[Page 60](#) a password every time the device is turned on. 1. From the Today screen, tap Start > Settings > Personal tab > Lock. 2. Tap the Prompt if device unused for check box, and in the box to the right, select how long your device must be turned off before a password is required.

### [Page 61: Customizing Your Start Menu](#)

item. 3. Tap OK. Customizing your Start Menu You can select/deselect items/programs in the combo box to let it appear on/disappear from the Start Menu. 1. From the Today screen, Tap Start > Settings > Personal tab > Menus. NOTE: Only 7 programs are allowed on the Start Menu.

[Page 62](#) 2. Tap the Ring type box to find the type (ring, vibration, or combination of both) you preferred. 3. Tap the Ring tone box to select a tune you like. You can tap the control buttons to listen to the sample. TIP: you can also use custom \*.wav, \*.mid, \*.mp3, or \*.wma files as ring tones.

### [Page 63: Sounds And Notifications](#)

phone when you call them. To configure Caller ID: 1. From the Today screen, tap Start > Settings > Personal tab > Phone > Service tab. 2. Focus on Caller ID service type, and tap the Get Settings button to retrieve settings from network; you can also change them here.

### [Page 64: Customizing Your Today Screen](#)

You can set a different sound for different events. The sound can be set the different type every event. TIP: You can copy sounds to your phone from your PC using ActiveSync. Sound files can be in either midi, wma, mp3, amr or wav file format.

### [Page 65: Ideo Call Settings](#)

box. Tab Browse to view the picture files. 2. Tap the file name of the picture you choose. 3. Tap OK. Setting appointment display in Calendar Options 1. On the Items tab, tap Calendar then tap the Options... button. 2. On the Options screen, tap the followings; •...

### [Page 66: Backlight Setting](#)

1. From the Today screen, tap Start > Settings > System tab > About. 2. On the Version tab, you see information on version, copyright, and hardware. 3. Tap OK. Changing Device ID 1. From the Today screen, tap Start > Settings >...

### [Page 67: Clock & Alarm Settings](#)

Clock & alarm settings Setting the date and time 1. From the Today screen, tap Start > Settings > System tab > Clock & Alarm > Time tab. 2. In Home, you set the time zone, current time and date in your homeland. 3.

### [Page 68: Encryption](#)

address, or any other personally identifiable information. You will not incur any data changes to send the information. Encryption This feature allows you to secure sensitive information on your Toshiba phone's removable storage card. The data is only accessible when the card is installed in their particular mobile device.

### [Page 69: External Gps Setting](#)

External GPS setting 1. From the Today screen, tap Start > Settings > System tab > External GPS. 2. On the Programs tab, you can choose the port that your Toshiba phone will use to obtain GPS data. 3. On the Hardware tab, you can specify the hardware port to which your GPS device is connected.

## [Page 70: Changing Power Management Settings](#)

To end a program You can close programs manually to release more memory. 1. From the Today screen, tap Start > Settings > System tab > Memory > Running Program tab. 2. In the Running Programs list, tap the program you want to close, and tap Stop or Stop All to stop all running programs.

## [Page 71: Screen Adjusting](#)

programs. Removing a program NOTE: Programs that come with your Toshiba phone cannot be removed. 1. From the Today screen, tap Start > Settings > System tab > Remove Programs. 2. Choose the program to remove In the Programs in storage memory list.

## [Page 72: Windows Update](#)

2. Tap OK. Windows Update You can use Window Update to update the Microsoft programs on your Toshiba phone. 1. From the Today screen, tap Start > Settings > System tab > Windows Update. You can select the check way on your Toshiba phone for important updates or optional updates from the Menu >...

[Page 73](#) Internet, while My Work Network settings can be used to connect to any private, corporate network. NOTE: Before you begin, obtain the following information: • From your cellular phone service provider: data connectivity plan information, access point name, and PAP/CHAP security settings. •...

[Page 74](#) Advances.... And enter the followings information: Use server-assigned IP address – check the radio button on if you automatically configure IP address. Use specific IP address – check the radio button on, and enter manually IP address. Use software compression – check the box on if you use.

[Page 75](#) before creating a proxy connection. To create a proxy connection: 1. From the Today screen, tap Start > Settings > Connections tab > Connections. 2. Tap Set up my proxy server in the My Work Network. 3. Check the box of This network connects to the Internet on, and enter the Proxy server:.

## [Page 76: Bluetooth](#)

NOTE: Similarly, select the connection you wish to use for the WAP network. NOTE: The Work Network connection is used if you are planning to use a Virtual Private Network connection. Bluetooth Bluetooth has three modes: Off, On and Visible. When Bluetooth is set to On, your Toshiba phone will be connected to the devices it is already paired with, but will not be visible to new devices.

[Page 77](#) (recommended for enhanced security), enter an alphanumeric pass code, between 1 and 16 characters in length, and tap Next. Alternatively, leave the pass code blank, and tap Next. 4. Enter the same pass code on the partnering device and respond to any prompts. Ending a Bluetooth partnership 1.

## [Page 78: Beams](#)

COM port. You can use a virtual COM port for programs that, for example, connect to a GPS receiver, or to connect to a Bluetooth-enabled printer. The New Outgoing Port menu command is available only if one or more Bluetooth-connected devices support serial (COM) connections.

[Page 79](#) receive beamed data 1. From the Today screen, tap Start > Settings > Connections tab > Beam > Receive incoming Beams box. 2. Tap OK. Receiving beamed data For security reasons, your Toshiba phone is set by default not to receive beamed data. To receive beamed data: 1.

## [Page 80: Wireless Manager](#)

the current Wi-Fi status displayed in this screen. 2. Highlight Wi-Fi, and then tap Menu > Wi-Fi Settings to configure wireless networks. 3. When the networks are detected, select a network from the list displayed. To configure the network adaptor: 1.

## [Page 81: Usb Mass Storage](#)

> Connections tab. 2. Tap USB to PC. 3. Tap the relevant box to enable advanced network

functionality. 4. Tap OK. USB mass storage Change the type of USB connection. 1. From the Today screen, tap Start > Settings > > Connections tab.

## [Page 82: Applications And Multimedia](#)

Applications and multimedia Your Toshiba phone is installed with the following applications: • Games • Office Mobile • ActiveSync • Calculator • Calendar • Camera • Contacts • File Explorer • Finger Launcher • Help • Internet Explorer • Internet Sharing • ...

## [Page 83: Games](#)

Games To access the games on your Toshiba phone: 1. From the Today screen, tap Start > Programs > Games. 2. Select the game to play. Office Mobile To access the Office Mobile on your Toshiba phone: 1. From the Today screen, tap Start > Programs > Office Mobile 2. Tap the selected office applications Word Mobile...

## [Page 84: Activesync](#)

\*.ppt and \*.pps format with PowerPoint '97 and later can be viewed on your device. Many presentation elements built into the slide shows such as slide transitions and animations will play back on the device. If the presentation is set up as a timed slide show, one slide will advance to the next automatically.

## [Page 85: Calendar](#)

Calendar The Calendar application works like an electronic diary, allowing you to organize your events. Your entries can then be displayed as reminders on your Toshiba phone. Also, if you also use Outlook on your PC, you can synchronize the information between your PC and your phone.

[Page 86](#) NOTE: When you delete a Calendar appointment on your Toshiba phone, it is also deleted on your PC the next time you synchronize. But if the appointment has not been synchronized with a PC, it will only be deleted from your phone. TIP: To cancel a deletion, select Back.

## [Page 87: Camera](#)

Viewing your schedule for the month From the Today screen, tap Start > Programs > Calendar > Menu > View > Month. Camera Your Toshiba phone is equipped with a digital camera which can be used to capture photos and video clips. Capturing a photograph You can launch the camera application in the following ways:...

[Page 88](#) level depends on the size of the picture being taken. • Landscape: captures photos or videos in a wide-angle view, in a way that the longer side runs from side to side. ( • Portrait: captures photos or videos in a way that the longer side runs from top to bottom.

## [Page 89: Contacts](#)

phone are saved on the phone memory by default. But, you can set your phone to save pictures and video files to your miniSD card. To store pictures and videos on your miniSD card: 1. Ensure that a miniSD card has been inserted into your Toshiba phone (refer to the Getting started section for installation instructions).

[Page 90](#) well. 1. From the Today screen, tap Start > Programs > Contacts > New. 2. Tap SIM Contact. 3. Enter the contact's information. 4. Tap ok. TIP: To save an existing contact to your SIM, select the contact and tap Menu > Save to SIM.

[Page 91](#) Deleting a contact 1. From the Today screen, tap Start > Programs > Contacts. 2. Tap the contact. 3. Tap Menu > Delete Contact. Adding a picture to a contact 1. From the Today screen, tap Start > Programs > Contacts.

## [Page 92: File Explorer](#)

information and tap Send. NOTE: You can send the contact information using BEAM . Assigning a category to a contact You can use categories to help organize your contacts. To assign a category to a contact: 1. From the Today screen, tap Start > Programs > Contacts.



## [Page 93: Finger Launcher](#)

Finger Launcher The Finger Launch application helps ensure the security of the data on your Toshiba phone. To access the Finger Launch application: 1. From the Today screen, tap Start > Programs> Finger Launcher. The Fingerprint Launcher screen is displayed. 2.

[Page 94](#) 1. From the Today screen, tap Start > Programs Internet Explorer. 2. Enter the address. 3. Tap Search icon. Changing the Home pages 1. While on a web page, tap Menu > Tools > Options > General tab. 2. Select the home you want. Use Current: use the displayed page as your Home page.

## [Page 95: Internet Sharing](#)

Internet Explorer Mobile supports the protocols used by Secure Sockets Layer (SSL). A connection that uses SSL helps you to send personal information more safely. Cookies are small files containing information about your identity and preferences so that a page can tailor information to your needs.

[Page 96](#) • Activate • Pending Install • New Folder • Options • Uninstall All • Certificates • About • Exit Installing a Java application From the Today screen, tap Start > Programs > Java > Menu > Install. You must now select where to access the MIDlets from: •...

## [Page 97: Messaging](#)

Messaging For more information, please refer to the Messaging section. Notes Notes is a tool to capture thought, questions, reminders, to-do lists and meeting notes by handwriting, typing or recording the voice. To set the default input mode 1. From the Today screen, tap Start > Programs > Notes >...

## [Page 98: Phone](#)

3. Tap the desired link. Menu items on the Opera Browser To access the Opera Browser menu items, from the Today screen, tap Start > Programs > Opera Browser > Menu. The Opera Browser has the following menu items: • Windows: manages the window. •...

[Page 99](#) You can view pictures and videos stored on your Toshiba phone or miniSD card using the Pictures & Videos application. You can also set a picture to be your Today screen background, or you can send an image to a contact. To view pictures and videos, from the Today screen, tap Start >...

## [Page 100: Search](#)

From within the Pictures & Videos application, tap a picture. Sending a picture 1. From within the Pictures & Videos application, tap Menu > Send. 2. Select the sending method. 3. Enter the destination number and tap Send. Tap Menu for a list of additional options. When viewing a picture, tap Menu to access the following settings: •...

## [Page 101: Sim Toolkit](#)

• Select All: check the boxes of all contacts data. • Deselect All: uncheck the boxes of all contacts data. SIM Toolkit When you install the SIM that has some applications, you can select the application to execute from the SIM.

## [Page 102: Window Live](#)

Changing the task settings 1. From the Today screen, tap Start > Programs > Tasks . 2. Tap the task that you want to change and tap Edit. 3. Tap the item that you want to change. 4. Tap ok after finishing the set. Deleting a task 1.

## [Page 103: Windows Media Player](#)

1. From the Today screen, tap Start > Programs > Windows Live. 2. Tap and enter the word for search in the search box and tap search icon or tap Sign in to Windows Live to sign in. Windows Media Player Overview of Windows Media Player Mobile You can use Windows Media 10 Mobile to play digital audio and video files that are stored on your Toshiba...

[Page 104](#) and Volume), the star rating of the current file, the album art window, and the video window. You can change the appearance of this screen by selecting a different skin. • Now Playing screen - displays the Now Playing playlist, which indicates the file currently playing



as well as any files in the queue.

[Page 105](#) • Open File: allows easy access of files that are not in the library. • Open URL: allows you to play a file on a network, such as the Internet. • Properties: displays information about the selected file. Overview of licenses and protected files Protected files are digital media files that are secured with a license to prevent unauthorized distribution or playback.

[Page 106](#) Library, and select the library that you want to use, for example Storage Card. 2. Tap a category (for example, My Music or My Playlists), and select the item that you want to play (such as a song, album, or artist name). 3.

### [Page 107: Windows Update](#)

2. Press the Right or Left Navigation key to view the skins. Select the skin you want. 3. Tap ok. NOTE: To download new skins, access the WMplugins.com website at: [www.wmplugins.com](http://www.wmplugins.com). After downloading a skin to your computer, use ActiveSync to copy the .skn and .bmp files to your Toshiba phone.

[Page 108](#) • The Teleport application supports the following communication options: USB, Bluetooth, and Wi-Fi. • Establish a connection between your Toshiba phone and the PC before using the Teleport application. Select either the Remote Keypad or Remote Screen buttons, on the PC. NOTE: When using Teleport with Wi-Fi, you will need to set Turn off device if not used for is uncheck from Start >...

### [Page 109: Tiptalk](#)

PIN Code, from within the Teleport application. • Help: To view instructions for using Teleport on the phone, tap Menu > Help. • About: To view the Teleport version, tap Menu > About, from within the Teleport application. • Exit: To quit the Teleport application, tap Menu > Exit, from within the Teleport application.

[Page 110](#) Tap Start > Programs > TIPTalk. A configuration dialog is displayed when you launch TIPTalk for the first time. Please refer to Configuring TIPTalk section. Calling an IP phone 1. From within the TIPTalk application, tap the Contacts tab. 2. Select a contact from your contact list. 3.

[Page 111](#) From within the TIPTalk application, tap Menu > Voice Service > Mute. To reactivate the microphone tap Menu > Voice Service > Mute again. Switching to handsfree mode From within the TIPTalk application, tap Menu > Voice Service > Handsfree. To deactivate the handsfree mode, simply tap Menu >...

### [Page 112: Goldkey](#)

Configuring TIPTalk 1. From within the TIPTalk application, tap Menu > Configuration. 2. Enter your user name, password, server IP, and server port. In addition, if two or more network adapters are shown, designate a network adapter to use. NOTE: If you select the Automatic answer box, TIPTalk will automatically answer a call.

[Page 113](#) of x2 (200%). It can be set to the following levels: • x2 (200%) • x4 (400%) • x8 (800%) To launch the Zoom application, press and hold the Up Side key. Use the following keys when using the Zoom application: •...

### [Page 114: Specification](#)

Specification System Information Processor Memory Operating System UMTS/HSDPA GSM/GPRS/EDGE Frequency Range Within 3G (UMTS) 2100 Within GSM 900 Within DCS 1800 Within PCS 1900 Continuous Talk Time Within 3G (UMTS) area Video Call Within GSM area Continuous Standby Time Within 3G (UMTS) area Within GSM area Charging Time Dimensions (H x...

[Page 115](#) Maximum Output Within 3G (UMTS) 2100 Within GSM 900 Within DCS 1800 Within PCS 1900 Weight AC Adapter Input Voltage Charging Temperature Range Display Resolution Audio/Video Codec Audio Video Class 3 0.25 W Class 4 Class 1 Class 1 Approx. ???g 100 to 240 VAC 5 to 35 °C 3.0"...

[Page 116](#) Connection Bluetooth Wireless LAN Interface Cable and Phone Charging Headset Connector Expansion Slot Bluetooth™ ver 2.0 + EDR (Power Class 2) (Generic al Access Profile)

SPP (Serial Port Profile) HSP (Headset Profile) OPP (Object Push Profile) HFP (Hands Free Profile)  
GOEP (Generic Object Exchange Profile) PANP (Personal Area Networking Profile)

### [Page 117: Troubleshooting](#)

Troubleshooting Problem Possible Causes and Solutions Cannot turn the • Ensure that the battery is inserted correctly (pg XX). power on • Ensure that the battery is charged (pg XX). Cannot charge the • Ensure that the battery is inserted correctly. battery •...

[Page 118](#) Cannot use SMS • Check your subscription status. Contact your service provider. and MMS • Ensure that the service centre number is correct. For details on the service centre number, contact your service provider.

### [Page 119: Health And Safety](#)

Health and Safety General • Always use your Toshiba phone in the intended manner. Incorrect usage may affect performance. Only qualified service personnel should install or repair the phone and its accessories. • To avoid permanent damage to your Toshiba phone, use only Toshiba approved batteries and accessories.

### [Page 120: Operating Environment](#)

Operating Environment • Do not handle your Toshiba phone while driving or when operating machinery. If you must handle the phone while driving, park the vehicle before conversing. If using an integrated hands free device, make sure the phone is securely placed in its holder.

### [Page 121: Electronic Devices](#)

Electronic Devices • If you wear a pacemaker, or are in the company of someone who does, you should be aware that there is a small risk of mobile phone usage interfering with the operation of the pacemaker. You should contact your doctor, or the manufacturer of the pacemaker, for more information.

### [Page 122: Ac Adapter And Cable Safety](#)

• Do not short-circuit the battery. Accidental shortcircuiting can occur when a metallic object causes a direct connection between the + and - terminals of the battery. • Do not leave the battery in areas of extreme cold or heat as this will affect the performance of the battery.

### [Page 123: Emergency Calls](#)

Emergency calls Calls cannot be made to emergency services while data communication is being performed within a GSM area. If the system mode is set to UMTS Only or GSM Only, calls cannot be made to emergency services if the selected network is unavailable. Also, calls may not be able to be made to emergency services depending on the network services of some service providers.

### [Page 124: Body-Warm Operation](#)

FCC and can be found under the Display Grant section of [http:// www.fcc.gov/oet/fccid](http://www.fcc.gov/oet/fccid) after searching on FCC ID SP2-RG4-E02. Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) website at <http://www.phonefacts.net>.

[Page 125](#) The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They state that if you want to reduce your exposure then you can do so by limiting the length of calls or using a 'hands-free'...

### [Page 126: Purchase Records](#)

Purchase records For your future reference, we recommend that you fill in your purchase details in the form below. Serial Number\*: Dealer Name: Purchase Date: \* The serial number is printed on the bottom of the battery compartment.

### [Page 127: Menu Tree](#)

Menu tree Programs Notes Games Opera Browser Office Mobile Phone Picxel Viewer 1 Excel Mobile Pictures & Videos 2 PowerPoint Search 3 Word Mobile ActiveSync SIM Manager Calculator (SIM Toolkit) Calendar Tasks Camera Teleport Contacts TIptalk File Explorer (SIM Toolkit)

FingerLauncher Windows Live Messenger GoldKey...