

 
Operation With The Remote Control Unit; Automatic Operation; Manual Operation - Sanyo CH3082 Technical & Service Manual

Dc inverter split system air conditioner

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68

69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109



•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks



OPERATION WITH THE REMOTE CONTROL UNIT

1. Automatic Operation

This unit automatically switches between cooling operation and heating operation according to the difference between the room temperature and the temperature setting.

Check that the circuit breaker on the power panel is



NOTE

turned on.

Once

mode is selected and the unit is preset by following the steps below, you can have the air conditioner automatically bring the room to the desired temperature simply by pressing the ON/OFF operation button.

STEP 1

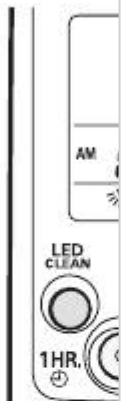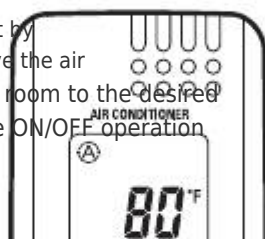

Press the MODE selector button to

STEP 2

Press the ON/OFF operation button.

To stop the air conditioner, press the ON/OFF operation button again.

- To change the temperature setting; press the

NOTE

temperature setting buttons and change the setting to the desired temperature.

OI-149-9-EG

2. Manual Operation

STEP 2

STEP 4

STEP 5

NOTE

STEP 1

NOTE

Check that the circuit breaker on the power panel is turned on.

If the automatic operation settings of the unit do not meet your needs, press the setting buttons described below and change the settings as desired.

STEP 1

Press the MODE selector button and select the desired mode.

For heating operation

For dehumidifying operation

For cooling operation

For fan only operation

STEP 2

To start the air conditioner, press the ON/OFF operation button.

STEP 3

Press the TEMP. setting buttons to change the temperature setting to the desired temperature.

Adjustable temperature range:

30 °C max.

or

16 °C min.

STEP 4

Set the FAN SPEED selector button to the setting you want.

STEP 5


Press the FLAP button and set the airflow direction as desired.

(Refer to "ADJUSTING THE AIRFLOW DIRECTION" on page 15.)

To stop the air conditioner, press the ON/OFF operation button again.

- Choose the best position in the room for the remote control unit, which also acts as the sensor for room comfort and transmits the operating instructions. Once you've found this best position, always keep the remote control unit there.

- This appliance has a built-in 5-minute time delay circuit to ensure reliable operation. When the

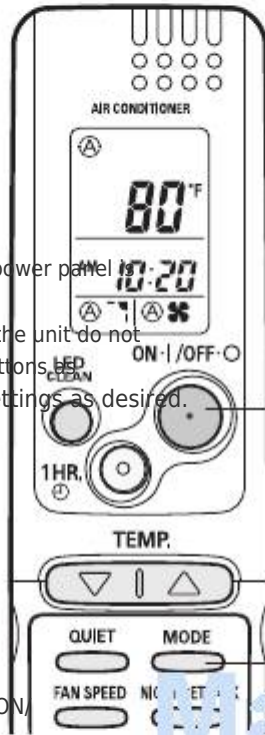

ManualsLib.com

operation button is pressed, the compressor will start running within three minutes. In the event of power failure, the unit will stop.

STEP 2

STEP 3

STEP 1

→

→

 
→

→

86 °F max.

60 °F min.

9



[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
66
67
68
69
70
71
72
73

Quick Links:

[Unit Specifications](#)

[Troubleshooting](#)

[Self-Diagnostics Lamps](#)

Chapters

[Table of Contents](#) 4

[Features](#) 62

[Installation Instructions](#) 79

Troubleshooting

[TROUBLESHOOTING](#) 41

[TROUBLESHOOTING](#) 77

Related Manuals for Sanyo CH3082

[Heat Pump Sanyo 30KHS82 Specifications](#)

Wall mounted heat pump (2 pages)

[Air Conditioner Sanyo COOL/DRY/HEAT KHS3082 Instruction Manual](#)

Inverter-controlled split system air conditioner cool/dry/heat model (36 pages)

[Heat Pump Sanyo 36KHS82 Submittal Data](#)

Split system vz-185led-p (2 pages)

[Air Conditioner Sanyo 26K72R Dimensional Data](#)

Wall mounted type outdoor/indoor unit (1 page)

[Air Conditioner Sanyo C4272R S/C Installation Instructions Manual](#)

Sanyo split system heat pump air conditioner installation instructions (111 pages)

[Air Conditioner Sanyo C4272R Service Manual](#)

Sanyo split system air conditioner service manual (181 pages)

[Air Conditioner Sanyo 26 series Installation Instructions Manual](#)

Split system heat pump air conditioner (110 pages)

[Air Conditioner Sanyo 36KHS72R Datasheet](#)

Wall mounted heat pump (2 pages)

[Air Conditioner Sanyo CH3672R Parts List](#)

Outdoor unit (4 pages)

[Air Conditioner Sanyo 000-31 Specifications](#)

Concealed duct air conditioner & heat pump 24,000-31,200 btu/h 13.9-14.9 seer
(2 pages)

[Air Conditioner Sanyo CH3632 Dimensional Information](#)

Sanyo split air conditioner datasheet (1 page)

[Air Conditioner Sanyo XHS3632 Service Manual](#)

Split system air conditioner (106 pages)

[Air Conditioner Sanyo KHS3632 / CH3632 Service Manual](#)

Split system air conditioner (94 pages)

[Air Conditioner Sanyo CH2442 Installation Instructions Manual](#)

Split system heat pump air conditioner (94 pages)

[Air Conditioner Sanyo KH2442 / CH2442 Service Manual](#)

Split system air conditioner (202 pages)

[Air Conditioner Sanyo CH1872 Technical & Service Manual](#)

Dc inverter split system air conditioner (111 pages)

Related Content for Sanyo CH3082

[SAP-FDRV96EH Operation With The Remote Control Unit](#)

Sanyo SAP-FDRV96EH

[SAP-K77GHAX Operation With The Remote Control Unit](#)

Sanyo SAP-K77GHAX

[SAP-K71GJA Operation With The Remote Control Unit](#)

Sanyo SAP-K71GJA

[SAP-K161GJA Operation With The Remote Control Unit](#)

Sanyo SAP-K161GJA

[KS2432 Operation With The Remote Control Unit](#)

Sanyo KS2432

[SAP-KMV91G-S Operation With The Remote Control Unit](#)

Sanyo SAP-KMV91G-S

[SAP-K91A Operation With The Remote Control Unit](#)

Sanyo SAP-K91A

[SAP-DMRV93GJ Operation With The Remote Control Unit](#)

Sanyo SAP-DMRV93GJ

This manual is also suitable for:

[Khs3082 + ch3082Khs3682 + ch3682Ch3682Khs3082Khs3682](#)