



# Sanyo ECD-T1137S Owner's Manual

PLL synthesized stereo radio with digital compact disc player



1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
Table Of Contents
17



•

[Table of Contents](#)

•

Troubleshooting

•

## Bookmarks

[Download this manual](#)

## Quick Links





OWNER'S  
MANUAL

# ECD-T1137S

PLL Synthesized Stereo Radio with  
Digital Compact Disc Player

1 pair of RCA output

CD-R/CD-R W Compatibility

4 preset Equalization

Auxiliary Input



## Table of Contents

[Next Page](#)

1  
2  
3  
4  
5

## Related Manuals for Sanyo ECD-T1137S

### [Car Receiver Sanyo ECD-780 Notice](#)

Compact disk player (4 pages)

### [Car Receiver Sanyo ECD-T1540 Function Manual](#)

Full panel detachable high power fm/am stereo receiver sirius satellite radio operating manual (4 pages)

### [Car Receiver Sanyo ECD-T1540 Operating Manual](#)

Sirius satellite radio operating manual fm/am stereo receiver ecd-t1540 (28 pages)

### [Car Receiver Sanyo ECD-T1540 Operating Instructions Manual](#)

High power fm/am stereo receiver, cd player (28 pages)

### [Car Receiver Sanyo ECD-T1550 Owner's Manual](#)

Digital cd player (16 pages)

### [Car Receiver Sanyo ECD-T1560 Function Manual](#)

Sirius satellite radio operating manual (31 pages)

### [Car Receiver Sanyo ECD-T1820 Operating Instructions Manual](#)

Am/fm stereo radio with full detachable panel and auto-reverse cassette player iso mounting with removable trim ring (50 pages)

### [Car Receiver Sanyo ECD-T1780DV Installation And Operation Manual](#)

Dvd receiver with 7-inch lcd monitor (96 pages)

### [Car Receiver Sanyo H1340 - ECD Radio / CD Player Operating Instructions Manual](#)

Am/fm stereo radio cd player with full detachable panel, 1.5 din size multi-color lcd display (16 pages)

### [Car Receiver Sanyo EX-600 Service Manual](#)

Open door design (27 pages)

### [Car Receiver Sanyo EX-W22 Service Manual](#)

High power am/fm stereo etr/cassette car stereo (29 pages)

### [Car Receiver Sanyo EXCD-1000 Operating Instructions Manual](#)

(33 pages)

### [Car Receiver Sanyo T1443 - ECD Radio / CD Owner's Manual](#)

Mobile audio system (16 pages)

### [Car Receiver Sanyo FXD-780GD Operating Instructions Manual](#)

(20 pages)

### [Car Receiver Sanyo FXR-725GD Service Manual](#)

Full panel detachable auto reverse cassette player with cd changer controller (53 pages)

### [Car Receiver Sanyo MAR-1000 \(A\) Service Manual](#)

Mini-size fm-stereo am etr/cassette receiver with auto-travel preset tuning (13 pages)

## Summary of Contents for Sanyo ECD-T1137S

Input...

## [Page 2: Installation](#)

INSTALLATION Notes: • Choose the mounting location where the unit will not interfere with the normal driving function of the driver . • Before finally installing the unit, connect the wiring temporarily and make sure it is all connected up properly and the unit and the system works properly. •...

## [Page 3: Din Rear-Mount \(Method B\)](#)

(Fig. 2) Removing the unit DIN REAR-MOUNT (Method B) Installation using the screw holes on the sides of the unit. 1. Dashboard 2. Nut (5mm) 3. Spring washer 4. Screw (5 x 14mm) 5. Screw 6. Strap Be sure to use the strap to secure the back of the unit in place.

## [Page 4: How To Remove And Install The Front Panel](#)

HOW TO REMOVE AND INSTALL THE FRONT PANEL (OPTIONAL) 1. Press the release button and pull-off the front panel. Store front panel in the case. 2. To install the front panel, insert the panel into the housing and make sure the panel is properly installed, otherwise, abnormalities may occur on the display or some keys may not function properly.

## [Page 5: Wiring Connection](#)

WIRING CONNECTION ANTENNA CONNECTOR IGNITION SWITCH (B+) YELLOW MEMORY BACK-UP BLACK GROUND (B-) BLUE POWER ANTENNA WHITE FRONT Lch SPEAKER WHITE/BLACK GREEN REAR Lch SPEAKER GREEN/BLACK MAIN UNIT (GREY) RCA CABLE GREY GREY/BLACK VIOLET VIOLET/BLACK Rch RED Lch WHITE FRONT Rch SPEAKER REAR Rch SPEAKER...

## [Page 6: General Operation](#)

OPERATION GENERAL OPERATION ON/OFF Switch on the unit by pressing any button [except (4)]. When system is on, press PWR button (9) to turn off the unit. FACEPLATE RELEASE Press button (7) to detach the removable faceplate. 6 16 button (7) and eject button...

[Page 7](#) The adjustment mode will change in the following order: Volume Bass Treble Balance Fader By pressing VOL button + (11) or VOL button - (12), it is possible to adjust the desired sound level. LOUDNESS Press BND/LOU button (13) for several seconds to reinforce the bass output and display will show "LOUD".

## [Page 8: Automatic Memory Storing & Program Scanning](#)

RADIO OPERATION BAND SELECTION At tuner mode, press BND/LOU button (13) to select the desired band. The reception band will change in the following order: STATION SELECTION Press MANU/SKIP button (16) or MANU/SKIP automatic seek function. To select manual tuning mode, press for several seconds until "MANUAL"...

[Page 9](#) CD play starts from when you release the button. PAUSE PLAYING Press PAU button (20) to pause CD player. Press it again to resume play. REPEAT THE SAME TRACK Press RPT button (22) to continuously repeat the same track. Press again to stop repeat.

[Page 10](#) Note: A. Notes on discs: 1. Attempting to use non-standard shape discs (e.g. square, start, heart) may damage the unit. Be sure to use round shape CD discs only for this unit. 2. Do not stick paper or tape etc., onto the label side or the recording side of any discs, as it may cause a malfunction.

## [Page 11: Specification](#)

Power Supply Requirements Chassis Dimensions Tone Controls - Bass (at 100 Hz) - Treble (at 10 KHz) Maximum Output Power Current Drain CD PLAYER Signal to Noise Ratio Channel Separation Frequency Response RADIO Frequency Coverage Sensitivity (S/N = 30 dB)

## [Page 12: Troubleshooting](#)

TROUBLE SHOOTING Before going through the check list, check wiring connection. If any of the problems persist after check list has been made, consult your nearest service dealer. Symptom Cause No power. The car ignition switch is not on. The fuse is blown.

[Page 13](#) In order to obtain warranty service, the product must be delivered to and picked up

from an Authorized Sanyo Factory Service Center at the user's expense, unless specifically stated otherwise in this warranty. The names and addresses of Authorized Sanyo Service Centers may be obtained by calling the toll-free number listed below.

[Page 16](#) 21605 Plummer Street Chatsworth, CA91311 ECD-T1137S. Issue Number 1. Printed in Hong Kong 88-C1007-11...