



Sanyo DVD-SL33 Instruction Manual

Sanyo instruction manual dvd video player dvd-sl33

1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38

--

•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks

Quick Links

[Download this manual](#) See also: [Service Manual](#)



INSTRUCTION MANUAL

DVD Video Player

INDEX
1
2
3
4
5
6
7
8
9



1AD6P1P1928--
(CA)
DVD-SL33/CA(English)

1
2
3
4
5
6
7
8
9

S

DVD-SL33

13/06/2003, 10:06

English

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Sanyo DVD-SL33

[Dvd video player Sanyo DVD-SL33 Service Manual](#)

(30 pages)

[DVD Player Sanyo DVD-SL33 Service Manual](#)

(20 pages)

[DVD Player Sanyo DVD-SL33 Instruction Manual](#)

(19 pages)

[DVD Player Sanyo Fisher DVD-SL30 Service Manual Supplement](#)

Dvd video player (18 pages)

[DVD Player Sanyo DVD-SL33KR Service Manual](#)

(32 pages)

[DVD Player Sanyo DVD-SL33KR Service Manual](#)

(32 pages)

[DVD Player Sanyo DVD-SL330 Service Manual](#)

(42 pages)

[DVD Player Sanyo DVD-SL330\(AU\) Service Manual](#)

(42 pages)

[DVD Player Sanyo DVD-SL38KR Service Manual](#)

(33 pages)

[DVD Player Sanyo DVD-SL25 Service Manual](#)

(39 pages)

[DVD Player Sanyo DVD-SL25 Service Manual](#)

(39 pages)

[DVD Player Sanyo DVD-SL22 Service Manual](#)

(38 pages)

[DVD Player Sanyo DVD-SL20 Instruction Manual](#)

(21 pages)

[DVD Player Sanyo DVD-SL20V Service Manual](#)

(46 pages)

[DVD Player Sanyo DVD-SL40 \(XE\) Service Manual](#)

(24 pages)

[DVD Player Sanyo DVD-SL40 Service Manual](#)

(14 pages)

Summary of Contents for Sanyo DVD-SL33

[Page 1](#) /RANDOM ANGLE ON SCREEN ZOOM ANGLE REPLAY SUBTITLE CHANGE SETUP MENU
SUBTITLE ON/OFF AUDIO TOP MENU RETURN REV SLOW FWD SLOW PAUSE/STEP PREV NEXT
PLAY CLEAR SEARCH MODE REMOTE CONTROLLER RB-SL22 1AD6P1P1928-- (CA) DVD-
SL33/CA(English) DVD-SL33 z/ON OPEN/CLOSE 13/06/2003, 10:06 English...

[Page 2: Table Of Contents](#)

For connection, see "Connecting to an Amplifier with Dolby Digital Decoder, DTS Decoder or
MPEG2 Decoder (Example 4)" on page E12. See "Setting Digital Out" in the INITIAL SETTINGS on
page E31. DVD-SL33/CA(English) CONTENTS Viewing from a Desired Camera Angle (Multi-Angle)

[DVD] ...

[Page 3](#) MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. • THIS UNIT SHOULD NOT BE ADJUSTED OR REPAIRED BY ANYONE EXCEPT PROPERLY QUALIFIED SERVICE PERSONNEL. DVD-SL33/CA(English) This symbol indicates that dangerous voltage constituting a risk of electric shock is present within this unit.

[Page 4: Important Safety Instructions](#)

Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn. DVD-SL33/CA(English) 10. Ventilation – Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered.

[Page 5: Accessories](#)

SEARCH MODE REMOTE CONTROLLER RB-SL22 DVD-SL33/CA(English) 18. Object and Liquid Entry – Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock.

[Page 6: Controls](#)

Digital) Rear Panel 1. Audio output jacks (AUDIO OUT) 2. Coaxial digital output jack (DIGITAL OUT) 3. Video output jack (VIDEO OUT) DVD-SL33/CA(English) CONTROLS OPEN/CLOSE 5. Stop button (n) 6. Play button (a) 7. Skip/Next/Previous buttons (f, e) 8.

[Page 7: Remote Control](#)

SPENT OR DISCHARGED BATTERIES MUST BE RE-CYCLED OR DISPOSED OF PROPERLY IN COMPLIANCE WITH ALL APPLICABLE LAWS. FOR DETAILS INFORMATION, CONTACT YOUR LOCAL COUNTY SOLID WASTE AUTHORITY. DVD-SL33/CA(English) REMOTE CONTROL Controls 1. Power button (z/ON) 2. Last memory button (LAST MEMO) 3.

[Page 8: Before Connection](#)

Do you connect it to an Amplifier with Dolby Pro Logic Decoder? See “Connecting to an Audio System and TV (Example 3)” on page E11. DVD-SL33/CA(English) Please purchase the TV with Audio/Video input jacks or the RF Modulator. -E7- 13/06/2003, 10:06 See “Connecting to a Conventional TV...

[Page 9: Basic Connections](#)

DVD video player S-VIDEO IN 1 To S-VIDEO OUT jack To S-video input jack *S-video cable (not supplied) *Please consult your local audio/video dealer. DVD-SL33/CA(English) DVD video player To VIDEO OUT jack (Yellow) AUDIO VIDEO INPUT To audio input jacks...

[Page 10](#) RF Modulator. 3. Connect the 75-ohm coaxial cable (not supplied) between the TO TV terminal of the RF Modulator and the VHF/UHF ANTENNA IN terminal of the TV. DVD-SL33/CA(English) To audio input jacks A/V INPUT JACKS TO TV...

[Page 11: Connecting To A Tv With Progressive-Scan Capability \(Example 2\)](#)

This model has compliance with 525p (progressive) system. Interlaced scanning Progressive scanning DVD-SL33/CA(English) *Component video cable (not supplied) To AUDIO OUT jacks AUDIO INPUT To audio input jacks *Please consult your local audio/video dealer.

[Page 12: Additional Connection Examples](#)

OUT jack To S-video input jack *S-video cable (not supplied) *Please consult your local audio/video dealer. DVD-SL33/CA(English) DVD video player To VIDEO OUT jack (Yellow) To video input (Yellow) AUDIO * V i d e o c a b l e...

[Page 13: Connecting To An Amplifier With Dolby Digital Decoder, Dts Decoder Or Mpeg2 Decoder \(Example 4\)](#)

Select “Dolby Digital LPCM”, “MPEG LPCM”, and “DTS Off” in “Setting Digital Out” on the INITIAL SETTINGS. (See page E31.) Note: If “DTS On” is selected, loud noise will occur. (See page E31.) DVD-SL33/CA(English) Amplifier with Dolby Digital Decoder, DTS Decoder or MPEG2 Decoder

Center speaker...

[Page 14: Connecting To An Amplifier With Dolby Pro Logic Decoder \(Example 6\)](#)

Under this condition the unit may be unable to operate properly. If this should occur, remove the disc and allow the player to adjust to the surrounding temperature. DVD-SL33/CA(English) Amplifier with Dolby Pro Logic Decoder Center speaker...

[Page 15: Playable Discs](#)

Audio CD Disc Audio CD discs are divided into tracks. Track 1 Track 2 Track 3 DVD-SL33/CA(English) PLAYABLE DISCS CAUTION: • Only the above types of discs can be played on this unit. DVD-ROM, CD-ROM, SVCD, CVD, VCD, etc. cannot be played.

[Page 16: Basic Operation](#)

When operation buttons are pressed, that operation is displayed on the TV screen. The display turns off after several seconds. 16:9 : 1. Press [z/ON]. • "SANYO" logo appears on the TV screen. " • "-----" blinks, and then "NO DISC" appears on the FL display.

[Page 17: Stopping Playback](#)

To release this mode, press [q OPEN/CLOSE] on the unit until "UN-LOC" appears on the FL display (or "Disc Tray Un- locked" appears on the TV screen). DVD-SL33/CA(English) Stopping Playback [DVD] • Press [n] once during playback. "Resume n " appears briefly on the TV screen.

[Page 18: Selecting A Dvd Menu](#)

You can skip only through the chapters, not over the title on the DVD disc. Important Note: " " may appear on the TV screen during operation. This icon means that the function is not available on the disc now. DVD-SL33/CA(English) PICTURE z/ON LAST MEMO OPEN/CLOSE MODE...

[Page 19: Title Search \[Dvd\]](#)

3. Press [a PLAY]. Playback starts from the searched time. Note: The Search mode may not work on some discs. DVD-SL33/CA(English) Important Note: " " may appear on the TV screen during operation. This icon means that the function is not available on the disc now.

[Page 20: Fast Playback](#)

" k " appears briefly on the TV screen. [DVD] Still picture mode [CD] Pause mode Press [a PLAY] to return to normal playback. Note: The sound is muted during still picture. DVD-SL33/CA(English) SETUP MENU CHANGE SUBTITLE ON/OFF AUDIO TOP MENU...

[Page 21: Picture Zoom \(Pin Point Zoom\) \[Dvd\]](#)

During Multi-angle playback screen, press [ANGLE REPLAY]. The unit skips back to last approximately 10 seconds, changes it to the next camera angle and plays it, and continues playback. If desired, press the button again. DVD-SL33/CA(English) PROGRAM REPEAT A-B REPEAT /RANDOM...

[Page 22: Repeat Playback](#)

Repeat playback or A-B repeat playback mode may not work correctly with some discs. Important Note: " " may appear on the TV screen during operation. This icon means that the function is not available on the disc now. DVD-SL33/CA(English) PICTURE z/ON LAST MEMO OPEN/CLOSE MODE...

[Page 23: Random Playback \[Cd\]](#)

When all programmed selections have played, the unit stops automatically. • The programmed contents are retained in memory. Note: To play the program again, press [PROGRAM/RANDOM] twice to call up the "Program Mode" screen, then press [a PLAY]. DVD-SL33/CA(English) PICTURE z/ON LAST MEMO OPEN/CLOSE MODE PROGRAM...

[Page 24: Selecting Subtitle Language \[Dvd\]](#)

When the power is turned on or the disc is replaced, select the language again. • If the language is not recorded on the disc, only the available language on the disc will be heard. DVD-SL33/CA(English) PICTURE z/ON LAST MEMO 1/3 en)

[Page 25: Selecting On-Screen Information](#)

Important Note: “ ” may appear on the TV screen during operation. This icon means that the function is not available on the disc now. DVD-SL33/CA(English) For improvement, on-screen displays subject to change without notice. Example for Audio CD: 1. Press [ON SCREEN].

[Page 26: Mp3 Cd Operation](#)

• The CD has no music data or non-MP3 files cannot be played back. • The WMA files cannot be played back. DVD-SL33/CA(English) MP3 CD OPERATION MP3 CD Playback 1. Press [q OPEN/CLOSE] (or [OPEN/CLOSE] on the remote control). •...

[Page 27: Stopping Playback](#)

” may appear on the TV screen during operation. This icon means that the function is not available on the disc now. DVD-SL33/CA(English) Stopping Playback Press [n] during playback. “ n ” appears briefly on the TV screen and playback stops completely.

[Page 28: Picture Disc Operation](#)

• The first thumbnail pictures (maximum 9-picture) appear on the TV screen. Example: DVD-SL33/CA(English) 2. Press [4], [a], [5] or [b] to move the cursor to the desired picture. • To go to the next or previous thumbnail pictures, press [NEXT e] or [PREV f].

[Page 29: Jpeg Cd Playback](#)

JPEG resolution up to 5760 x 3840. • Some discs cannot be played back depending on the recording conditions. DVD-SL33/CA(English) Picture Zoom 1. Press [k PAUSE/STEP] at the desired picture (KODAK Picture CD and JPEG CD). 2. Press [ZOOM].

[Page 30: Initial Settings](#)

Note: If “Others” is selected, enter the language code. (See “LANGUAGE CODE LIST” on page E33.) 8. Press [4] to skip back to the setup screen (or press [SETUP]). DVD-SL33/CA(English) INITIAL SETTINGS Notes: • In this instruction manual, the language in on-screen display is English.

[Page 31: Setting Display](#)

Dimmer Drak TV Type 4:3 LB 10. Press [ENT]. (In this example, “TV Type 4:3 PS” remains.) 11. Press [4] to skip back to the setup screen (or press [SETUP]). DVD-SL33/CA(English) Parental SETUP REV SLOW Parental Normal Dark...

[Page 32: Setting Digital Out](#)

7. Press [ENT]. (In this example, “Dolby Digital BitStream” remains.) 8. Repeat steps 4 ~ 7 for other items. 9. Press [4] to skip back to the setup screen (or press [SETUP]). DVD-SL33/CA(English) SETUP Parental REV SLOW Parental 96kHz LPCM (96kHz Liner Pulse Code Modulation): If your amplifier is available for 96kHz sampling, select “96kHz...”

[Page 33: Setting Parental](#)

---- Level 6. Press [4] to return to “Password ---”. 7. Enter a number in 4 digits. Password Level Note: If you make a mistake, press [CLEAR]. DVD-SL33/CA(English) ON SCREEN SUBTITLE CHANGE SETUP SUBTITLE ON/OFF AUDIO REV SLOW...

[Page 34: Language Code List](#)

Scots Gaelic 7176 Galician 7178 Guarani 7185 Gujarati 7265 Hausa 7273 Hindi 7282 Croatian 7285 Hungarian 7289 Armenian 7365 Interlingua DVD-SL33/CA(English) Code Language Language Code abbreviation 7369 Interlingue 8278 7375 Inupiak 8279 7378 Indonesian 8285 7383 Icelandic 8287 7384 Italian...

[Page 35: Troubleshooting Guide](#)

"No Play" appears on the TV screen. The disc tray does not open. The FL display on the unit is dark. DVD-SL33/CA(English) POSSIBLE CAUSE No power plug connection at the AC wall outlet. Insert the power plug into the AC wall outlet.

[Page 36: Maintenance](#)

Should this product require service, refer to the SANYO DVD limited warranty. If you do not have a convenient SANYO service station nearby, contact the SANYO dealer where you purchased the unit. Be sure to give the model number and explain the problem. The dealer will advise you how to obtain service.

[Page 37: Warranty](#)

(b) In no event shall SANYO Canada Inc. or any of its Authorized Dealers be liable for special or consequential damage arising from the use of this product.

[Page 38](#) SANYO Canada Inc. -E37- DVD-SL33/CA(English) 13/06/2003, 10:06...