

Dismounting Axis 2 Motor - Toshiba THL Series Instruction Manual

Industrial robot

1

2

3

4

5

6

Table Of Contents

7

8

9

10

11

12

13

14

15

16

17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

 
68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217

218
219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237
238
239
240
241
242
243
244
245
246
247
248
249
250
251
252
253
254
255
256
257
258
259
260
261
262
263
264
265
266
267

268
269
270
271
272
273
274
275
276
277
278
279
280



•

•

Bookmarks



- Do not forget to mount the O-ring.

If the O-ring is not mounted, grease will leak from the motor mounted surface.

2.4.5

Dismounting Axis 2 Motor

Disconnect the arm 2 cover. (See "Para. 2.3.1, Arm 2 Cover.")

1)

2)

Cut the cable ties of the cables with nippers or the like, and remove J2AS and J2AP (axis 2 power drive cables), J2BS and J2BP (axis 2 encoder cables). It is recommended to take photos of the cable installation positions and the locations



where cable ties are used so that these locations can be restored when needed.

3)

Remove the harness guide being secured with one (1) cross countersunk screw

(M3 x 6) and the support plate being secured with two (2) hexagon socket head

cap screws (M3 x 6).

Hexagon socket head cap screw

M3 x 6 x 2 pcs.

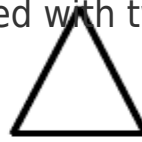


Fig. 2.18 Dismounting harness guide and support plate (THL300, THL400)

!

CAUTION

Cross countersunk screw

M3 x 6 x 1 pc.

37

MAINTENANCE MANUAL

Harness guide

Support plate

STE 85357

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
34
35
36
37
38
39
40
41

Quick Links:

[Table of Contents](#)

[Maintenance](#)

Related Manuals for Toshiba THL Series

[Robotics Toshiba THL Series Instruction Manual](#)

Industrial robot (255 pages)

[Robotics Toshiba THL Series Instruction Manual](#)

Industrial robot, robot controller (29 pages)

[Robotics Toshiba SR Series Instruction Manual](#)

Cassette transfer robot (38 pages)

[Robotics Toshiba TCR Series Instruction Manual](#)

(40 pages)

[Robotics Toshiba TH850A Instruction Manual](#)

Industrial robot (51 pages)

[Robotics Toshiba THP550-IP Instruction Manual](#)

Dust- & drip-proof type industrial robot (51 pages)

[Robotics Toshiba TH450A Instruction Manual](#)

Industrial robot (76 pages)

[Robotics Toshiba TH180 Instruction Manual](#)

Industrial robot (95 pages)

[Robotics Toshiba TH450A-CRB Instruction Manual](#)

Industrial robot (42 pages)

[Robotics Toshiba THP700-CBR Instruction Manual](#)

Industrial robot (32 pages)

[Robotics Toshiba TV800-CR Instruction Manual](#)

Industrial robot (33 pages)

[Robotics Toshiba THP700 Instruction Manual](#)

Industrial robot (72 pages)

[Robotics Toshiba THP700 Maintenance Manual](#)

Industrial robot (106 pages)

[Robotics Toshiba TV1000H-WP Instruction Manual](#)

Industrial robot (32 pages)

[Robotics Toshiba TH650A Instruction Manual](#)

Industrial robot (72 pages)

[Robotics Toshiba TV800 Instruction Manual](#)

Industrial robot (82 pages)

Related Content for Toshiba THL Series

[THP700 Connecting The Motor Cable "Motor" \(□ Of Fig. 4.1\) \(Cable Attached\)](#)

Toshiba THP700

[THP550-IP Mounting And Dismounting Covers](#)

Toshiba THP550-IP

[TVL Series Dismounting The Control Panel](#)

Toshiba TVL Series

[THL Series Connecting The Motor Cable "Motor" \(□ Of Fig. 15.1\) \(Thl300 To Thl1000\)](#)

Toshiba THL Series

[TH850A Mounting And Dismounting Covers](#)

Toshiba TH850A

[THP700-CBR Mounting And Dismounting Covers](#)

Toshiba THP700-CBR

[TV800 Change Of Axis-2 And Axis-3 Mechanical Ends](#)

Toshiba TV800

[TH650A Connecting The Motor Cable "Motor" \(□ Of Fig. 4.1\) \(Cable Attached\)](#)

This manual is also suitable for:

[Thl300](#)[Thl400](#)[Thl500](#)[Thl600](#)[Thl700](#)[Thl800](#) ... [Show all](#)