

TOSHIBA

Toshiba EC0P042SV-SSHA Instruction Manual

1	
Table Of Contents	
2	
3	
4	
5	
6	
7	
8	
9	
10	
11	
12	
13	
14	
15	
16	
17	

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34

--

•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks

--

[Download this manual](#)

Quick Links



MICROWAVE OVEN

INSTRUCTION MANUAL

TOSHIBA

EC0P042SV-SSHA

Please review this instruction manual before operating.

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba EC0P042SV-SSHA

[Microwave Oven Toshiba EC042A5C-BS Instruction Manual](#)

Microwave convection oven (44 pages)

[Microwave Oven Toshiba EC042A5C-BS Instructions Manual](#)

Convection oven (60 pages)

[Microwave Oven Toshiba EC042A5C-BS Instructions Manual](#)

Microwave convection oven (37 pages)

[Microwave Oven Toshiba EC9P032SV-SV Instruction Manual](#)

(27 pages)

[Microwave Oven Toshiba EC034A2XC-S1 Instruction Manual](#)

(36 pages)

[Microwave Oven Toshiba EC042A5C-SS Instructions Manual](#)

Microwave convection oven (36 pages)

[Microwave Oven Toshiba EC0P042SV-S Instruction Manual](#)

(40 pages)

[Microwave Oven Toshiba EM245A5C-BS Instruction](#)

Microwave solo oven (32 pages)

[Microwave Oven Toshiba EM131A5C-BS Instruction Manual](#)

Microwave solo oven (32 pages)

[Microwave Oven Toshiba EM131A5C-BS Instruction Manual](#)

Microwave solo oven (40 pages)

[Microwave Oven Toshiba EM925A5A-BS Instructions Manual](#)

Microwave solo oven (33 pages)

[Microwave Oven Toshiba EM925A5A-BS User Manual](#)

(47 pages)

[Microwave Oven Toshiba EM131A5C-SS Instruction Manual](#)

Microwave solo oven (28 pages)

[Microwave Oven Toshiba EM925A5A-SS Instruction Manual](#)

Microwave solo oven (40 pages)

[Microwave Oven Toshiba EM925A5A-SS Instructions Manual](#)

Microwave solo oven (32 pages)

[Microwave Oven Toshiba ER-ND300C Instruction Manual](#)

(156 pages)

Summary of Contents for Toshiba EC0P042SV-SSHA

[Page 1](#) MICROWAVE OVEN INSTRUCTION MANUAL EC0P042SV-SSHA Please review this instruction manual before operating.

[Page 2: Table Of Contents](#)

CONTENTS PRODUCT SAFETY Precautions to avoid possible exposure to excessive microwave energy Important safety instructions Grounding instructions Radio interference Utensils Materials you can use in microwave oven Materials can not be used in microwave oven PRODUCT SETTING Setting up your oven INSTRUCTION FOR USE Before using for the first time Operation...

[Page 3](#) 11. Weight Defrost 12. Time Defrost 13. Sensor Cook 14. Speed Cooking 15. Lock Function 16. Silent Mode 17. ECO Function 18. Inquiring Function 19. Wi Connection Cleaning MAINTENANCE Trouble shooting One year limited warranty BEFORE OPERATING THIS PRODUCT, READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS.

[Page 4: Product Safety](#)

(2). HINGES AND LATCHES (broken or loosened) (3). DOOR SEALS AND SEALING SURFACES (d). The oven should not be adjusted or repaired by anyone except properly qualified service personnel. SPECIFICATIONS MODEL EC0P042SV-SSHA 120 V~ 60 Hz RATED VOLTAGE RATED INPUT POWER(MICROWAVE) 1250 W RATED OUTPUT POWER(...

[Page 5: Important Safety Instructions](#)

IMPORTANT SAFETY INSTRUCTIONS When using electrical appliances basic safety precautions should be followed, including the following. To reduce the risk of burns, electric shock, fire, injury to persons or WARNING exposure to excessive microwave energy. Read all instructions before using When cleaning surfaces of door the appliance.

[Page 6](#) IMPORTANT SAFETY INSTRUCTIONS Oversized food or oversized metal Liquids, such as water, coffee, or utensils should not be inserted in tea are able to overheat beyond a microwave/toaster oven as they may the boiling point without create a fire or risk of electric shock. appearing to be boiling.

[Page 7](#) IMPORTANT SAFETY INSTRUCTIONS Do not let cord hang over edge of Use this appliance only for its table or counter. intended use as described in the manual. Do not use corrosive chemicals or vapors in this appliance. This type Do not use paper products when of oven is specifically designed to appliance is operated in the toaster heat, cook or dry food.

[Page 8: Grounding Instructions](#)

GROUNDING INSTRUCTIONS This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

[Page 9: Radio Interference](#)

RADIO INTERFERENCE 1. Operation of the microwave oven may cause interference to your radio, TV or similar equipment. 2. When there is interference, it may be reduced or eliminated by taking the following measures: (1). Clean door and sealing surface of the oven. (2).

[Page 10: Materials You Can Use In Microwave Oven](#)

MATERIALS YOU CAN USE IN MICROWAVE OVEN UTENSILS REMARKS Follow manufacturer's instructions. The bottom of browning dish must be at least 3/16 inch (5mm) above the turntable. Incorrect usage may cause Browning dish the turntable to break. Microwave-safe only. Follow manufacturer's instructions. Do not use cracked or chipped dishes.

[Page 11](#) MATERIALS YOU CAN USE IN MICROWAVE OVEN UTENSILS REMARKS Microwave-safe only. Follow the manufacturer's instructions. Should be labeled "Microwave Safe". Some plastic containers soften, as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be Plastic slit, pierced or vented as directed by package.

[Page 12: Materials Can Not Be Used In Microwave Oven](#)

MATERIALS CAN NOT BE USED IN MICROWAVE OVEN UTENSILS REMARKS May cause arcing. Transfer food into microwave-safe dish. Aluminum tray May cause arcing. Transfer food into microwave-safe dish. Food carton with metal handle Metal shields the food from microwave energy. Metal trim may cause arcing.

[Page 13: Product Setting](#)

PRODUCT SETTING SETTING UP YOUR OVEN NAMES OF MICROWAVE OVEN PARTS AND ACCESSORIES Remove the oven and all materials from the carton and oven cavity. Glass turntable Bake Tray (Cannot be used in conjunction with microwave function and can be placed on the lower wire rack or grill rack) Lower Wire Rack(Can not be Grill Rack(Can not be used...

[Page 14](#) **SETTING UP YOUR OVEN TURNTABLE INSTALLATION** Cleaning the cooking compartment and putting the turntable in place. For new installations, make sure all packaging and shipping tape has been removed from the turntable shaft. Before using the appliance to prepare food for the first time, you will need to put the turntable in place correctly.

[Page 15](#) **COUNTERTOP INSTALLATION** Remove all packing material and accessories. Examine the oven for any damage such as dents or broken door. Do not install if oven is damaged. Cabinet: Remove any protective film found on the microwave oven cabinet surface. Do not remove the light brown Mica cover that is attached to the oven cavity to protect the magnetron.

[Page 16: Instruction For Use](#)

INSTRUCTION FOR USE BEFORE USING FOR THE FIRST TIME It is normal that the stove may produce unpleasant odors when it is used for the first time. This section tells you what you need to do before using your microwave to prepare food for the first time.

[Page 17: Operation](#)

OPERATION CONTROL PANEL AND FEATURES...

[Page 18: Power Levels](#)

1. **POWER LEVELS** Ten power levels are available. Prior to cooking, press Power Level and "PL10" will display. Then press number pads to select a different power level. Please refer to page 16 "MICROWAVE COOK" for detailed power level setting. **LEVEL POWER DISPLAY...**

[Page 19: Kitchen Timer](#)

Press Kit.Timer/Clock to confirm. 3. **KITCHEN TIMER** When the microwave oven is plugged into an outlet, "0:00" will display. Press Kit.Timer/Clock once. Turn the knob to set the time, it should be within 0:05-95:00. Press to start counting down. • The Kitchen Timer setting is different from the Clock setting; it is simply a timer.

[Page 20: Microwave Cook](#)

4. **MICROWAVE COOK** When the microwave oven is plugged into an outlet, "0:00" will display. Press Power more time to choose the power level. Press Power once, and then turn the knob to set the power level. Press to confirm the power level. Turn the knob to set the time, it should be within 0:05-95:00.

[Page 21: Combination Function \(Convection + Microwave\)](#)

to start cooking. Press • When half of the time has passed, the buzzer will sound to remind you to turn the food over. If no operation, the oven will continue working. **NOTE** • Press to increase the time by 30 seconds. 6.

[Page 22: Convection With Preheat](#)

7. **Convection with preheat** Press Broil/Bake/Combi. repeatedly to set the temperature. Broil/Bake/Combi. "100°F, 150°F, 250°F, 275°F, 300°F, 325°F, 350°F, 375°F, 400°F, 425°F" are available. Press Broil/Bake repeatedly twice, "100°F" will Broil/Bake/Combi. display, turn the knob to set the temperature. Press to confirm. Press to start preheating. When the temperature has arrived, please open and then close the door to cancel preheat.

[Page 23: Auto Menu](#)

Turn the knob to set the time, it should be within 0:05-95:00. Press to start cooking. 9. **Auto Menu** In waiting state, Turn the knob right to set the menu. A01-A06 will display in order. Press to confirm the menu. Turn the knob to set the weight of the food.

[Page 24](#) **WEIGHT/ MENU DISPLAY POWER LEVEL PORTION** 16Oz 16Oz 350°F (with preheat) Cake 7.5Oz 7.5Oz 375°F (with preheat) Cookie 10. **AirFry** Press Air Fry repeatedly to choose the air fry menus. Turn the knob to choose the air fry menus, H01-H10 are available. Press to confirm, and then press again to start cooking.

[Page 25: Weight Defrost](#)

11. **WEIGHT DEFROST** Press Pro Defrost repeatedly to choose the defrost menu. Press Pro Defrost once, "dEF1" will display. and then turn the knob to choose the defrost menu. "dEF1-

dEF6" are available. Press to con rm. Turn the knob to choose the defrost weight, it should be within 4-700z. Press to start counting down.

[Page 26: Time Defrost](#)

12. TIME DEFROST Press Pro Defrost repeatedly to choose the "dEF7". Press Pro Defrost once, "dEF1" will display. and then turn the knob to choose the menu "dEF7". Press to con rm. Turn the knob to choose the defrost time, it should be within 0:05-95:00.

[Page 27: Speed Cooking](#)

SENSOR COOK CHART: FOOD DISPLAY POWEL LEVEL Auto Reheat 100%/100% Potato SC-2 100%/100% Pizza 100%/100% SC-3 Ground meat SC-4 100%/100% Vegetable SC-5 100%/0%
14. SPEED COOKING Turn the knob left once to choose the cooking mode with 100% power level for 5 seconds directly. Turn the knob to set the time, it should be within 0:05-95:00.

[Page 28: Lock Function](#)

15. L OCK FUNCTION To lock the microwave so that it cannot be operated by children or other unintended users, press Sound On/OFF Lock 3s pad for 3 seconds. To unlock, press STOP/Cancel for 3 seconds, you will hear a long beep.

[Page 29: Eco Function](#)

17. ECO FUNCTION To enter ECO mode: In waiting state, press " ", the screen will turn off. To cancel ECO mode: In ECO mode, turn the knob, press any keys or open oven door. 19. WIFI CONNECTION Connect the network Please turn on the Bluetooth on your phone.

[Page 30: Cleaning](#)

CLEANING With good care and cleaning, your appliance will retain its appearance and remain fully functioning for a long time to come. We will explain here how you should correctly care for and clean your appliance. • Scratched glass in the appliance door may develop into a crack. Do not use a glass scraper, sharp or abrasive cleaning aids or detergents.

[Page 31](#) APPLIANCE FRONT WITH STAINLESS STEEL Hot soapy water: Clean using a dish cloth and then dry with a soft cloth. Remove splashes and patches of limescale, grease, starch and albumin immediately. Corrosion can form under these patches or splashes. Do not use glass cleaners or metal or glass scrapers for cleaning.

[Page 32: Maintenance](#)

MAINTENANCE TROUBLE SHOOTING Check your problem by using the chart below and try the solutions for each problem. If the microwave oven still does not work properly, contact the nearest authorized service center. TROUBLE POSSIBLE CAUSE POSSIBLE REMEDY a. Electrical cord for oven is not a.

[Page 33: One Year Limited Warranty](#)

If service is required during the warranty period, properly pack your unit. We recommend using the original carton and packing materials. If additional assistance is needed, please contact customer assistance at: customercare@us.toshiba-lifestyle.com 855-204-5313 Midea America Corp. expressly disclaims all responsibility for consequential damages or incidental losses caused by use of the appliance.

[Page 34](#) #DetailsMatter Customercare@us.toshiba-lifestyle.com 855-204-5313...