

# Toshiba SD-6915SU Instruction Manual

5 disc dvd changer



1
2
Table Of Contents
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18  
19  
20  
21

•

[Table of Contents](#)

- 

Troubleshooting

•

Bookmarks

--

## Quick Links

[1 Before You Start](#)

[2 Table of Contents](#)

[3 Disc Type and Characteristics](#)

[4 Tour of the Remote Control](#)

[5 Playing a Disc](#)


[6 Sacd Playback](#)



[7 Troubleshooting](#)

[8 Specifications](#)

[Download this manual](#)

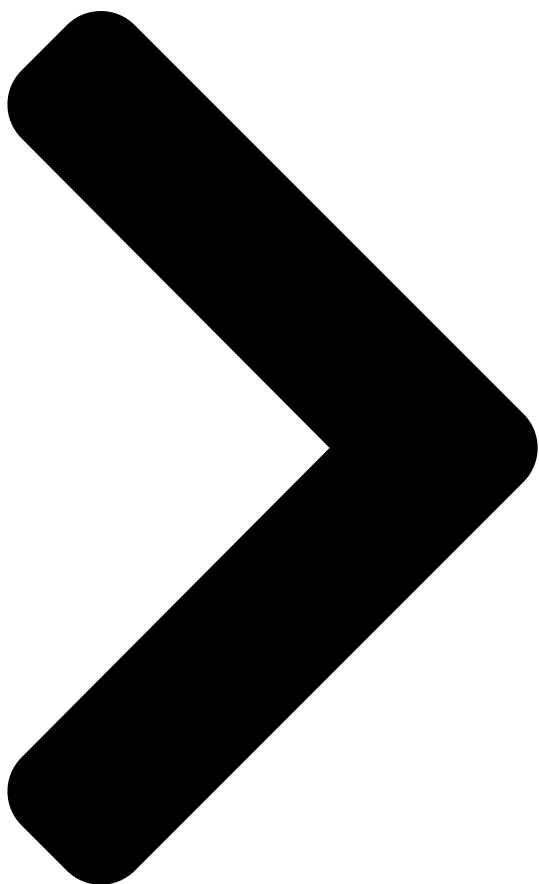

[Enlarged version](#)



# 5 Disc DVD Changer SD-6915SU Instruction Manual

AK68-00479A Rev01

**TOSHIBA**

**TOSHIBA** ManualsLib.com



[Table of Contents](#)

[Next Page](#)

1  
2  
3  
4  
5

## Related Manuals for Toshiba SD-6915SU

### [CD Player Toshiba SD-6915 Specifications](#)

Dvd changer, dvd-audio multi-channel playback (2 pages)

### [CD Player Toshiba SD-5915SC Owner's Manual](#)

Toshiba dvd video / cd / vcd 5 disc carousel changer owner's manual sd-5915su, sd-5915sc (52 pages)

### [CD Player Toshiba SD-5915 Specification Sheet](#)

Toshiba dvd changer specification sheet (2 pages)

### [CD Player Toshiba CD328BT Instruction Manual](#)

Portable stereo radio cd/mp3/usb/sd card/bluetooth player (14 pages)

### [CD Player Toshiba BDX5500KU Symbio User Manual](#)

Streaming media and universal disc player (55 pages)

## Summary of Contents for Toshiba SD-6915SU

[Page 1](#) Toshiba-SD-6915-Cover fixrev01 2004/6/04 07:27am Page 2 5 Disc DVD Changer SD-6915SU Instruction Manual PLAY/ DISC POWER OPEN/CLOSE PAUSE STOP DISC SKIP EXCHANGE AK68-00479A Rev01...

### [Page 2: Important Safety Instructions](#)

Toshiba-SD-6915 fix ok rev01 2004/6/04 07:30am Important Safety Instructions 1) Read these instructions. 2) Keep these instructions. 3) Heed all warnings. 4) Follow all instructions. 5) Do not use this apparatus near water. 6) Clean only with dry cloth. 7) Do not block any ventilation openings, Install in accordance with the manufacturer's instructions.

### [Page 3: Table Of Contents](#)

Toshiba-SD-6915 fix ok rev01 2004/6/04 07:30am Precautions CAUTION THIS PRODUCT UTILIZES A LASER. USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. DO NOT OPEN COVER AND DO NOT REPAIR YOURSELF.

### [Page 4: General Features](#)

Toshiba-SD-6915 fix ok rev01 2004/6/04 07:30am General Features DVD Changer Note The DVD Changer holds 5 discs and provides full \* Discs which cannot be played with this player. random play with fast disc changes when press and • DVD-ROM hold NUMBER button.

### [Page 5: Description-Front Panel](#)

Toshiba-SD-6915 fix ok rev01 2004/6/04 07:30am Description-Front Panel Front Panel Controls 1. POWER( 6. PLAY/PAUSE ( • Use to turn your player on and off (standby). • Begin or pause disc play. 7. STOP ( 2. DVD CHANGER (TRAY) • Stops disc play.

### [Page 6: Description-Rear Panel](#)

Toshiba-SD-6915 fix ok rev01 2004/6/04 07:30am Description-Rear Panel DIGITAL AUDIO OUT VIDEO OUT SURROUND WOOFER COAXIAL OPTICAL FRONT CENTER AUDIO VIDEO Rear Panel 1. DIGITAL AUDIO OUT JACKS 6. COMPONENT VIDEO OUT JACKS • Use a optical or coaxial digital cable to connect •...

### [Page 7: Choosing A Connection](#)

Toshiba-SD-6915 fix ok rev01 2004/6/04 07:30am Choosing a Connection The following shows examples of connections commonly used to connect the DVD player with a TV and other components. Before Connecting the DVD Player • Always turn off the DVD player, TV, and other

components before you connect or disconnect any cables.

### [Page 8: Playing A Disc](#)

Toshiba-SD-6915 fix ok rev01 2004/6/04 07:30am Playing a Disc Before Play 7. Step Motion Play (Except CD/DVD-AUDIO/SACD) • Turn on your TV and set it to the correct Video Press the STEP button on the remote during play. Input by pressing TV/VIDEO button on.

### [Page 9: Using The Display Function](#)

Toshiba-SD-6915 fix ok rev01 2004/6/04 07:30am Using the Display Function When Playing a DVD Title 1. During play, press the DISPLAY button on the remote. 2. Use the UP/DOWN buttons to select the desired item. 3. Use the LEFT/RIGHT buttons to make the desired setup and then press the ENTER button.

### [Page 10: Repeat Play](#)

Toshiba-SD-6915 fix ok rev01 2004/6/04 07:30am Repeat Play Slow Repeat Play Repeat the current track, chapter, title, a This feature allows you slowly to repeat chosen section (A-B), or all of the disc. scenes containing sports, dancing, musical instruments being played etc. so you can When playing a DVD/CD study them more closely.

### [Page 11: Selecting The Audio Language](#)

Toshiba-SD-6915 fix ok rev01 2004/6/04 07:30am Selecting the Audio Language Selecting the Subtitle Language You can select a desired language quickly and You can select a desired subtitle quickly and easily with the AUDIO button. easily with the SUBTITLE button.

### [Page 12: Using The Zoom Function](#)

Toshiba-SD-6915 fix ok rev01 2004/6/04 07:30am Using the Bookmark Function Using the Zoom Function Recalling a Marked Scene Using the Zoom Function (DVD) 1. During play, press the SETUP button on the 1. During play or pause mode, press the ZOOM remote and select the Bookmark.

### [Page 13: Dvd Audio Playback](#)

Toshiba-SD-6915 fix ok rev01 2004/6/04 07:30am SACD Playback DVD AUDIO Playback CD Layer Play Function 1. Open the disc tray. At SACD disc stop mode, press the SETUP button 2. Place the DVD AUDIO disc on the tray. and select the SACD/CD in Function by using - Place the DVD AUDIO disc with the labeled side up.

### [Page 14: Clips Menu For Mp3/Wma/Jpeg](#)

Toshiba-SD-6915 fix ok rev01 2004/6/04 07:30am Clips Menu for MP3/WMA/JPEG Folder Selection Discs with MP3/WMA/JPEG contain individual The folder can only be selected in the Stop song or pictures that can be organized into mode. folders as shown below. They are similar to how you use your •...

### [Page 15: Picture Cd Playback](#)

Toshiba-SD-6915 fix ok rev01 2004/6/04 07:30am Picture CD Playback 1. Select the desired folder. (See page 26 to select Note the folder) • If no buttons on the remote control pressed for 10 seconds, the menu will disappear. 2. Use the UP/DOWN buttons to select a Picture file in Press the DISPLAY button on the remote control to clips menu and then press the ENTER button.

### [Page 16: Setting Up The Audio Options](#)

Toshiba-SD-6915 fix ok rev01 2004/6/04 07:30am Setting Up the Language Features Setting Up the Language Features Using the Disc Menu Language Using the Audio Language This function changes the text language only on the 1. With the unit in Stop mode, press the SETUP disc menu screens.

### [Page 17: Surround Sound Speaker Setup](#)

Toshiba-SD-6915 fix ok rev01 2004/6/04 07:30am Setting Up the Audio Options Surround Sound Speaker Setup 1. With the unit in Stop mode, press the SETUP 1. Off : Doesn't output digital signal. button. 2. On : Outputs DTS Bitstream via digital output only.

### [Page 18: Setting Up The Parental Control](#)

Toshiba-SD-6915 fix ok rev01 2004/6/04 07:30am Setting Up the Display Options Setting Up the Parental Control The Parental Control function works in conjunction Still Mode These options will help prevent picture shake in still with DVDs that have been assigned a rating - which mode and display small text clearer.

### [Page 19: Controlling A Tv With The Remote](#)

Controlling a TV with the Remote The remote control can be compatible with various Table of Brand Codes brands of TV by setting their control codes. The TOSHIBA code has initially been set to control TOSHIBA TVs. TOSHIBA Setting Control Codes...

### [Page 20: Specifications](#)

\*Dynamic Range 100 dB 0.004 % \*Total Harmonic Distortion \*: Nominal specification • Toshiba Electronics Co., Ltd reserves the right to change the specifications without notice. • Weight and dimensions are approximate. ENG-38 Page 38 Limited Warranty DVD Players Toshiba America Consumer Products, L.L.C. ("TACP") makes the following limited warranties to original consumers in the United States.

[Page 21](#) Toshiba-SD-6915 fix ok rev01 2004/6/04 07:30am Page 40 How to Obtain Warranty Services HOW STATE LAW RELATES TO WARRANTY If, after following all of the operating instructions in this THIS WARRANTY GIVES YOU SPECIFIC LEGAL manual and checking the section "Troubleshooting",...

This manual is also suitable for:

**Sd-6915**