



# Toshiba RD-XS32SB Owner's Manual

## page 113

Hdd/dvd video recorder



 
1  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11  
12  
13  
14  
15  
16  
17  
18

19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67  
68

69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100  
101  
102  
103  
104  
105  
106  
107  
108  
109  
110  
111  
112  
113  
114  
115  
116  
117  
118

119  
120  
121  
122  
123  
124  
125  
126  
127  
128  
129  
130  
131  
132  
133  
134  
135  
136  
137  
138  
139  
140  
141  
142  
143  
144  
145  
146  
147  
148  
149  
150  
151  
152  
153  
154  
155  
156  
157  
158  
159  
160  
161  
162  
163  
164  
165  
166  
167  
168

169  
170  
171  
172  
173  
174  
175



•




•

## Bookmarks





 OPEN/CLOSE  
DVD  
TOP MENU  
MENU  
RETURN  
ANGLE  
SUBTITLE  
AUDIO CHANNEL  
HDD  
TIMESLIP  
DVD  
INSTANT REWIND  
INSTANT STOP  
EASY  
NAVI  
REC MENU EDIT MENU  
LIBRARY  
CONTENT MENU  
ENTER  
PAUSE  
STOP  
PLAY  
REC  
QUICK MENU  
REMAIN  
DISPLAY  
TIME BAR CHP DIVIDE  
DIMMER FL SELECT  
ZOOM  
P in P  
TV  
PROGRESSIVE  
TV/VIDEO  
CHANNEL VOLUME  
INPUT SELECT  
SAT CONT SAT MONI  
TV/DVR

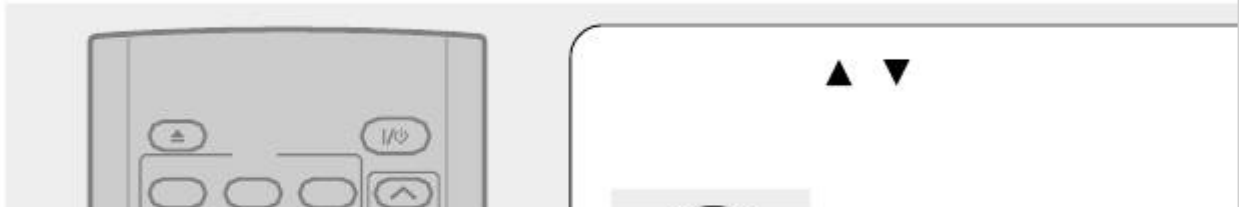

TIME BAR  
QUICK MENU

# 4

Press

/

to select "Copy" or "Same Disc".

Copy:

After the operation is completed, a specified part will remain on the disc where it was previously located.

[ENTER](#)

Same Disc:

A part will be copied to the same disc and the copied part will become another title.

# 5

Confirm picture and sound rates.

To make changes, follow the procedure below.

[QUICK MENU](#)

1) Press the QUICK MENU button to display the Quick Menu.

e.g.

[MENU](#)

2004/06/11 08 : 00pm TV : 12

[ENTER](#)

2) Press the the ENTER button.

AV record quality:

The current settings you have made ( listed. Press the ADJUST ( desired setting.

Auto rate selection:

 
The recorder automatically selects the highest possible rate, calculating from current unoccupied volume on the disc. (This operation does not insure full recording of any length program or whole use of unoccupied volume.)

# 6

[Press ENTER](#).

Copying starts.

To confirm the job progress, press the TIME BAR button

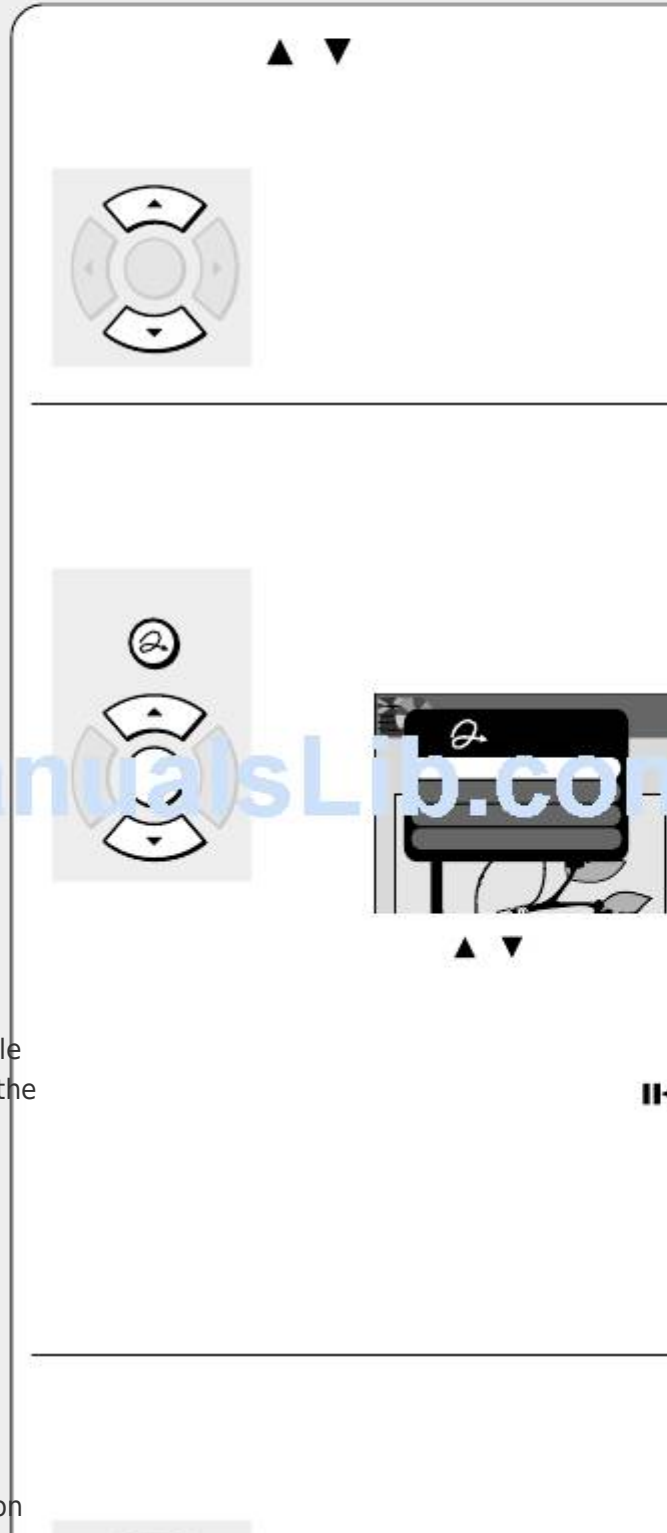

ManualsLib.com

to display the time bar. (The time bar cannot be copied.)

[ENTER](#)

When copying is completed, the buzzer sounds and the current broadcast picture appears.

Pictures and sounds displayed during copying are for monitoring purposes only. Recorded picture quality may vary.

 
(0:52:40)  
AV record quality

(Saves Original)  
(Saves Original)

/  
buttons to select an item then press  
/  
) button to select a  
Original

Same Disc  
page 161) are

113

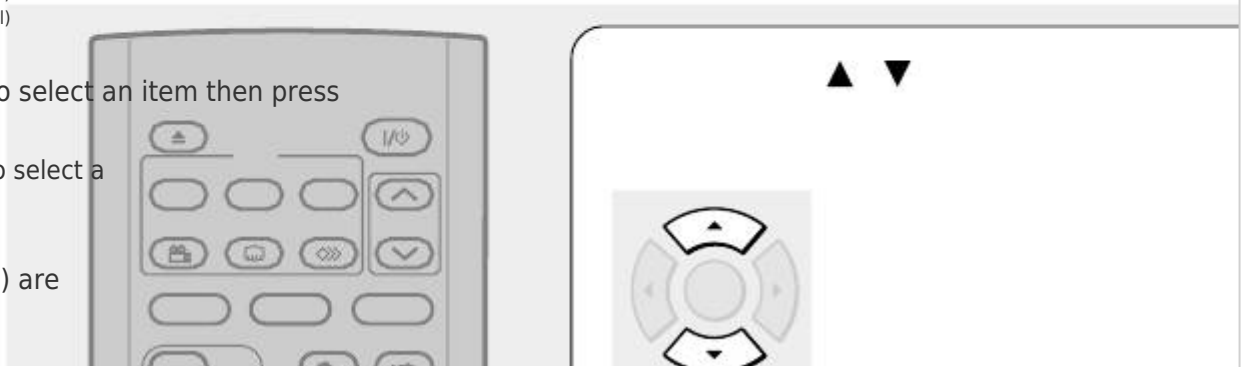

[Table of Contents](#)

[Previous Page](#)  
[Next Page](#)

1

...

112

113

114

115

## Chapters

Rd-Xs32Sb 2

4 Press / To Select "Copy" Or "Same Disc". 113



## Related Manuals for Toshiba RD-XS32SB

[DVR Toshiba RD-XS32SB Owner's Manual](#)

Toshiba rd-xs32sb hdd/dvd video recorder (175 pages)

[DVR Toshiba RD-XS32SB Owner's Manual](#)

Hdd/dvd video recorder (56 pages)

[DVR Toshiba RD-XS32SB Service Manual](#)

Hdd/dvd video recorder (54 pages)

[DVR Toshiba RD-XS35SU Owner's Manual](#)

Hdd/dvd (169 pages)

[DVR Toshiba RD-XS35SU Service Manual](#)

Hdd/dvd video recorder (53 pages)

[DVR Toshiba RD-XS35SC Owner's Manual](#)

Hdd/dvd video recorder (56 pages)

[DVR Toshiba RD-XS35SU Owner's Manual](#)

Hdd/dvd video recorder (225 pages)

[DVR Toshiba XS35 - RD - DVDr Owner's Manual](#)

Hdd/dvd video recorder (56 pages)

[DVR TOSHIBA RD-XS35SU Quick Reference](#)

Hdd/dvd video recorder (16 pages)

[DVR Toshiba RD-XS34 Owner's Manual](#)

Hdd/dvd video recorder (175 pages)

[DVR Toshiba RD-XS32SU Owner's Manual](#)

Hdd/dvd video recorder (179 pages)

[DVR Toshiba RD-XS30B Owner's Manual](#)

Hdd/dvd video recorder (60 pages)

[DVR Toshiba RD-XS30B Quick Reference](#)

Hdd/dvd recorder (8 pages)

[DVR Toshiba RD-XS34SB Service Manual](#)

Hdd/dvd video recorder (96 pages)

[DVR Toshiba RD-XS34S Owner's Manual](#)

(175 pages)

[DVR Toshiba RD-XS30SB Service Manual](#)

Hdd/dvd video recorder (54 pages)

## Related Products for Toshiba RD-XS32SB

[Toshiba RD-XS35SU](#)

[Toshiba RD-XS32SU](#)

[Toshiba RDXS32](#)

[Toshiba RD-XS30B](#)

[Toshiba RD-XS35SC](#)

[Toshiba RD-XS32SC](#)

[Toshiba RD-XS34SB](#)

[Toshiba RD-XS32SF](#)

[Toshiba RD-XS32SG](#)

[Toshiba RD-XS34SF](#)

[Toshiba RD-XS34SG](#)

[Toshiba RD-XS34S](#)

[Toshiba RD-XS30SB](#)

[Toshiba RD-XS52SU](#)

[Toshiba RD-XS52SC](#)

[Toshiba RD-XS52](#)