Important Safety Instructions; Qualified Personnel Only - Toshiba UNINTERRUPTIBLE POWER SYSTEM 1600XP Installation And Operation Manual

Single phase - 3.6/6/8/10/14/18/22 kva

```
2
3
4
5
6
Table Of Contents
7
8
9
10
11
12
13
14
15
16
17
```

68			
69			
70			
71			
72			
73			
74			
75			
76			
77			
78			
79			
80			
81			
82			
83			
84			
85			
86			
87			
88			
89			
90			
90			
(

Table of Contents







ı					
	RTANT SAFE				
	nual con OS Hade ance Leading Innova		should be follow	ed during the install	lation and
of the Up	S and its batteries.		ver-current nrote	ction device nor an	output disconnect for
the AC o	utput. A circuit breakei	should be provided			
3.6 kVA	ce should be rated a	S TOIIOWS:			
240VAC RATING					
20 A the nom	inal battery voltages	for these models a	re as follows:		
3.6 kVA BATTERY					
VOLTAGE	_				

144 Vdc

Servicing of the batteries should only be performed by a qualified factory authorized representative who is knowledgeable about batteries and the required precautions. keep unauthorized personnel away from batteries, to a range for battery eplacement, contact your nearest factory authorized service center.

Leading Innovation >>>

turn off, lockout, and tagout all equipment before connecting the power wiring to the equipment or when performing maintenance.

2.

Hardwired UpS units are not equipped with an over-current protection device, nor do they have an output disconnect for the AC output. therefore, a user-installed circuit breaker should be provided between the UpS output and the load input.

3.

the

maximum ambient operating temperature is 104 °F (40 °C).

4

4.									
Access panels should only	pe removed	by authoriz	ed Toshiba f	eld Service	personnel.				
5.									
UPS servicing should be pe	formed by	qualified To:	shiba repres	entatives on	ly.				
6.									
Battery servicing should be performed by qualified Toshiba representatives only.									
7.									
Contact your toshiba auth	rized servi	e center for	battery repl	acement.					

QUALIFIED PERSONNEL ONLY

Qualified personnel are those who have the skills and knowledge relating to the construction, installation, operation, and maintenance of the electrical equipment and have received safety training on the hazards involved (refer to the latest edition of nFpA 70e for additional safety requirements).

Qualified personnel shall:

1.

Have read the entire operation manual.

2.

be trained and authorized to safely energize, de-energize, ground, lockout and tag circuits and equipment, and clear faults in accordance with established safety practices.

3.

be trained in the proper care and use of protective equipment such as safety shoes, rubber gloves, hard hats, safety glasses, face shields, flash clothing, etc., in accordance with established safety practices.

4.

Be trained in rendering first aid.

5.

be knowledgeable about batteries and their required handling and maintenance precautions.

For further information about workplace safety visit www.osha.gov.

1600Xp Series installation and operation manual

6 kVA

8 kVA

10 kVA

35 A

45 A

60 A 6 kVA 8 kVA 10 kVA 216 Vdc	TOSHI Leading Inno					
288 Vdc 288 Vdc 14 kVA 18 kVA 22 kVA 80 A 100 A 125 A 14 kVA 18 kVA 22 kVA						
288 Vdc 3						
		'	Table	of Contents		

Previous Page Next Page

...

Related Manuals for Toshiba UNINTERRUPTIBLE POWER SYSTEM 1600XP

UPS Toshiba 1600XP Specifications

Single phase uninterruptible power systems (9 pages)

UPS Toshiba 1600XP SERIES Installation And Operation Manual

(140 pages)

UPS Toshiba 1600XP SERIES Installation And Operation Manual

1600xp series single phase - 3.6/6/8/10/14/18/22 kva (100 pages)

UPS Toshiba 1600XPi Series Installation And Operation Manual

8-22kva battery cabinet (23 pages)

UPS Toshiba 1600XP SERIES Installation And Operation Manual

8-22kva battery cabinet (22 pages)

UPS Toshiba 1600XP Series Quick Installation Manual

(4 pages)

UPS Toshiba 1600EP SERIES Instruction Manual

(58 pages)

UPS Toshiba 1600EP Series Operation Manual

Battery cabinet system single phase- 8/10/14/18 kva (16 pages)

UPS Toshiba 1600EP Series Operation Manual

Battery cabinet system single phase - 3.6/6.0 kva (22 pages)

UPS Toshiba 1600 Series Product Specifications

3.6kva 208/240v in - 208/240/120v out tower hardwire solution (3 pages)

UPS Toshiba 1600 Series Product Specifications

Uninterruptible power systems, 3.6kva 240v in - 240v out tower maintenance bypass solution (2 pages)

UPS Toshiba 1600EP Series Quick Instillation Manual

(4 pages)

UPS Toshiba 1600 Series Instruction Manual

Single phase - 2.4/3.6/6/8 kva plus (49 pages)

UPS Toshiba 1600XPi Series Installation And Operation Manual

Single phase - 3.6/5.2/6/8/10/14/18/22 kva (140 pages)

UPS Toshiba 1500 Plus Series Operation Manual

6/.8/1.0 kva 220v uninterruptible power system (31 pages)

UPS Toshiba UT1A1A010C6 User Manual

User guide (51 pages)

Related Content for Toshiba UNINTERRUPTIBLE POWER SYSTEM 1600XP

4400 Series Important Safety Instructions

Toshiba 4400 Series

5000 Series Important Safety Instructions

Toshiba 5000 Series

1400SE Series Important Safety Instructions
Toshiba 1400SE Series
G9000 SERIES Important Safety Instructions
Toshiba G9000 SERIES
5000 SERIES Important Safety Instructions
Toshiba 5000 SERIES
T1000 Series Important Safety Instructions
Toshiba T1000 Series
UC1A1A020C6TB Important Safety Instructions
Toshiba UC1A1A020C6TB
TPS0A0700AXA Important Safety Instructions
Toshiba TPS0A0700AXA

This manual is also suitable for:

1600xp serie1600xp series