



# Rs-232C; Remoteye Iii Network Card - Toshiba UNINTERRUPTIBLE POWER SYSTEM 1600XP Installation And Operation Manual

Single phase - 3.6/6/8/10/14/18/22 kva



1

2

3

4

5

6

Table Of Contents

7

8

9

10

11

12

13

14

 
15

16

17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67

68  
69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90



•

[Table of Contents](#)

•

## Bookmarks







## RS-232C

the RS232C port can be used by authorized service personnel. The port is provided using a db9 female connector located on the rear of the UPS. For reference, the pinout of the connector is illustrated below.



### RS-232C CONNECTOR PIN ASSIGNMENT

Pin

I/O

Symbol

1

 
this pin is not used

2

input

rXd

3



[Table of Contents](#)

[Previous Page](#)  
[Next Page](#)

1  
...  
23  
24  
25  
26  
27  
28  
29  
30

## Related Manuals for Toshiba UNINTERRUPTIBLE POWER SYSTEM 1600XP

### [UPS Toshiba 1600XP Specifications](#)

Single phase uninterruptible power systems (9 pages)

### [UPS Toshiba 1600XP SERIES Installation And Operation Manual](#)

(140 pages)

### [UPS Toshiba 1600XP SERIES Installation And Operation Manual](#)

1600xp series single phase - 3.6/6/8/10/14/18/22 kva (100 pages)

### [UPS Toshiba 1600XPi Series Installation And Operation Manual](#)

8-22kva battery cabinet (23 pages)

### [UPS Toshiba 1600XP SERIES Installation And Operation Manual](#)

8-22kva battery cabinet (22 pages)

### [UPS Toshiba 1600XP Series Quick Installation Manual](#)

(4 pages)

### [UPS Toshiba 1600EP SERIES Instruction Manual](#)

(58 pages)

### [UPS Toshiba 1600EP Series Operation Manual](#)

Battery cabinet system single phase- 8/10/14/18 kva (16 pages)

### [UPS Toshiba 1600EP Series Operation Manual](#)

Battery cabinet system single phase - 3.6/6.0 kva (22 pages)

### [UPS Toshiba 1600 Series Product Specifications](#)

3.6kva 208/240v in - 208/240/120v out tower hardwire solution (3 pages)

### [UPS Toshiba 1600 Series Product Specifications](#)

Uninterruptible power systems, 3.6kva 240v in - 240v out tower maintenance bypass solution (2 pages)

### [UPS Toshiba 1600EP Series Quick Installation Manual](#)

(4 pages)

### [UPS Toshiba 1600 Series Instruction Manual](#)

Single phase - 2.4/3.6/6/8 kva plus (49 pages)

### [UPS Toshiba 1600XPi Series Installation And Operation Manual](#)

Single phase - 3.6/5.2/6/8/10/14/18/22 kva (140 pages)

### [UPS Toshiba 1500 Plus Series Operation Manual](#)

6/.8/1.0 kva 220v uninterruptible power system (31 pages)

### [UPS Toshiba UT1A1A010C6 User Manual](#)

User guide (51 pages)

## Related Content for Toshiba UNINTERRUPTIBLE POWER SYSTEM 1600XP

### [UE3G2L036C61T Rs-232C](#)

Toshiba UE3G2L036C61T

### [1400XL Plus Series Rs-232C](#)

Toshiba 1400XL Plus Series

[UF1A1A015C6\(T\) Rs-232C](#)

Toshiba UF1A1A015C6(T)

[4200FA Rs-232C](#)

TOSHIBA 4200FA

[4200 series Rs-232C](#)

Toshiba 4200 series

[4200FA Rs-232C](#)

Toshiba 4200FA

[4300 series Rs-232C](#)

Toshiba 4300 series

[4200 FA CT Rs-232C](#)

Toshiba 4200 FA CT

This manual is also suitable for:

[1600xp serie1600xp series](#)