

Touchscreen Menu Tree; Front Panel Layout - Toshiba UNINTERRUPTIBLE POWER SYSTEM 1600XP Installation And Operation Manual

Single phase - 3.6/6/8/10/14/18/22 kva

1

2

3

4

5

6

Table Of Contents

7

8

9

10

11

12

13

14

 
15

16

17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90



•

[Table of Contents](#)

•

Bookmarks



Touchscreen Menu Tree

Front Panel Layout
TOSHIBA
Leading Innovation >>>

the diagram below shows the menu tree for the touchscreen display. the four folder tabs and their associated sub-menu choices are shown on the left, and a description of the displays /choices are detailed on the right.

Tab: Main

ID/RUN-STOP

Tab: Monitor

Monitor Menu

Tab: Settings

Settings Menu



Records Menu

Tab: Records

36



IN

DC

OUT

BYP

ID

Output

DC Bus

Ctrl/Cfg

Disp/Reye

Test

Faults

Warnings

Operation

MAIN - displays the starting screen. it has a RUN and STOP key that place the UpS in in-line or bypass mode respectively.

MONITOR - graphically displays the current status of the UpS (on-line, backup, bypass, Shutdown)

BAT

in an interactive power flow block diagram. Selecting one of the C&C

blocks provides additional detailed data of the input (IN), output (OUT),

D&E

bypass (BYP), battery (BAT), and dC bus (DC), Control & Configuration (C&C), and display & external (D&E) devices.


SETTINGS - Allows monitoring and/or modification of UPS pa-

Input

rameters. parameters that can be viewed or modified vary depending

Bypass

on the security level of the login password entered using keypad.

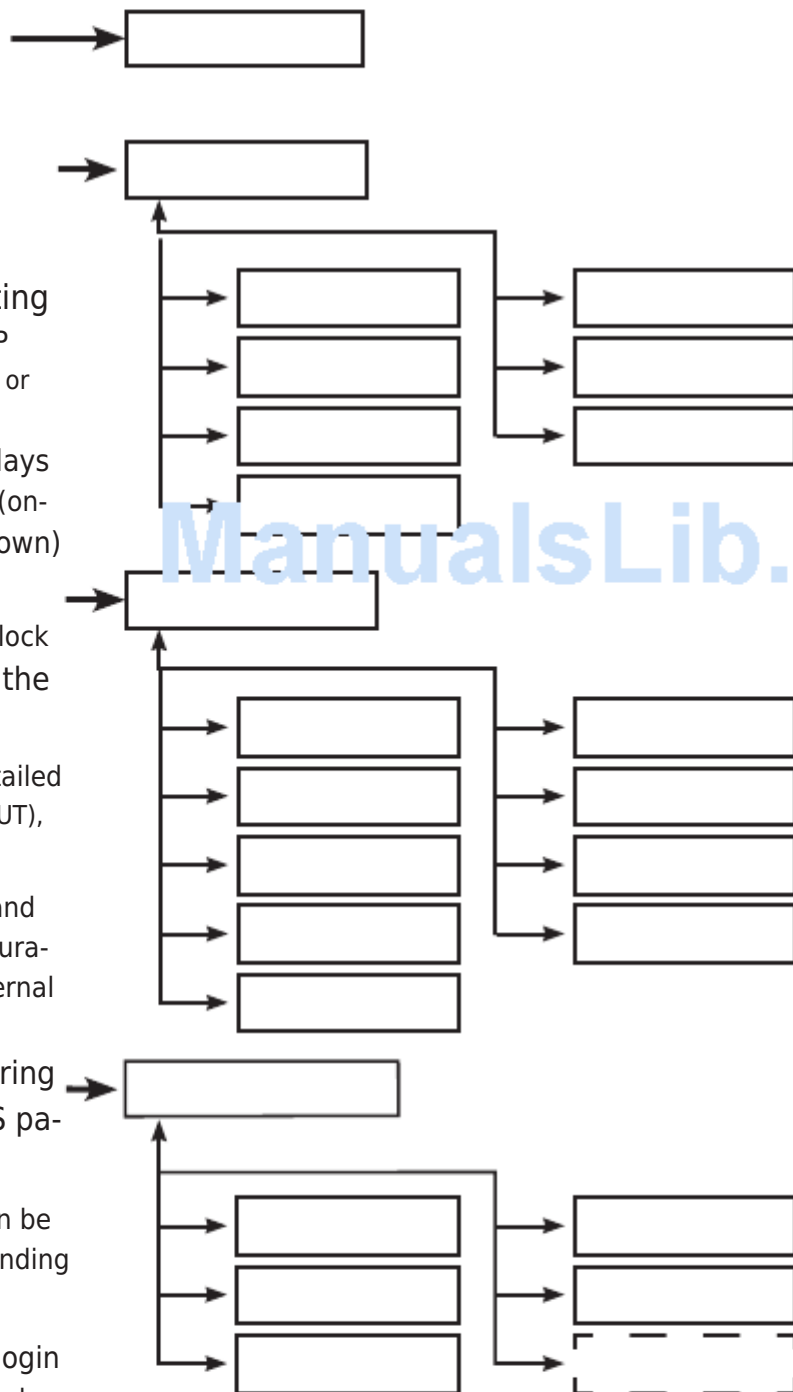

Batt

History

Records - displays the most recent 32 Test, Backup, Faults,



Warning, Operation, and System

Backup

change records.

System

System records are only available at the distributor and depot security levels.

in any record set, if more than 32 incidences have occurred, only the most recent 32 record are retained in each report.



1600Xp Series installation and operation manual

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
41
42
43
44
45
46
47
48

Related Manuals for Toshiba UNINTERRUPTIBLE POWER SYSTEM 1600XP

[UPS Toshiba 1600XP Specifications](#)

Single phase uninterruptible power systems (9 pages)

[UPS Toshiba 1600XP SERIES Installation And Operation Manual](#)

(140 pages)

[UPS Toshiba 1600XP SERIES Installation And Operation Manual](#)

1600xp series single phase - 3.6/6/8/10/14/18/22 kva (100 pages)

[UPS Toshiba 1600XPi Series Installation And Operation Manual](#)

8-22kva battery cabinet (23 pages)

[UPS Toshiba 1600XP SERIES Installation And Operation Manual](#)

8-22kva battery cabinet (22 pages)

[UPS Toshiba 1600XP Series Quick Installation Manual](#)

(4 pages)

[UPS Toshiba 1600EP SERIES Instruction Manual](#)

(58 pages)

[UPS Toshiba 1600EP Series Operation Manual](#)

Battery cabinet system single phase- 8/10/14/18 kva (16 pages)

[UPS Toshiba 1600EP Series Operation Manual](#)

Battery cabinet system single phase - 3.6/6.0 kva (22 pages)

[UPS Toshiba 1600 Series Product Specifications](#)

3.6kva 208/240v in - 208/240/120v out tower hardwire solution (3 pages)

[UPS Toshiba 1600 Series Product Specifications](#)

Uninterruptible power systems, 3.6kva 240v in - 240v out tower maintenance bypass solution (2 pages)

[UPS Toshiba 1600EP Series Quick Installation Manual](#)

(4 pages)

[UPS Toshiba 1600 Series Instruction Manual](#)

Single phase - 2.4/3.6/6/8 kva plus (49 pages)

[UPS Toshiba 1600XPi Series Installation And Operation Manual](#)

Single phase - 3.6/5.2/6/8/10/14/18/22 kva (140 pages)

[UPS Toshiba 1500 Plus Series Operation Manual](#)

6/.8/1.0 kva 220v uninterruptible power system (31 pages)

[UPS Toshiba UT1A1A010C6 User Manual](#)

User guide (51 pages)

Related Content for Toshiba UNINTERRUPTIBLE POWER SYSTEM 1600XP

[4400 Series 4400 Menu Tree](#)

[Toshiba 4400 Series](#)

[4200FA Menu Tree](#)

[Toshiba 4200FA](#)

[4300 series 4300 Menu Tree](#)

Toshiba 4300 series

[G9400 Series Menu](#)

Toshiba G9400 Series

[G2020 Series Menu](#)

Toshiba G2020 Series

[G9000 Series Menu](#)

Toshiba G9000 Series

[G8000MM Series Menu](#)

Toshiba G8000MM Series

[G9000 SERIES Menu](#)

Toshiba G9000 SERIES

This manual is also suitable for:

[1600xp serie1600xp series](#)