



# Screen Tab: Main - Toshiba UNINTERRUPTIBLE POWER SYSTEM 1600XP Installation And Operation Manual

Single phase - 3.6/6/8/10/14/18/22 kva



1

2

3

4

5

6

Table Of Contents

7

8

9

10

11

12

13

14

 
15

16

17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67

68  
69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90



•

[Table of Contents](#)

•

## Bookmarks







## Screen Tab: Main

the main tab is also the opening tab on startup for the  
UpS. press **RUN** to place the UpS in on-line mode,  
and press **STOP** to place the UpS in bypass mode.

### RUN/Stop the UPS

press and momentarily hold (approximately one to two  
seconds) the RUN or STOP key to  
on-line or bypass mode respectively.

the touchscreen display can be disabled for safety or  
convenience by pressing the touchscreen lockout key,

(note: the touchscreen lockout key is disabled when  
the screen is in keypad mode.)



the lockout key will change to  
screen will not respond to any input except a touch to  
the lockout key.  
touching the lockout key again will toggle the lockout  
off. the graphic will change to



screen is active.  
1600Xp Series installation and operation manual

HOME  
place the UpS in  
UPS Serial Number  
20080112345  
UPS Typeform  
UXpb2b100C6

HOME  
and the touch-  
indicating the touch-  
UPS Serial Number  
20080112345  
UPS Typeform  
UXpb2b100C6

USR  
Main

1600  
XP

On-Line UPS

MAIN SCREEN




USR  
Main

1600  
XP

On-Line UPS

MAIN SCREEN DISABLED

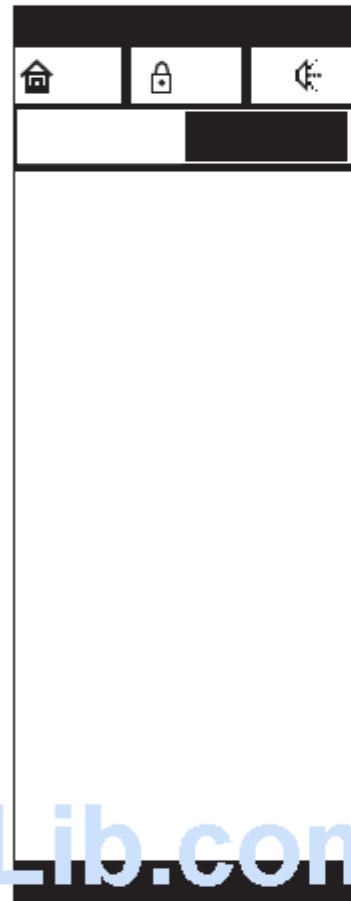

ManualsLib.com

UpS Controls

RUN

STOP

**TOSHIBA**  
Leading Innovation >>>

UpS Controls

RUN

STOP

37



[Table of Contents](#)

[Previous Page](#)  
[Next Page](#)

1  
...  
42  
43  
44  
45  
46  
47  
48  
49

## Related Manuals for Toshiba UNINTERRUPTIBLE POWER SYSTEM 1600XP

### [UPS Toshiba 1600XP Specifications](#)

Single phase uninterruptible power systems (9 pages)

### [UPS Toshiba 1600XP SERIES Installation And Operation Manual](#)

(140 pages)

### [UPS Toshiba 1600XP SERIES Installation And Operation Manual](#)

1600xp series single phase - 3.6/6/8/10/14/18/22 kva (100 pages)

### [UPS Toshiba 1600XPi Series Installation And Operation Manual](#)

8-22kva battery cabinet (23 pages)

### [UPS Toshiba 1600XP SERIES Installation And Operation Manual](#)

8-22kva battery cabinet (22 pages)

### [UPS Toshiba 1600XP Series Quick Installation Manual](#)

(4 pages)

### [UPS Toshiba 1600EP SERIES Instruction Manual](#)

(58 pages)

### [UPS Toshiba 1600EP Series Operation Manual](#)

Battery cabinet system single phase- 8/10/14/18 kva (16 pages)

### [UPS Toshiba 1600EP Series Operation Manual](#)

Battery cabinet system single phase - 3.6/6.0 kva (22 pages)

### [UPS Toshiba 1600 Series Product Specifications](#)

3.6kva 208/240v in - 208/240/120v out tower hardwire solution (3 pages)

### [UPS Toshiba 1600 Series Product Specifications](#)

Uninterruptible power systems, 3.6kva 240v in - 240v out tower maintenance bypass solution (2 pages)

### [UPS Toshiba 1600EP Series Quick Installation Manual](#)

(4 pages)

### [UPS Toshiba 1600 Series Instruction Manual](#)

Single phase - 2.4/3.6/6/8 kva plus (49 pages)

### [UPS Toshiba 1600XPi Series Installation And Operation Manual](#)

Single phase - 3.6/5.2/6/8/10/14/18/22 kva (140 pages)

### [UPS Toshiba 1500 Plus Series Operation Manual](#)

6/.8/1.0 kva 220v uninterruptible power system (31 pages)

### [UPS Toshiba UT1A1A010C6 User Manual](#)

User guide (51 pages)

## Related Content for Toshiba UNINTERRUPTIBLE POWER SYSTEM 1600XP

### [5000 Series Tab: Main - Run/Stop](#)

Toshiba 5000 Series

### [5000 SERIES Tab: Main - Run/Stop](#)

Toshiba 5000 SERIES



[G9000 SERIES Figure 4-2 Main Screen](#)

Toshiba G9000 SERIES

[G9000 SERIES Figure 4-2 Main Screen](#)

Toshiba G9000 SERIES

[G9000 SERIES Figure 4-2 Main Screen](#)

Toshiba G9000 SERIES

[T90S3S08KS6XSN Figure 2.2 Main Screen](#)

Toshiba T90S3S08KS6XSN

[G9000 SERIES Figure 4-2 Main Screen](#)

Toshiba G9000 SERIES

[4400 Series Tab: Main - Run/Stop](#)

Toshiba 4400 Series

This manual is also suitable for:

[1600xp serie1600xp series](#)