

Screen Tab: Settings - Toshiba UNINTERRUPTIBLE POWER SYSTEM 1600XP Installation And Operation Manual

Single phase - 3.6/6/8/10/14/18/22 kva

1

2

3

4

5

6

Table Of Contents

7

8

9

10

11

12

13

14

 
15

16

17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90



•

[Table of Contents](#)

•

Bookmarks



Screen Tab: Settings

the tables on pages 47-51 of the 1600Xp Settings parameters that can be viewed in the monitor tab.



example: the Settings parameter Batt Test Freq (battery test Frequency) can be viewed by USr (User) level and above, only logged in Adm (Administrators) and above can edit the value.

each key displays a block of relevant command parameters:

Key - (Cmd ID range)

•

ID -

(000-099) UPS specific information such as serial number, software versions, installation date.

•

Input -

(100-199) input measured/calculated data such as input voltage, frequency, current, power, over-/under- voltage settings.

•

Output -

(200-299) output measured/calculated data such as output voltage, frequency, current, power, over-/under-voltage settings.



Bypass -

(300-399) Bypass data such as configuration, voltage, current, power, OV detection level.

DC Bus -

(400-499) data such as total voltage, rated voltage, positive and negative bus voltages.

Batt -

(500-599) battery voltage, charger status, total discharges, shutdown voltage.

Ctrl/Cfg -

(600-699) Control and configuration list system and battery temperatures, system status, startup delay, auto-transfer window, restart mode.

History -

(700-799) History lists metrics like system operation time, total over loads, hi system temp.

Disp/Reye -

(800-849) Display specific parameters like Disp. Firmware version, sleep timer, buzzer status, display calibration points, and remoteye iii settings.

(850-859) lists remoteye iii ip address, ip mask, Status, baud rate, datalink status.

42

Types of Parameters

HOME
USR

ManualsLib.com

Settings

ID

Output

DC Bus

Ctrl/Cfg

Disp/Reye


SETTINGS OPENING SCREEN

Input

Bypass

Batt

History

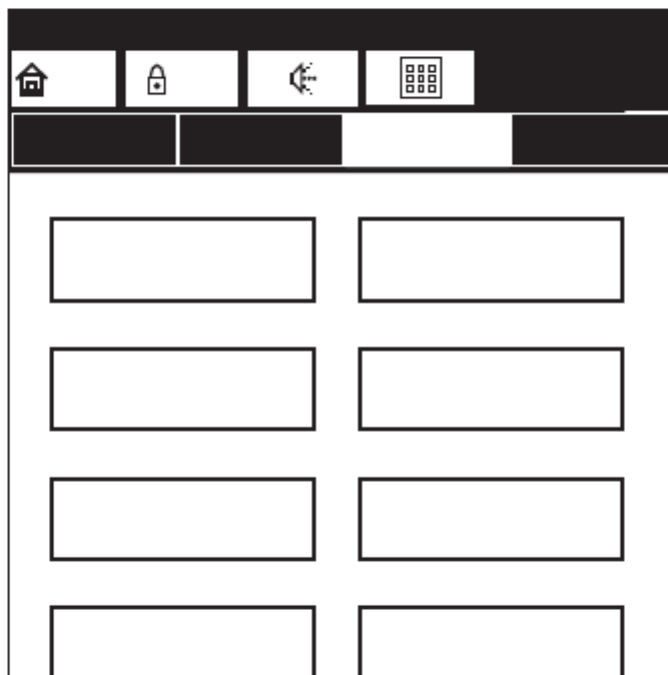

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
47
48
49
50
51
52
53
54

Related Manuals for Toshiba UNINTERRUPTIBLE POWER SYSTEM 1600XP

[UPS Toshiba 1600XP Specifications](#)

Single phase uninterruptible power systems (9 pages)

[UPS Toshiba 1600XP SERIES Installation And Operation Manual](#)

(140 pages)

[UPS Toshiba 1600XP SERIES Installation And Operation Manual](#)

1600xp series single phase - 3.6/6/8/10/14/18/22 kva (100 pages)

[UPS Toshiba 1600XPi Series Installation And Operation Manual](#)

8-22kva battery cabinet (23 pages)

[UPS Toshiba 1600XP SERIES Installation And Operation Manual](#)

8-22kva battery cabinet (22 pages)

[UPS Toshiba 1600XP Series Quick Installation Manual](#)

(4 pages)

[UPS Toshiba 1600EP SERIES Instruction Manual](#)

(58 pages)

[UPS Toshiba 1600EP Series Operation Manual](#)

Battery cabinet system single phase- 8/10/14/18 kva (16 pages)

[UPS Toshiba 1600EP Series Operation Manual](#)

Battery cabinet system single phase - 3.6/6.0 kva (22 pages)

[UPS Toshiba 1600 Series Product Specifications](#)

3.6kva 208/240v in - 208/240/120v out tower hardwire solution (3 pages)

[UPS Toshiba 1600 Series Product Specifications](#)

Uninterruptible power systems, 3.6kva 240v in - 240v out tower maintenance bypass solution (2 pages)

[UPS Toshiba 1600EP Series Quick Installation Manual](#)

(4 pages)

[UPS Toshiba 1600 Series Instruction Manual](#)

Single phase - 2.4/3.6/6/8 kva plus (49 pages)

[UPS Toshiba 1600XPi Series Installation And Operation Manual](#)

Single phase - 3.6/5.2/6/8/10/14/18/22 kva (140 pages)

[UPS Toshiba 1500 Plus Series Operation Manual](#)

6/.8/1.0 kva 220v uninterruptible power system (31 pages)

[UPS Toshiba UT1A1A010C6 User Manual](#)

User guide (51 pages)

Related Content for Toshiba UNINTERRUPTIBLE POWER SYSTEM 1600XP

[G8000MM Series Figure 2.2 Main Screen](#)

Toshiba G8000MM Series

[5000 Series Toolbar: Screen Lock/ Screen Unlock](#)

Toshiba 5000 Series

[5000 SERIES Tab: Main - Run/Stop](#)

Toshiba 5000 SERIES

[G9000 SERIES Figure 4-2 Main Screen](#)

Toshiba G9000 SERIES

[G9000 SERIES Figure 4-2 Main Screen](#)

Toshiba G9000 SERIES

[G9000 SERIES Figure 4-2 Main Screen](#)

Toshiba G9000 SERIES

[T90S3S08KS6XSN Figure 2.2 Main Screen](#)

Toshiba T90S3S08KS6XSN

[G9000 SERIES Figure 4-2 Main Screen](#)

Toshiba G9000 SERIES

This manual is also suitable for:

[1600xp serie1600xp series](#)