

 
Settings Parameters - Toshiba UNINTERRUPTIBLE POWER SYSTEM 1600XP Installation And Operation Manual

Single phase - 3.6/6/8/10/14/18/22 kva

1
2
3
4
5
6
Table Of Contents
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90



•

[Table of Contents](#)

•

Bookmarks



Settings Parameters

the following table lists parameters parameters that can be viewed under the monitor tab of the touch-screen display



the security levels are, from lowest to highest level:

Access Level

Sec. Abbreviation

User

Administrator

the table headings are:

- Cmd ID

- Command id number. A three digit number between 000 and 999. not all numbers have an associated parameter. _____

-

Description on LCD

- display text, often abbreviated.

.

Brief Description

- brief description of the location of the parameter.

.

Location Map - Tab/Blk

the tabs are main, monitor, Settings, records.

e.g. Cmd 501 (battery Voltage can be viewed under the monitor tab, in the bAtt block)

UPS Status is displayed in the display header Status field.

UpS Faults and warnings are shown in the display footer, at the bottom of the display.

.

Example

- Shows an example of the parameter displayed on the touchscreen.

.

Rqd Security Level to Change/By

ting: User, Administrator, distributor.

46

USr

Adm

- gives the menu location for the parameter by tab and block.

- the required security level to change a parameters value or set-

1600Xp Series installation and operation manual

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
51
52
53
54
55
56
57
58

Related Manuals for Toshiba UNINTERRUPTIBLE POWER SYSTEM 1600XP

[UPS Toshiba 1600XP Specifications](#)

Single phase uninterruptible power systems (9 pages)

[UPS Toshiba 1600XP SERIES Installation And Operation Manual](#)

(140 pages)

[UPS Toshiba 1600XP SERIES Installation And Operation Manual](#)

1600xp series single phase - 3.6/6/8/10/14/18/22 kva (100 pages)

[UPS Toshiba 1600XPi Series Installation And Operation Manual](#)

8-22kva battery cabinet (23 pages)

[UPS Toshiba 1600XP SERIES Installation And Operation Manual](#)

8-22kva battery cabinet (22 pages)

[UPS Toshiba 1600XP Series Quick Installation Manual](#)

(4 pages)

[UPS Toshiba 1600EP SERIES Instruction Manual](#)

(58 pages)

[UPS Toshiba 1600EP Series Operation Manual](#)

Battery cabinet system single phase- 8/10/14/18 kva (16 pages)

[UPS Toshiba 1600EP Series Operation Manual](#)

Battery cabinet system single phase - 3.6/6.0 kva (22 pages)

[UPS Toshiba 1600 Series Product Specifications](#)

3.6kva 208/240v in - 208/240/120v out tower hardwire solution (3 pages)

[UPS Toshiba 1600 Series Product Specifications](#)

Uninterruptible power systems, 3.6kva 240v in - 240v out tower maintenance bypass solution (2 pages)

[UPS Toshiba 1600EP Series Quick Installation Manual](#)

(4 pages)

[UPS Toshiba 1600 Series Instruction Manual](#)

Single phase - 2.4/3.6/6/8 kva plus (49 pages)

[UPS Toshiba 1600XPi Series Installation And Operation Manual](#)

Single phase - 3.6/5.2/6/8/10/14/18/22 kva (140 pages)

[UPS Toshiba 1500 Plus Series Operation Manual](#)

6/.8/1.0 kva 220v uninterruptible power system (31 pages)

[UPS Toshiba UT1A1A010C6 User Manual](#)

User guide (51 pages)

Related Content for Toshiba UNINTERRUPTIBLE POWER SYSTEM 1600XP

[G9000 SERIES Figure 4-17 External Signal Input Terminal Block \(With Default Settings\)](#)

Toshiba G9000 SERIES

[T90S3S08KS6XSN Standard Environmental Parameters](#)

Toshiba T90S3S08KS6XSN

[1000 Series Front Panel Settings](#)

Toshiba 1000 Series

[4200FA Settings For Calendar And Clock](#)

TOSHIBA 4200FA

[4200 series Settings For Calendar And Clock](#)

Toshiba 4200 series

[4200FA Settings For Calendar And Clock](#)

Toshiba 4200FA

[4200 FA CT Settings For Calendar And Clock](#)

Toshiba 4200 FA CT

[4200FA Table 6.13 Remoteye Iii Monitored Parameters](#)

Toshiba 4200FA

This manual is also suitable for:

[1600xp serie1600xp series](#)