

Table Of Contents - Toshiba UNINTERRUPTIBLE POWER SYSTEM 1600XP Installation And Operation Manual

Single phase - 3.6/6/8/10/14/18/22 kva

1

2

3

4

5

6

Table Of Contents

7

8

9

10

11

12

13

14

15

16

17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90

• PAGE

7

OF 90 GO

•

[Table of Contents](#)

•

Bookmarks



Table of Contents

TOSHIBA General Safety Instructions	1
Leading Innovation >>> Symbols	1
Signal words	2
regulatory Compliance Statement	2
IMPORTANT SAFETY INSTRUCTIONS	3
QUALiFied perSonnel only	3
INSTRUCTIONS IMPORTANTES CONCERNANT LA SÉCURITÉ	4
Product Description	5
Application and Use	5
output rating	5

power backup	5
power Conditioning	5
Inspection/Storage/Disposal	6
inspection	6
<hr/>	
Storage	6
disposal	6
Installation Precautions	7
Conductor Routing and Grounding	9
Operating Precautions	9
Equipment Warning Labels	10
UPS Connections	13
terminal block	13
wire Size and tightening torque	14
Communication Interfaces	16
UpS IAn Shutdown Signal operation	17
rS-232C	18
remoteye iii network Card	18
UPS Specifications	19
Operating the UPS	25
initial Startup (First power-Up)	25
battery backup time and discharge process	26
Starting/Stopping the UpS	27
battery recharging	28
Operating Modes	29
on-line (run operation)	
Static-bypass (Stop operation)	29
battery backup (on batteries)	30
1600Xp Series installation and operation manual	
.....	29



[Previous Page](#)
[Next Page](#)

1
...
4
5
6
7
8
9
10
11

Related Manuals for Toshiba UNINTERRUPTIBLE POWER SYSTEM 1600XP

[UPS Toshiba 1600XP Specifications](#)

Single phase uninterruptible power systems (9 pages)

[UPS Toshiba 1600XP SERIES Installation And Operation Manual](#)

(140 pages)

[UPS Toshiba 1600XP SERIES Installation And Operation Manual](#)

1600xp series single phase - 3.6/6/8/10/14/18/22 kva (100 pages)

[UPS Toshiba 1600XPi Series Installation And Operation Manual](#)

8-22kva battery cabinet (23 pages)

[UPS Toshiba 1600XP SERIES Installation And Operation Manual](#)

8-22kva battery cabinet (22 pages)

[UPS Toshiba 1600XP Series Quick Installation Manual](#)

(4 pages)

[UPS Toshiba 1600EP SERIES Instruction Manual](#)

(58 pages)

[UPS Toshiba 1600EP Series Operation Manual](#)

Battery cabinet system single phase- 8/10/14/18 kva (16 pages)

[UPS Toshiba 1600EP Series Operation Manual](#)

Battery cabinet system single phase - 3.6/6.0 kva (22 pages)

[UPS Toshiba 1600 Series Product Specifications](#)

3.6kva 208/240v in - 208/240/120v out tower hardwire solution (3 pages)

[UPS Toshiba 1600 Series Product Specifications](#)

Uninterruptible power systems, 3.6kva 240v in - 240v out tower maintenance bypass solution (2 pages)

[UPS Toshiba 1600EP Series Quick Installation Manual](#)

(4 pages)

[UPS Toshiba 1600 Series Instruction Manual](#)

Single phase - 2.4/3.6/6/8 kva plus (49 pages)

[UPS Toshiba 1600XPi Series Installation And Operation Manual](#)

Single phase - 3.6/5.2/6/8/10/14/18/22 kva (140 pages)

[UPS Toshiba 1500 Plus Series Operation Manual](#)

6/.8/1.0 kva 220v uninterruptible power system (31 pages)

[UPS Toshiba UT1A1A010C6 User Manual](#)

User guide (51 pages)

Related Content for Toshiba UNINTERRUPTIBLE POWER SYSTEM 1600XP

[4400 Series Appendix B - Command Parameter Definitions Table](#)

Toshiba 4400 Series

[5000 Series Appendix B - Command Parameter Definitions Table](#)

Toshiba 5000 Series

[1400SE Series Contents](#)

Toshiba 1400SE Series

[5000 SERIES Appendix B - Command Parameter Definitions Table](#)

Toshiba 5000 SERIES

[UC1A1A020C6TB Contents](#)

Toshiba UC1A1A020C6TB

[t1000 Appendix D: T1000 Packing Lists And Kit Contents](#)

Toshiba t1000

[RemotEye II Package Contents](#)

Toshiba RemotEye II

[4400 Series Appendix B - Command Parameter Definitions Table](#)

Toshiba 4400 Series

This manual is also suitable for:

[1600xp serie1600xp series](#)