

 
Preventive Maintenance/Parts Replacement; Preventive Maintenance; Cleaning The Touchscreen - Toshiba UNINTERRUPTIBLE POWER SYSTEM 1600XP Installation And Operation Manual

Single phase - 3.6/6/8/10/14/18/22 kva

1
2
3
4
5
6
Table Of Contents
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90



•

[Table of Contents](#)

•

Bookmarks



Protection Item

Internal Overheat

ICd message

TOSHIBA

Cause

Leading Innovation >>>

High ambient temperature

operation mode

Shutdown - no output

After Fault

Audible Alarm

Visible Alarm

relay Contact

Alarm

Auto-retransfer

Preventive Maintenance/Parts Replacement

Preventive Maintenance



toshiba 1600Xp Series of uninterruptible power systems have been designed to provide years of trouble-free operation requiring a minimum of preventive maintenance.

the best preventive measure that the UpS user can take is to keep the area around the unit, particularly the air inlet vents, clean and free of moisture and dust accumulations. if the atmosphere of the installation site is very dusty, use a vacuum cleaner to periodically remove dust accumulations around and from the unit.

Only a qualified Toshiba representative should be allowed to perform any routine maintenance or service on this equipment other than those preventive maintenance details which are described directly above this caution.

Cleaning the Touchscreen

The touchscreen display is covered with a protective Teflon coating. It should be cleaned with a clean, damp cotton cloth to avoid scratching the coating.

68

BUILT-IN UPS FAULT PROTECTION FUNCTIONS (CONT'D)

oVerHeAt

Fan failure;

Chopper malfunction

bypass operation - Chopper and inverter are stopped

yes - Continuous buzzer

CAUTION

DC Circuit

Overvoltage

dC-oV

inverter ol - transfer to bypass

red Fault led on

Fault relay closed

bypass relay closed

no

1600Xp Series installation and operation manual

DC Circuit

Overcurrent

dC-oC

inverter/chopper fault

ManualsLib.com



[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
73
74
75
76
77
78
79
80

Related Manuals for Toshiba UNINTERRUPTIBLE POWER SYSTEM 1600XP

[UPS Toshiba 1600XP Specifications](#)

Single phase uninterruptible power systems (9 pages)

[UPS Toshiba 1600XP SERIES Installation And Operation Manual](#)

(140 pages)

[UPS Toshiba 1600XP SERIES Installation And Operation Manual](#)

1600xp series single phase - 3.6/6/8/10/14/18/22 kva (100 pages)

[UPS Toshiba 1600XPi Series Installation And Operation Manual](#)

8-22kva battery cabinet (23 pages)

[UPS Toshiba 1600XP SERIES Installation And Operation Manual](#)

8-22kva battery cabinet (22 pages)

[UPS Toshiba 1600XP Series Quick Installation Manual](#)

(4 pages)

[UPS Toshiba 1600EP SERIES Instruction Manual](#)

(58 pages)

[UPS Toshiba 1600EP Series Operation Manual](#)

Battery cabinet system single phase- 8/10/14/18 kva (16 pages)

[UPS Toshiba 1600EP Series Operation Manual](#)

Battery cabinet system single phase - 3.6/6.0 kva (22 pages)

[UPS Toshiba 1600 Series Product Specifications](#)

3.6kva 208/240v in - 208/240/120v out tower hardwire solution (3 pages)

[UPS Toshiba 1600 Series Product Specifications](#)

Uninterruptible power systems, 3.6kva 240v in - 240v out tower maintenance bypass solution (2 pages)

[UPS Toshiba 1600EP Series Quick Installation Manual](#)

(4 pages)

[UPS Toshiba 1600 Series Instruction Manual](#)

Single phase - 2.4/3.6/6/8 kva plus (49 pages)

[UPS Toshiba 1600XPi Series Installation And Operation Manual](#)

Single phase - 3.6/5.2/6/8/10/14/18/22 kva (140 pages)

[UPS Toshiba 1500 Plus Series Operation Manual](#)

6/.8/1.0 kva 220v uninterruptible power system (31 pages)

[UPS Toshiba UT1A1A010C6 User Manual](#)

User guide (51 pages)

Related Content for Toshiba UNINTERRUPTIBLE POWER SYSTEM 1600XP

[UE3G2L036C61T Preventive Maintenance/Parts Replacement](#)

Toshiba UE3G2L036C61T

[1400 Series Preventive Maintenance/Parts Replacement](#)

Toshiba 1400 Series

[1400XL Plus Series Preventive Maintenance/Parts Replacement](#)

Toshiba 1400XL Plus Series

[1600XP SERIES Preventive Maintenance/Parts Replacement](#)

Toshiba 1600XP SERIES

[1800 Series Preventive And Scheduled Maintenance/Parts Replacement](#)

Toshiba 1800 Series

[G9400 Series Parts Replacement](#)

Toshiba G9400 Series

[1600XPi Series Preventive And Scheduled Maintenance / Part Replacement](#)

Toshiba 1600XPi Series

[1600EP Series Preventive And Scheduled Maintenance / Part Replacement](#)

Toshiba 1600EP Series

This manual is also suitable for:

[1600xp serie1600xp series](#)