



# **TOSHIBA**

Toshiba SD-5010 Owner's Manual



1

2

3

4

5

6

7

Table Of Contents

8

9

10

11

12

13

14

15

16

17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28



•

•

## Bookmarks

[Download this manual](#)

## Quick Links





**DVD PLAYER**

**SD5010KB**

*OWNER'S MANUAL*

© 2010 Toshiba Corporation

DIGITAL VIDEO

Introduction



Connections

Basic playback

Function setup

Others

**TOSHIBA**

[Table of Contents](#)

[Next Page](#)

1  
2  
3  
4  
5

## Related Manuals for Toshiba SD-5010

### [DVD Player Toshiba SD5010KB Owner's Manual](#)

Upscaling dvd player with usb (28 pages)

### [DVD Player Toshiba SD-5000KU Owner's Manual](#)

Sd-5000ku user's guide (41 pages)

### [DVD Player Toshiba SD-5000KU Owner's Manual](#)

Toshiba dvd video player owner's manual (49 pages)

### [DVD Player Toshiba SD-5000 Specifications](#)

1080i upconverting dvd player (2 pages)

### [DVD Player Toshiba SD4015KE Owner's Manual](#)

Toshib dvd player (28 pages)

### [DVD Player Toshiba SD-5970SC Owner's Manual](#)

Dvd video player (65 pages)

### [DVD Player Toshiba SD-5970SU Owner's Manual](#)

(63 pages)

### [DVD Player Toshiba SD-5970SU Owner's Manual](#)

(74 pages)

### [DVD Player Toshiba SD-5980SU Owner's Manual](#)

Toshiba dvd video / cd player owner's manual sd-5980su (48 pages)

### [DVD Player Toshiba SD-5109U Owner's Manual](#)

Sd-5109u user's guide (48 pages)

### [DVD Player Toshiba SD-5700N Owner's Manual](#)

Dvd video/audio player (68 pages)

### [DVD Player Toshiba SD-5700 Owner's Manual](#)

Dvd video/audio player (68 pages)

### [DVD Player Toshiba SD-5109 Owner's Manual](#)

(49 pages)

### [DVD Player Toshiba SD-5109 Service Manual](#)

Dvd video player (32 pages)

### [DVD Player Toshiba SD590 - ALL REGION MULTI-SYSTEM HI-RESOLUTION PROGRESSIVE SCAN DVD/CD PLAYER Owner's Manual](#)

Owners manual (26 pages)

### [DVD Player Toshiba SD5300KC Owner's Manual](#)

Toshiba sd5300kc dvd player owner's manual (28 pages)

## Summary of Contents for Toshiba SD-5010

[Page 1](#) Introduction DIGITAL VIDEO Connections DVD PLAYER Basic playback SD5010KB Function setup OWNER'S MANUAL Others © 2010 Toshiba Corporation...

### [Page 2: Introduction](#)

"This product is marked with "CE" and complies therefore with the applicable harmonized European standards listed under the Low Voltage Directive 2006/95/EC and the EMC Directive 2004/108/EC." Responsible for CE-marking is TOSHIBA INFORMATION SYSTEMS (U.K.) LTD, Toshiba Court, Weybridge Business Park, Addlestone Road, Weybridge,...

## [Page 3: Important Safety Instructions](#)

IMPORTANT SAFETY INSTRUCTIONS Read these instructions. Keep these instructions. Read all warnings. Follow all instructions. Do not use this appliance near water. Clean only with a dry cloth. Do not block any of the ventilation openings. Install in accordance with the manufacturer's instructions. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifi...

[Page 4](#) Introduction IMPORTANT SAFETY INSTRUCTIONS SOME DOS AND DON'TS ON THE SAFE USE OF EQUIPMENT This equipment has been designed and manufactured to meet international safety standards but, like any electrical equipment, care must be taken if you are to obtain the best results and safety is to be assured. So, please read the points below for your own safety.

## [Page 5: Precautions](#)

IMPORTANT The wires in this mains lead are coloured in accordance with the following code: BLUE: NEUTRAL BROWN: LIVE As the colours of the wires in the mains lead of this unit may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows: The wire that is coloured blue must be connected to the terminal in the plug which is marked with the letter N or coloured black.

## [Page 6: Notes On Discs](#)

Introduction PRECAUTIONS NOTES ON DISCS Notes on moisture condensation On handling discs Moisture condensation damages the DVD player. Do not touch the playback side of the disc. Please read the following carefully. Moisture condensation occurs, for example, when you pour a cold drink into a glass on a warm day.

## [Page 7: Notes On Region Numbers](#)

Because of problems and errors that can occur during the creation of DVD and CD software and/or the manufacture of DVD and CD discs, Toshiba cannot assure that this DVD player will successfully play every disc bearing the DVD and CD logos. If you happen to experience any difficulty playing a DVD and/or CD disc on this DVD player, please contact Toshiba Customer Service.

## [Page 8: Table Of Contents](#)

Introduction Table of Contents Introduction Function setup SAFETY PRECAUTIONS .....2 Customizing the Function Settings ..24 Using the Language setup menu .....24 IMPORTANT SAFETY INSTRUCTIONS ..3 Using the Video setup menu .....24 PRECAUTIONS ..... 5 Using the Audio setup menu .....25 NOTES ON DISCS .....

## [Page 9: Identification Of Controls](#)

Identification of Controls See the page in for details. Front panel HDMI indicator HDMI SELECT USB jack Rear panel Power Cord HDMI OUT jack VIDEO COAXIAL DIGITAL ANALOG HDMI OUT AV (SCART) socket DVD display The indicators vary depending on the kinds of discs you play. Power off No disc Bad disc...

## [Page 10: Using The Remote Control](#)

Introduction Using the Remote control Loading batteries Operating with the remote control Open the cover. Point the remote control at the remote sensor and press the buttons. Insert batteries (R03/AAA size). Distance: About 7 m (23 feet) from the front of the remote sensor Angle: About 30°...

## [Page 11: Remote Control](#)

Remote control The instructions in this manual describe the functions on the remote control. See the page in for details. ON/STANDBY button SEARCH (T) button MUTE button MUTE SUBTITLE/MP3 CONV. button SUBTITLE/MP3 CONV. VIDEO OUT VIDEO OUT button 13 HDMI button USB button 14 DVD button \* RETURN button...

## [Page 12: Names And Functions](#)

Introduction Names and functions 1. OPEN/CLOSE button 8. SKIP buttons • Press the button to open/close the disc tray. To locate succeeding chapters or tracks. • The function is the same as the OPEN/CLOSE button on the front panel. 2. ON/STANDBY button To locate preceding chapters

or tracks.

[Page 13](#) To change the programmed selections, use 19.MUTE button to move the highlighted bar to the item Press to mute and restore the sound. you want to change and press CLEAR, then input 20.SLOW button the new number. Forward slow playback. •...

[Page 14](#) Introduction 26.DISPLAY button CD Information display Press to view the operational status. e.g. DVD Information display Elapsed time of the Repeat Off Track e.g. current track 1) Press DISPLAY while a disc is playing, the first banner shows the title, chapter information and the elapsed CDDA TRACK time display of the current chapter.

### [Page 15: Connecting To A Tv](#)

Connecting to a TV Connect the DVD player to your TV. Connecting to a TV (Using the SCART socket) VIDEO Normal TV COAXIAL DIGITAL ANALOG HDMI OUT To AV • Make the following setting. On-screen display Page Select: "Video" SCART cable HDMI (not supplied) Connecting to a TV (Using the phono type jacks)

### [Page 16: Connecting To A Display](#)

Connections About HDMI HDMI has the capability to support standard, enhanced, or HDMI (High Definition Multimedia Interface) supports both high-definition video plus standard to multi-channel surround- video and audio on a single digital connection for use with sound audio. HDMI features included uncompressed digital DVD players, DTV, set-top boxes, and other AV devices.

### [Page 17: Connecting To Optional Equipment](#)

Content of the output for each output jack is shown in the following table and differ depending on the On-Screen Display Setting: On-Screen Display Setting Content of output for each output jack "Video" HDMI Output HDMI Video Setting Setting Output Output Output Invalid...

### [Page 18: Connecting To An Amplifier Equipped With A Dolby](#)

Connections Connecting to Optional Equipment (continued) ® Connecting to an amplifier equipped with a Dolby Digital decoder Dolby Digital Dolby Digital is the surround sound technology used in theaters showing the latest Manufactured under license from movies, and is now available to reproduce this realistic effect in the home. You can Dolby Laboratories.

### [Page 19: Connecting To An Amplifier Equipped With A Dts](#)

® Connecting to an amplifier equipped with a DTS decoder ® Manufactured under license under U.S. D T S i s a h i g h q u a l i t y s u r r o u n d t e c h n o l o g y u s e d i n t h e a t e r s Patent #: 5,451,942 &...

### [Page 20: Basic Playback](#)

Basic playback Playing a Disc CAUTION Keep your fingers well clear of the disc tray as it is closing. This section shows you the basics on how to play a disc. Neglecting to do so may cause serious personal injury. Basic playback Preparations •...

### [Page 21: Playing Mp3/Divx /Jpeg Files](#)

766KB e.g. C0006 content, including music files, in any format, including the 2009/12/01 C0007 MP3 formats, prior to the downloading thereof. Toshiba RETURN ENTER MENU PGUP/DN has no right to grant and does not grant permission to download any copyrighted content.

[Page 22](#) Basic playback Playing MP3/DivX /JPEG Files (continued) ® ® Playing MP3/DivX /JPEG Files (continued) ABOUT DIVX VIDEO : DivX ® is a digital video format Zooming in an image created by DivX, Inc. This is an official DivX Certified Press ZOOM repeatedly to toggle through Q1, Q2 and device that plays DivX video.

### [Page 23: Using Usb Device](#)

Playing USB Device You can connect the USB flash drives (not included) to the USB jack on the front of DVD player. DivX ® You can play the files in MP3, or JPEG format stored on a USB flash drive by connecting it to this player. Connecting to USB fl...

## [Page 24: Function Setup](#)

Function setup Customizing the Function Settings You can change the default settings to customize performance to your preference. ® DivX Subtitle Using the Language setup menu If your DivX ® fi les include a subtitle fi le, then you may select a supported DivX®...

## [Page 25: Using The Audio Setup Menu](#)

Notes Digital out • The displayable picture size is preset on the DVD. Therefore, the playback picture of some DVDs may not conform to the Selects the output sound format corresponding to your system picture size you select. connection. • When you play DVDs recorded in the 4:3 picture size only, Off: To disable Digital out.

## [Page 26: Using The Tv System Setup Menu](#)

Function setup Customizing the Function Settings (continued) ® You cannot play DVD discs rated higher than the level DivX Registration you selected unless you cancel the parental lock function DivX ® registration code allows you to rent and purchase movies and enter the 4-digit security code.

## [Page 27: Others](#)

Others Before Calling Service Personnel Check the following guide for the possible cause of a problem before contacting service. Symptoms and correction Symptom Cause Correction Page No power. • The power plug is disconnected. • Connect the power plug securely into the wall outlet. 15-16 The DVD player turned off •...

## [Page 28: Specifi Cations](#)

Others Specifi cations DVD player / outputs / supplied accessories DVD Player Power supply 100V - 240 V AC, 50/60 Hz Power consumption 9 W (standby: less than 1.0W) Mass 1.30 kg External dimensions 430 x 42 x 209 mm (W/H/D) Signal system PAL/3.58 NTSC Laser...

This manual is also suitable for:

[Sd5010kb](#)