



# Before You Proceed; Motherboard Overview - Asus PRIME H370-A Manual



1

2

Table Of Contents

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36

--

---

•

[Table of Contents](#)

•

## Bookmarks







# Product introduction

## 1.1

### Before you proceed

Take note of the following precautions before you install motherboard components or change

any motherboard settings.

- Unplug the power cord from the wall socket before touching any component.

- Before handling components, use a grounded wrist strap or touch a safely grounded

object or a metal object, such as the power supply case, to avoid damaging them due to static electricity.

Before you install or remove any component, ensure that the ATX power supply is switched off or the power cord is detached from the power supply. Failure to do so may cause severe damage to the motherboard, peripherals, or components.

## 1.2

# Motherboard overview

Place this side towards the rear of the chassis



Unplug the power cord before installing or removing the motherboard. Failure to do so can cause you physical injury and damage motherboard components.

### 1-1


KBMS\_USB910  
EATX12V  
HDMI  
U31G2\_34  
LAN1\_U31G1\_78  
CHA\_FAN2  
AUDIO  
2280  
PCIEX1\_1  
RTL

## PRIME H370-A

8111H  
PCIEX16\_1  
PCIEX1\_2  
Super  
2280  
2260  
2242  
I/O  
PCIEX16\_2  
ASM  
1083  
PCIEX1\_3  
ALC  
887-VD2  
PCIEX1\_4  
SPDIF\_OUT  
COM  
TPM  
MONO\_OUT  
AAFP

22.1cm(8.7in)

CPU\_FAN  
DIGI  
+VRM  
CHA\_FAN3  
LGA1151  
M.2\_1(SOCKET3)  
PCI SATA  
M2  
V  
V  
2260

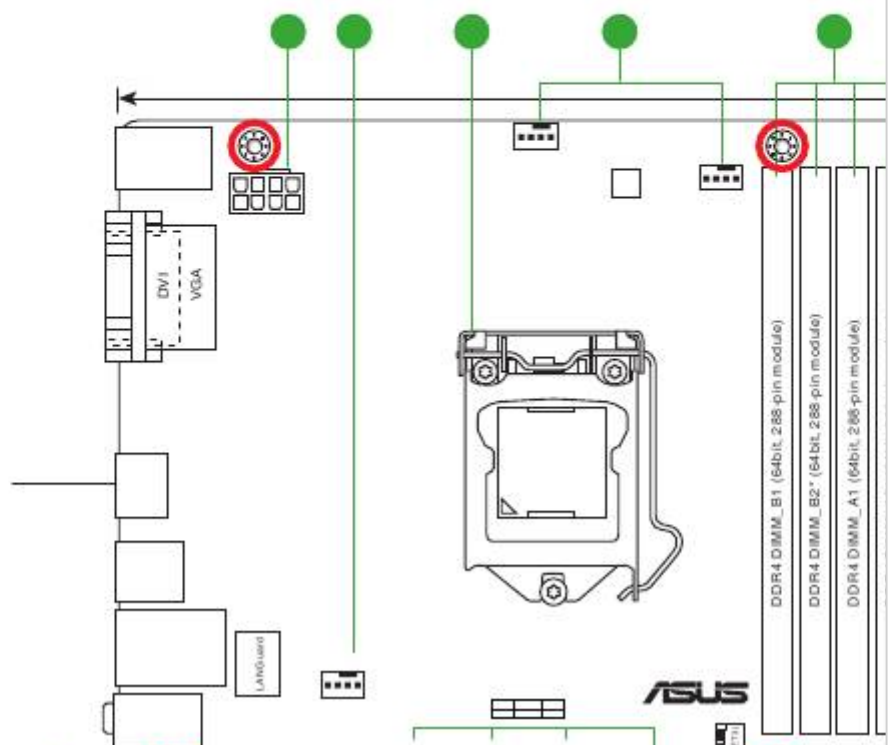

2242

Intel

H370

M.2\_2(SOCKET3)  
PCIe DATA  
M2  
4  
V


BATTERY

CLRTC

USB1112 USB1314

U31G1\_12

PANEL

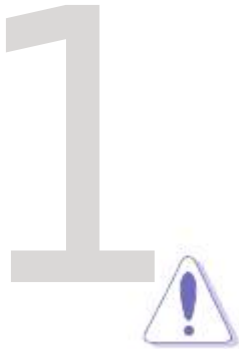

CHA\_FAN1

®

128Mb  
BIOS  
SATA6G\_4  
SATA6G\_3

SATA6G\_2  
SATA6G\_1

ASUS PRIME H370-A



[Table of Contents](#)

[Previous Page](#)  
[Next Page](#)

1  
...  
7  
8  
9  
10  
11  
12  
13  
14

## Related Manuals for Asus PRIME H370-A

[Motherboard Asus PRIME H370-A Quick Start Manual](#)

(2 pages)

[Motherboard Asus Rog Strix H370-I Gaming Manual](#)

(89 pages)

[Motherboard Asus ROG STRIX H370-F GAMING User Manual](#)

(96 pages)

[Motherboard Asus PRIME H370-PLUS Manual](#)

(36 pages)

[Motherboard Asus PRIME H370-PLUS Quick Start Manual](#)

(2 pages)

[Motherboard Asus PRIME B360-PLUS Manual](#)

(28 pages)

[Motherboard Asus TUF H370-PRO GAMING Manual](#)

(40 pages)

[Motherboard Asus H370 MINING MASTER Manual](#)

(25 pages)

[Motherboard Asus PRIME H370M-PLUS Manual](#)

(40 pages)

[Motherboard Asus PRIME H370M-PLUS User Manual](#)

(40 pages)

[Motherboard Asus PRIME H310M-A R1.0 Instruction Manual](#)

(29 pages)

[Motherboard Asus PRIME H310I-PLUS R2.0 User Manual](#)

(26 pages)

[Motherboard Asus PRIME H310M-C R2.0 Manual](#)

(28 pages)

[Motherboard Asus TUF H310M-PLUS GAMING R2.0 Manual](#)

(27 pages)

[Motherboard Asus PRIME H310M-E R2.0 Manual](#)

(28 pages)

[Motherboard Asus PRIME H310M-AT R2.0 Manual](#)

(29 pages)

## Related Content for Asus PRIME H370-A

[PRIME B760M-F D4 Before You Proceed](#)

[Asus PRIME B760M-F D4](#)

[PRIME A620-PLUS WIFI6 Before You Proceed](#)

[Asus PRIME A620-PLUS WIFI6](#)

[Z790 GAMING WIFI7 Before You Proceed](#)

Asus Z790 GAMING WIFI7

[PRIME X299-A Series Before You Proceed](#)

Asus PRIME X299-A Series

[A620M-AYW WIFI Before You Proceed](#)

Asus A620M-AYW WIFI

[PRIME H610T2-CSM D4 Before You Proceed](#)

Asus PRIME H610T2-CSM D4

[ROG RAMPAGE V EDITION 10 Before You Proceed](#)

Asus ROG RAMPAGE V EDITION 10

[Q170A-IM-A Before You Proceed](#)

Asus Q170A-IM-A