

Chapter 2: Bios Information; Managing And Updating Your Bios - Asus PRIME H370-A Manual

1
2
Table Of Contents
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36

--

•

[Table of Contents](#)

•

Bookmarks



BIOS information

2.1

Managing and updating your BIOS

Save a copy of the original motherboard BIOS file to a USB flash disk in case you need to restore the BIOS in the future. Copy the original motherboard BIOS using the ASUS Update utility.

2.1.1

EZ Update



EZ Update is a utility that allows you to automatically update your motherboard's softwares, drivers and the BIOS version easily. With this utility, you can also manually update the saved

BIOS and select a boot logo when the system goes into POST.

To launch EZ Update, click EZ Update on the AI Suite 3 main menu bar.

Click to automatically update your motherboard's driver, software and firmware

EZ Update requires an Internet connection either through a network or an ISP (Internet Service Provider).

2-1

Click to find and select the BIOS from file

Click to select a boot logo

2

Click to update the BIOS
ASUS PRIME H370-A



[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
19
20
21
22
23
24
25
26

Related Manuals for Asus PRIME H370-A

[Motherboard Asus PRIME H370-A Quick Start Manual](#)

(2 pages)

[Motherboard Asus Rog Strix H370-I Gaming Manual](#)

(89 pages)

[Motherboard Asus ROG STRIX H370-F GAMING User Manual](#)

(96 pages)

[Motherboard Asus PRIME H370-PLUS Manual](#)

(36 pages)

[Motherboard Asus PRIME H370-PLUS Quick Start Manual](#)

(2 pages)

[Motherboard Asus PRIME B360-PLUS Manual](#)

(28 pages)

[Motherboard Asus TUF H370-PRO GAMING Manual](#)

(40 pages)

[Motherboard Asus H370 MINING MASTER Manual](#)

(25 pages)

[Motherboard Asus PRIME H370M-PLUS Manual](#)

(40 pages)

[Motherboard Asus PRIME H370M-PLUS User Manual](#)

(40 pages)

[Motherboard Asus PRIME H310M-A R1.0 Instruction Manual](#)

(29 pages)

[Motherboard Asus PRIME H310I-PLUS R2.0 User Manual](#)

(26 pages)

[Motherboard Asus PRIME H310M-C R2.0 Manual](#)

(28 pages)

[Motherboard Asus TUF H310M-PLUS GAMING R2.0 Manual](#)

(27 pages)

[Motherboard Asus PRIME H310M-E R2.0 Manual](#)

(28 pages)

[Motherboard Asus PRIME H310M-AT R2.0 Manual](#)

(29 pages)

Related Content for Asus PRIME H370-A

[Motherboard A7N8X-VM Chapter 2: Bios Information](#)

Asus Motherboard A7N8X-VM

[PRIME H610T2-CSM D4 Chapter 2: Bios Information](#)

Asus PRIME H610T2-CSM D4

[PRIME H310M-A R1.0 Chapter 2: Bios Information](#)

Asus PRIME H310M-A R1.0

[H110M-P/DVI Chapter 2: Bios Information](#)

Asus H110M-P/DVI

[EX-B660M-V5 D4 Chapter 2 Bios Information](#)

Asus EX-B660M-V5 D4

[PRIME H610M-E Chapter 2: Bios Information](#)

Asus PRIME H610M-E

[PRIME H610I-PLUS Chapter 2: Bios Information](#)

Asus PRIME H610I-PLUS

[PRIME H370M-PLUS Chapter 2: Bios Information](#)

Asus PRIME H370M-PLUS