



# Safety Information - Asus Z590 WIFI Manual

Gundam edition



1
2
Table Of Contents
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67

68  
69  
70  
71  
72

--

•

Table of Contents

•

## Bookmarks







## Safety information

### Electrical safety

- 

To prevent electrical shock hazard, disconnect the power cable from the electrical outlet before relocating the system.

- 

When adding or removing devices to or from the system, ensure that the power cables for the devices are unplugged before the signal cables are connected. If possible, disconnect all power cables from the existing system before you add a device.

- 

Before connecting or removing signal cables from the motherboard, ensure that all

power cables are unplugged.

- Seek professional assistance before using an adapter or extension cord. These devices could interrupt the grounding circuit.

- Ensure that your power supply is set to the correct voltage in your area. If you are not sure about the voltage of the electrical outlet you are using, contact your local power company.

- If the power supply is broken, do not try to fix it by yourself. Contact a qualified service technician or your retailer.

## Operation safety

- Before installing the motherboard and adding devices on it, carefully read all the manuals that came with the package.

- Before using the product, ensure all cables are correctly connected and the power cables are not damaged. If you detect any damage, contact your dealer immediately.

- To avoid short circuits, keep paper clips, screws, and staples away from connectors, slots, sockets and circuitry.

- Avoid dust, humidity, and temperature extremes. Do not place the product in any area where it may become wet.

- Place the product on a stable surface.

- If you encounter technical problems with the product, contact a qualified service technician or your retailer.

- Your motherboard should only be used in environments with ambient temperatures between 0°C and 40°C.

iv

[Previous Page](#)  
[Next Page](#)

1  
2  
3  
4  
5  
6  
7  
8

Quick Links:

[Motherboard Layout](#)

## Related Manuals for Asus Z590 WIFI

[Motherboard Asus ROG STRIX Z590-A GAMING Series Instructions Manual](#)

(84 pages)

[Motherboard Asus PRIME Z590M-PLUS Manual](#)

(68 pages)

[Motherboard Asus ROG STRIX Z590-E GAMING Series Manual](#)

(88 pages)

[Motherboard Asus PRIME Z590-P Manual](#)

(68 pages)

[Motherboard Asus PRIME Z590-V Manual](#)

(66 pages)

[Motherboard Asus TUF GAMING Z590-PLUS User Manual](#)

(70 pages)

[Motherboard Asus Z9PE-D16 User Manual](#)

Z9pe-d16 series (194 pages)

[Motherboard Asus Z87-K Manual](#)

(18 pages)

[Motherboard Asus Gryphon Z97 Manual](#)

(170 pages)

[Motherboard ASUS Z10PE-D8 WS User Manual](#)

(196 pages)

[Motherboard Asus Z390 Series Feature Manual](#)

(72 pages)

[Motherboard Asus ROG Strix Z390-E Gaming Troubleshooting Manual](#)

(31 pages)

[Motherboard Asus PRIME Z390-P Manual](#)

(89 pages)

[Motherboard Asus z97 Series Manual](#)

(28 pages)

[Motherboard Asus PRIME Z270-P Manual](#)

(87 pages)

[Motherboard Asus ROG Strix Z370-F Gaming Manual](#)

(102 pages)

## Related Content for Asus Z590 WIFI

[Pro Q670M-CE Safety Information](#)

Asus Pro Q670M-CE

[Pro Q670M-CE D4 Safety Information](#)

Asus Pro Q670M-CE D4

[PRIME B760M-F D4 Safety Information](#)

Asus PRIME B760M-F D4

[PRIME A620-PLUS WIFI6 Safety Information](#)

Asus PRIME A620-PLUS WIFI6

[Z790 GAMING WIFI7 Safety Information](#)

Asus Z790 GAMING WIFI7

[PRIME X299-A Series Safety Information](#)

Asus PRIME X299-A Series

[A620M-AYW WIFI Safety Information](#)

Asus A620M-AYW WIFI

[PRIME H610T2-CSM D4 Safety Information](#)

Asus PRIME H610T2-CSM D4