



# Audio I/O Connections - Asus PRIME Z690M-PLUS D4 Manual



1

2

Table Of Contents

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67



•

Table of Contents

•

## Bookmarks







\*\* Audio 2, 4, 5.1, or 7.1-channel configuration

Light Blue  
Line In  
(Rear panel)  
Lime  
Line Out  
(Rear panel)  
Pink  
Mic In  
(Rear panel)

|  |  |  |  |  |
|--|--|--|--|--|
|  |  |  |  |  |
|  |  |  |  |  |
|  |  |  |  |  |
|  |  |  |  |  |

Lime

-

(Front panel)

Pink

-

(Front panel)

\* Multi-streaming is disabled by default, and the Lime (front panel) jack may be used as Side Speaker Out. If multi-streaming is enabled, the Lime (front panel) jack will support headphone, and the Pink (front panel) jack will support Side Speaker Out.

## 2.2.2

### Audio I/O connections

Audio I/O ports

Connect to Headphone and Mic

PRIME Z690M-PLUS D4

Rear Speaker Out Rear Speaker Out Rear Speaker Out  
Front Speaker Out Front Speaker Out Front Speaker Out

Mic In

Bass/Center

-  
-  
-  
-

Bass/Center

Side Speaker Out\* /

Headphone

Mic in\* / Side

Speaker Out

2-17



[Table of Contents](#)

[Previous Page](#)  
[Next Page](#)

1  
...  
48  
49  
50  
**51**  
52  
53  
54  
55

Quick Links:

[Motherboard Layout](#)

[Bios Setup Program](#)

## Related Manuals for Asus PRIME Z690M-PLUS D4

[Motherboard Asus PRIME Z690-P Quick Start Manual](#)

(2 pages)

[Motherboard Asus PRIME Z690-P WIFI D4 Quick Start Manual](#)

(2 pages)

[Motherboard Asus PRIME Z690-P WIFI D4 User Manual](#)

(70 pages)

[Motherboard Asus Prime Z690-P Quick Start Manual](#)

(2 pages)

[Motherboard Asus ROG MAXIMUS Z690 FORMULA Manual](#)

(96 pages)

[Motherboard Asus ROG STRIX Z690-A GAMING WIFI Manual](#)

(82 pages)

[Motherboard Asus ROG STRIX Z690-G GAMING WIFI Manual](#)

(74 pages)

[Motherboard Asus ROG STRIX Z690-E GAMING WIFI Manual](#)

(90 pages)

[Motherboard Asus TUF GAMING Z690-PLUS WIFI Quick Start Manual](#)

(2 pages)

[Motherboard Asus Z97-C Manual](#)

(48 pages)

[Motherboard Asus Z170-A User Manual](#)

(130 pages)

[Motherboard Asus Z170-P Manual](#)

(86 pages)

[Motherboard Asus Z170-Premium series Manual](#)

(190 pages)

[Motherboard Asus ROG STRIX Z390-E GAMING Manual](#)

(100 pages)

[Motherboard Asus PRIME Z390-P Manual](#)

(89 pages)

[Motherboard Asus STRIX Z270G GAMING Manual](#)

(106 pages)

## Related Content for Asus PRIME Z690M-PLUS D4

[TUF GAMING Z590-PLUS Audio I/O Connections](#)

Asus TUF GAMING Z590-PLUS

[MAXIMUS VII HERO Audio I/O Connections](#)

Asus MAXIMUS VII HERO

[STRIX Z270H GAMING Audio I/O Connections](#)

Asus STRIX Z270H GAMING

[PRIME Z590-V Audio I/O Connections](#)

Asus PRIME Z590-V

[ROG MAXIMUS XII EXTREME Audio I/O Connections](#)

Asus ROG MAXIMUS XII EXTREME

[Pro WS W680-ACE Audio I/O Connections](#)

Asus Pro WS W680-ACE

[ROG MAXIMUS XII Z490 APEX Audio I/O Connections](#)

Asus ROG MAXIMUS XII Z490 APEX

[TUF X470-PLUS GAMING Audio I/O Connections](#)

Asus TUF X470-PLUS GAMING