


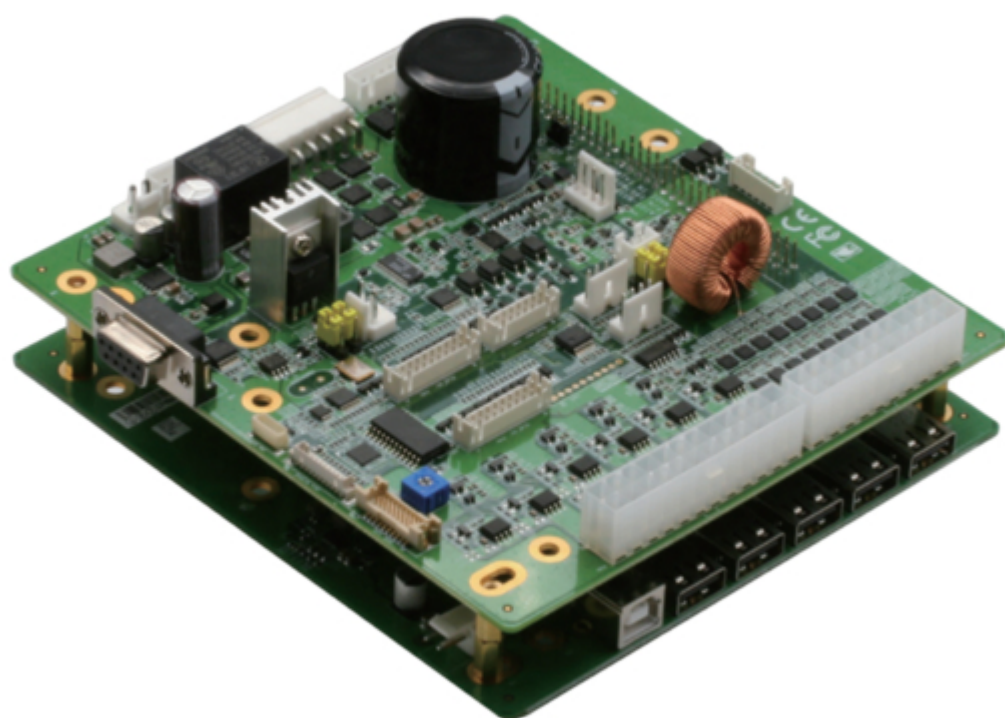

Asus AAEON AIOT-MSSP01 User Manual

Mini ssp vending control board

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

Table Of Contents

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62

--

•

[Table of Contents](#)


•

Bookmarks

--

[Download this manual](#)

Quick Links

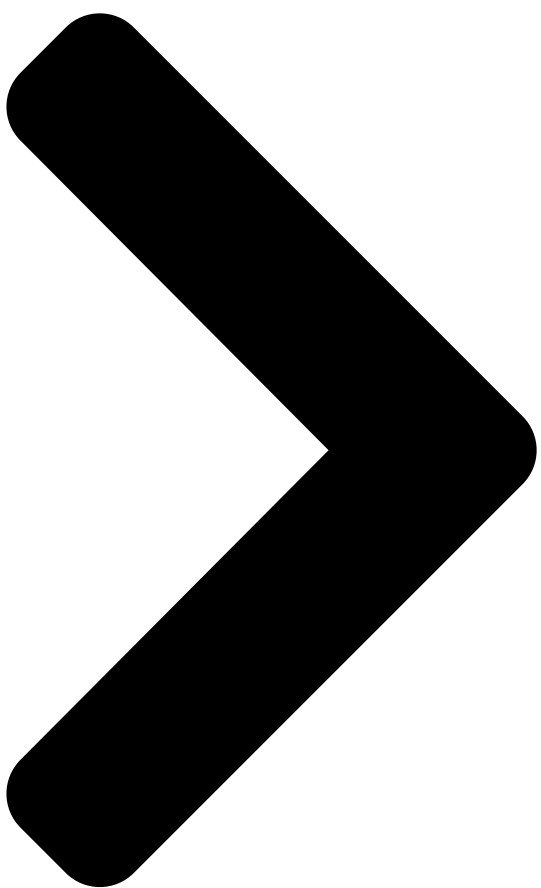

All manuals and user guides at all-guides.com

AIOT- MSSP01

Mini SSP Vending Control Board

User's Manual 1

Ed

st

Last Updated: March 12, 2018



[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Asus AAEON AIOT-MSSP01

[Controller Asus AAEON AHP-1154 User Manual](#)

Industrial hmi touch panel (78 pages)

[Controller Asus LSI 8300XLP User Manual](#)

User manual (64 pages)

[Controller Asus OC STATION Quick Installation Manual](#)

Rog oc controller (49 pages)

[Controller Asus AAEON BOXER-6614 User Manual](#)

Fanless embedded box pc (112 pages)

[Controller Asus AAEON BOXER-6843-ADS User Manual](#)

Fanless embedded controller (149 pages)

[Controller Asus PCI-DA2200 User Manual](#)

Pci-to-ultra2 scsi raid controller (369 pages)

Summary of Contents for Asus AAEON AIOT-MSSP01

[Page 1](#) All manuals and user guides at all-guides.com AIOT- MSSP01 Mini SSP Vending Control Board User's Manual 1 Last Updated: March 12, 2018...

[Page 2](#) All manuals and user guides at all-guides.com Copyright Notice This document is copyrighted, 2018. All rights are reserved. The original manufacturer reserves the right to make improvements to the products described in this manual at any time without notice. No part of this manual may be reproduced, copied, translated, or transmitted in any form or by any means without the prior written permission of the original manufacturer.

[Page 3](#) All manuals and user guides at all-guides.com Acknowledgement All other products' name or trademarks are properties of their respective owners. ® is trademark of Advanced Micro Devices. □ Microsoft Windows is a registered trademark of Microsoft Corp. □ Intel, Pentium, Celeron, and Xeon are registered trademarks of Intel Corporation □...

[Page 4](#) All manuals and user guides at all-guides.com Packing List Before setting up your product, please make sure the following items have been shipped: Item Quantity AIOT-MSSP01 □ User's Manual (in pdf) □ If any of these items are missing or damaged, please contact your distributor or sales representative immediately.

[Page 5](#) All manuals and user guides at all-guides.com About this Document This User's Manual contains all the essential information, such as detailed descriptions and explanations on the product's hardware and software features (if any), its specifications, dimensions, jumper/connector settings/definitions, and driver installation instructions (if any), to facilitate users in setting up their product.

[Page 6](#) All manuals and user guides at all-guides.com Safety Precautions Please read the following safety instructions carefully. It is advised that you keep this manual for future references All cautions and warnings on the device should be noted. Make sure the power source matches the power rating of the device. Position the power cord so that people cannot step on it.

[Page 7](#) All manuals and user guides at all-guides.com If any of the following situations arises, please the contact our service personnel: Damaged power cord or plug Liquid intrusion to the device iii. Exposure to moisture Device is not working as expected or in a manner as described in this manual The device is dropped or damaged Any obvious signs of damage displayed on the device...

Page 8 All manuals and user guides at all-guides.com FCC Statement This device complies with Part 15 FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received including interference that may cause undesired operation.

Page 9 All manuals and user guides at all-guides.com China RoHS Requirements (CN) 中国RoHS 符合性声明 AAEON Main Board/ Daughter Board/ Backplane 中国RoHS 符合性声明 本声明书 适用于 (Pb) (Hg) (Cd) (Cr(VI)) (PBB) (PBDE) 中国RoHS 符合性声明 中国RoHS 符合性声明...

[Page 10](#) All manuals and user guides at all-guides.com China RoHS Requirement (EN)
Poisonous or Hazardous Substances or Elements in Products AAEON Main Board/ Daughter
Board/ Backplane Poisonous or Hazardous Substances or Elements Hexavalent Polybrominated
Polybrominated Component Lead Mercury Cadmium Chromium Biphenyls Diphenyl Ethers (Pb)
(Hg)

[Page 11: Table Of Contents](#)

All manuals and user guides at all-guides.com Table of Contents Chapter 1 - Product Specifications.....1 Specifications2 Chapter 2 - Hardware Information4 Dimensions5 Jumpers and Connectors7 2.2.1 Main board layout7 2.2.1 I/O board layout

[Page 12](#) All manuals and user guides at [all-guides.com](#) 2.3.2.5 RS232 (CN5) 18
2.3.2.6 UART (CN6) 18 2.3.2.7 +24V Output (CN7)19 2.3.2.8 ADC (CN8)
.....20 2.3.2.9 8 Bit Digital External (CN10)20 2.3.2.10 24V Vending Input
(CN11)21 2.3.2.11 Protocol A (CN12)

[Page 13](#) All manuals and user guides at all-guides.com Half Motor Configuration

33 Chapter 4 –Installation Guide	34 Firmware Installation
35 4.1.1 Prerequisites	35 4.1.2 Program Boot-loader
35 Vending SDK Installation	43 4.2.1 Windows 10 Version
	43 4.2.2 Ubuntu 16.04 Xenial

Page 14: Chapter 1 - Product Specifications

All manuals and user guides at all-guides.com Chapter 1 Chapter 1 - Product Specifications...

Page 15: Specifications

All manuals and user guides at all-guides.com Specifications External Connector USB 2.0 type A connector x 5 (via USB HUB) □ Micro USB 2.0 type B connector x 1 (USB HUB Host) Internal Connector MDB x 1 □ 1-Wire 1-WIRE x 1 □...

Page 16 All manuals and user guides at all-guides.com Others Form Factor 150 mm x 140 mm □ Power Source 24V AC @ 50Hz, 24vDC □ Operating Temperature 0°C ~ 60°C □ Operating Humidity 0% ~ 90% relative humidity, non-condensing □ Certification CE, FCC □...

Page 17: Chapter 2 - Hardware Information

All manuals and user guides at all-guides.com Chapter 2 Chapter 2 – Hardware Information...

Page 18: Dimensions

All manuals and user guides at all-guides.com Dimensions Chapter 2 - Hardware Information...

Page 19 All manuals and user guides at all-guides.com Chapter 2 - Hardware Information...

Page 20: Jumpers And Connectors

All manuals and user guides at all-guides.com Jumpers and Connectors 2.2.1 Main board layout
Chapter 2 – Hardware Information...

[Page 21: I/O Board Layout](#)

All manuals and user guides at all-guides.com 2.2.1 I/O board layout Chapter 2 - Hardware Information...

[Page 22: List Of Connectors](#)

All manuals and user guides at all-guides.com List of Connectors Please refer to the table below for all of the board's connectors that you can configure for your application 2.3.1 Mainboard Connector Index Connector Type Reference Function MCU-ICSP (TF)PIN HEADER.5*1P .180D.(M).2.54mm.DIP Vending detect (TF)WAFER BOX.6P .180D(M).DIP .2.0mm.w/LOCK CN4 CN6...

[Page 23: Mcu-Icsp \(Cn1\)](#)

All manuals and user guides at all-guides.com 2.3.1.1 MCU-ICSP (CN1) Signal Description Signal Description MCLR# +3.3V PGED1 PGED1 2.3.1.2 Vending Detect (CN2) Signal Description Signal Description VEND_DET_IN VEND_DET_ALARM VEND_DETECT_VCC Chapter 2 – Hardware Information...

[Page 24: Rs-232 \(Cn8\)](#)

All manuals and user guides at all-guides.com Vending Detection /Vending Detection Power MVC600 Default CST539 2.3.1.3 RS-232 (CN8) Signal Description Signal Description RS232_RXD RS232_TXD Chapter 2 – Hardware Information...

[Page 25: Usb2.0 \(Cn9\)](#)

All manuals and user guides at all-guides.com 2.3.1.4 USB2.0 (CN9) Signal Description Signal Description 2.3.1.5 5V supply (CN10) Signal Description Signal Description Chapter 2 – Hardware Information...

[Page 26: I/O Board Connector Index](#)

All manuals and user guides at all-guides.com 2.3.2 I/O board Connector Index Connector Type Reference Function Relay GPIO (TF)WAFER BOX.8P .180D(M).DIP .2.5mm.W/LOCK (TF)WAFER BOX.8P .180D(M).DIP .2.5mm.W/LOCK +12V output (TF)WAFER.2P .180D(M).3.96mm.W/LOCK POWER (TF) WAFER.6*1P .90D.(M).3.96mm.w/ Lock INPUT RS232 (TF)D-SUB CONNECTOR.9P .90D UART (TF)WAFER.4P .180D.(M).2.5mm.W/LOCK POWER DIP +24V output...

[Page 27](#) All manuals and user guides at all-guides.com CN15 1-WIRE (TF)WAFER.4P .180D.(M).2.5mm.W/LOCK POWER DIP INTERFACE CN18 (TF)Board-Wire Connector.20P .180D(M).SMD.Pitch=1.25mm.W/Reinforc CN19 FULL MOTOR (TF)ATX POWER CONNECTOR.12P*2.180D(M) CN20 HALF MOTOR (TF)ATX POWER CONNECTOR.10P*2.180D.DIP Chapter 2 – Hardware Information...

[Page 28: Relay Gpo \(Cn1\)](#)

All manuals and user guides at all-guides.com 2.3.2.1 Relay GPO (CN1) Signal Description Signal Description DO_0 DO_1 DO_2 DO_3 RELAY_PWR RELAY_PWR RELAY_PWR RELAY_PWR RELAY POWER MODE SELECTION Default Chapter 2 – Hardware Information...

[Page 29: Mdb Master \(Cn2\)](#)

All manuals and user guides at all-guides.com 2.3.2.2 MDB Master (CN2) Signal Description Signal Description MDB_SUPPLY EXT_24V_RTN MDB_RX MDB_TX Chapter 2 – Hardware Information...

[Page 30: Supply \(Cn3\)](#)

All manuals and user guides at all-guides.com 2.3.2.3 +12V Supply (CN3) Signal Description Signal Description 2.3.2.4 Power Input (CN4) Signal Description Signal Description MDB_SUPPLY EXT_24V_RTN MDB_RX MDB_TX Chapter 2 – Hardware Information...

[Page 31: Rs232 \(Cn5\)](#)

All manuals and user guides at all-guides.com 2.3.2.5 RS232 (CN5) Signal Description Signal Description RS232_RXD RS232_TXD 2.3.2.6 UART (CN6) Signal Description Signal Description +3.3V UART_TXD UART_RXD Chapter 2 – Hardware Information...

[Page 32: Output \(Cn7\)](#)

All manuals and user guides at all-guides.com 2.3.2.7 +24V Output (CN7) Signal Description Signal Description MOTOR_PWR MOTOR POWER SELECTION MOTOR POWER MODE Default

[Page 33: Adc \(Cn8\)](#)

All manuals and user guides at all-guides.com 2.3.2.8 ADC (CN8) Signal Description Signal Description ANALOG_IN1 ANALOG_IN2 ANALOG_IN3 ANALOG_IN4 2.3.2.9 8 Bit Digital External (CN10) Signal Description Signal Description 5V_CON_GPIO1 5V_CON_GPIO1 5V_CON_GPIO2 5V_CON_GPIO2 5V_CON_GPIO3 5V_CON_GPIO3 5V_CON_GPIO4 5V_CON_GPIO4...

[Page 34: Vending Input \(Cn11\)](#)

All manuals and user guides at all-guides.com 5V_CON_GPIO7 5V_CON_GPIO7 5V_CON_GPIO8 5V_CON_GPIO8 2.3.2.10 24V Vending Input (CN11) Signal Description Signal Description 24V_GPIO1 24V_GPIO1 24V_GPIO2 24V_GPIO2 24V_GPIO3 24V_GPIO3 24V_GPIO4 24V_GPIO4 24V_GPIO5 24V_GPIO5 24V_GPIO6 24V_GPIO6 24V_GPIO7 24V_GPIO7 24V_GPIO8 24V_GPIO8...

[Page 35: Protocol A \(Cn12\)](#)

All manuals and user guides at all-guides.com 2.3.2.11 Protocol A (CN12) Signal Description Signal Description MDBSLAVE_EXE_TX+ 5V MDBSLAVE_EXE_TX- 5V MDBSLAVE_EXE_RX+ 5V MDBSLAVE_EXE_RX- 5V PWR_IN_AC 2.3.2.12 DEX INTERFACE (CN13) Signal Description Signal Description DEX_DET DEX_DET DEX_DOUT DEX_DOUT DEX_RIN Chapter 2 – Hardware Information...

[Page 36: Keypad \(Cn14\)](#)

All manuals and user guides at all-guides.com 2.3.2.13 Keypad (CN14) Signal Description Signal Description KEYPAD_0 KEYPAD_0 KEYPAD_1 KEYPAD_1 KEYPAD_2 KEYPAD_2 KEYPAD_3 KEYPAD_3 KEYPAD_4 KEYPAD_4 KEYPAD_5 KEYPAD_5 KEYPAD_6 KEYPAD_6 KEYPAD_7 Chapter 2 – Hardware Information...

[Page 37: One Wire \(Cn15\)](#)

All manuals and user guides at all-guides.com 2.3.2.14 One Wire (CN15) Signal Description Signal Description +3.3V 1-Wire DEVICE 2.3.2.15 8V Bit 5v Digital Internal IOS (CN16) Signal Description Signal Description 5V_HDR_GPIO1 5V_HDR_GPIO1 5V_HDR_GPIO2 5V_HDR_GPIO2 5V_HDR_GPIO3 5V_HDR_GPIO3 5V_HDR_GPIO4 5V_HDR_GPIO4 5V_HDR_GPIO5 5V_HDR_GPIO5 5V_HDR_GPIO6 5V_HDR_GPIO6 5V_HDR_GPIO7...

[Page 38](#) All manuals and user guides at all-guides.com 5V_HDR_GPIO8 5V_HDR_GPIO8 Chapter 2 – Hardware Information...

[Page 39: Lcd \(Cn18\)](#)

All manuals and user guides at all-guides.com 2.3.2.16 LCD (CN18) Signal Description Signal Description 5V(Variable Resistor) DISPLAY_RS DISPLAY_RS DISPLAY_R/W DISPLAY_R/W DISPLAY_EN LCD_CN_0 LCD_CN_0 LCD_CN_1 LCD_CN_1 LCD_CN_2 LCD_CN_2 LCD_CN_3 LCD_CN_3 LCD_CN_4 LCD_CN_4 LCD_CN_5 LCD_CN_5 LCD_CN_6 LCD_CN_6 LCD_CN_7 Chapter 2 – Hardware Information...

[Page 40: Full Bridge Motor \(Cn19\)](#)

All manuals and user guides at all-guides.com 2.3.2.16 Full bridge motor (CN19) Signal Description Signal Description MOTOR_RTN FULL_BRIDGE_1_BR FULL_BRIDGE_1_TR FULL_BRIDGE_2_BR FULL_BRIDGE_2_TR FULL_BRIDGE_3_BR FULL_BRIDGE_3_TR FULL_BRIDGE_4_BR FULL_BRIDGE_4_TR FULL_BRIDGE_5_BR FULL_BRIDGE_5_TR MOTOR_VOLTAGE FULL_BRIDGE_1_TL FULL_BRIDGE_1_BL FULL_BRIDGE_2_TL FULL_BRIDGE_2_BL FULL_BRIDGE_3_TL FULL_BRIDGE_3_BL FULL_BRIDGE_4_TL FULL_BRIDGE_4_BL FULL_BRIDGE_5_TL FULL_BRIDGE_5_BL Chapter 2 –...

[Page 41: Low Side Motor \(Cn20\)](#)

All manuals and user guides at all-guides.com 2.3.2.17 Low side motor (CN20) Signal Description Signal Description LOWSIDE1_M- 1 LOWSIDE1_M- 2 LOWSIDE1_M- 3 LOWSIDE1_M- 4 LOWSIDE1_M- 5 LOWSIDE1_M- 6 LOWSIDE1_M- 7 LOWSIDE1_M- 8 MOTOR_RTN MOTOR_RTN LOWSIDE2_M- 1 LOWSIDE2_M- 2 LOWSIDE2_M- 3 LOWSIDE2_M- 4 LOWSIDE2_M- 5 LOWSIDE2_M- 6 LOWSIDE2_M- 7 LOWSIDE2_M- 8 MOTOR_RTN MOTOR_RTN MOTOR_RTN Chapter 2 – Hardware Information...

[Page 42: Home Sense \(Jp5 Jp6\)](#)

All manuals and user guides at all-guides.com 2.3.2.18 Home sense (JP5 JP6) MOTOR RETURN GND HOME POSITION MODE SELECTION SELECTION Default Default Chapter 2 – Hardware

Information...

[Page 43: Chapter 3 -Motor Setup](#)

All manuals and user guides at [all-guides.com](#) Chapter 3 Chapter 3 -Motor Setup...

[Page 44: Introduction](#)

All manuals and user guides at [all-guides.com](#) Introduction The AIOT-MSSP01 supports four types of motor configurations. Please refer to the following motor configuration setting information. Full Bridge Motor Configuration Chapter 3 - Motor Setup...

[Page 45: Low Side Motor Configuration](#)

All manuals and user guides at [all-guides.com](#) Low Side Motor Configuration High Side Motor Configuration Chapter 3 - Motor Setup...

[Page 46: Half Motor Configuration](#)

All manuals and user guides at [all-guides.com](#) Half Motor Configuration Chapter 3 - Motor Setup...

[Page 47: Chapter 4 -Installation Guide](#)

All manuals and user guides at [all-guides.com](#) Chapter 4 Chapter 4 -Installation Guide...

[Page 48: Firmware Installation](#)

All manuals and user guides at [all-guides.com](#) Firmware Installation Please follow the steps below to install/update firmware. 4.1.1 Prerequisites Install software - MPLAB IPE. To download, use the following link: <http://microchip.wikidot.com/ipe:installation> Install toolchain - MPLABX-v3.45-windows-installer 4.1.2 Program Boot-loader Step 1: Connect ICD 3 to the target board and apply power to the board. Chapter 4 -...

[Page 49](#) All manuals and user guides at [all-guides.com](#) Step 2: Connect ICD3 device with the board and then plug in power Chapter 4 - Installation Guide...

[Page 50](#) All manuals and user guides at [all-guides.com](#) Step 3: Launch MPLAB IPE application Chapter 4 - Installation Guide...

[Page 51](#) All manuals and user guides at [all-guides.com](#) Step 4: Select the following options. Family: Please chose 32-bit MCUs (PIC32) Device: Please select PIC32MX795F512L Tool: Please select ICD 3 (with appropriate serial number) Microchip IPE initial screen Chapter 4 - Installation Guide...

[Page 52](#) All manuals and user guides at [all-guides.com](#) Step 5: After selecting the connect button to connect to the target board, the following screen will appear. Chapter 4 - Installation Guide...

[Page 53](#) All manuals and user guides at [all-guides.com](#) Step 6: Please click on "Browse" and locate the firmware hex file from source side in order to load Hex file. You will then see an acknowledge message in MPLAB IPE as shown below. Chapter 4 -...

[Page 54](#) All manuals and user guides at [all-guides.com](#) Step 7: Please click on the Program button. After successfully programming, you will see the screen shown below. Chapter 4 - Installation Guide...

[Page 55](#) All manuals and user guides at [all-guides.com](#) The HEX file has been successfully loaded to MCU PIC32. Microchip IPE Hex file loaded screen Chapter 4 - Installation Guide...

[Page 56: Vending Sdk Installation](#)

All manuals and user guides at [all-guides.com](#) Vending SDK Installation 4.2.1 Windows 10 Version Please follow the steps below to install supporting software programs before installing Intel_Intelligent_Vending_Sample_Application.exe. Step 1 Install QT 5.8 https://download.qt.io/official_releases/qt/5.8/5.8.0/qt-opensource-windows-x86-msvc2015-5.8.0.exe Step 2 Update the PATH environment variable to include needed QT and

Axis2C runtime binaries.

[Page 57](#) All manuals and user guides at all-guides.com

c:\Qt\Qt5.8.0\5.8\msvc2015\plugins\sqldrivers c:\Qt\Qt5.8.0\5.8\msvc2015\plugins\mediaservice
c:\Qt\Qt5.8.0\5.8\msvc2015\plugins\platforms
C:\Users\<TODO_ADD_WINDOWS_USER_NAME_HERE>\AppData\Local\Intel_Corpora tion\Intel(R)
Intelligent Vending Sample Application\API\Bin\Windows\axis2c\lib Remark: If there is no button
to add each line and only a single textbox exists then add all paths separated by ; For example:
<ANY_EXISTING_PATHS_HERE>;c:\Qt\Qt5.8.0\5.8\msvc2015\bin;c:\Qt\Qt5.8.0\5.8\msv
c2015\plugins\sqldrivers;c:\Qt\Qt5.8.0\5.8\msvc2015\plugins\mediaservice;c:\Qt\Qt5.8.

[Page 58](#) All manuals and user guides at all-guides.com Use the prebuilt package at ftp://sourceware.org/pub/pthreads-win32 and download the file pthreads-w32-2-9-1-release.zip. Step 4.3 After extracting the folder, copy Pre-built2/dll/x86/pthreadVC2.dll to your Mosquitto install directory. Step 5 For OpenSSL, you can copy libeay32.dll and ssleay32 dlls from the Vending SDK install directory

C:\Users\<TODO_ADD_WINDOWS_USER_NAME_HERE>\AppData\Local\Intel_Corpora tion\Intel(R)
Intelligent Vending Sample Application\API\Bin\Windows...

[Page 59: Ubuntu 16.04 Xenial](#)

All manuals and user guides at all-guides.com 4.2.2 Ubuntu 16.04 Xenial Please make sure you
have a working Internet connection and follow the steps below. Step 1 Copy the
Ubuntu_16.04_Xenial_Release folder to your Ubuntu machine. Step 2 Open a terminal and
execute: sudo su Step 3 In the terminal change directories to your copy of the
Ubuntu_16.04_Xenial_Release folder Step 4 In the terminal execute: chmod +x install.sh...

[Page 60](#) All manuals and user guides at all-guides.com Step 11 After the above sql file has been installed execute exit to exit. In the terminal execute: cd /usr/local/bin. Utilize any of the Start*.sh files to start the test apps, VendingDemo, Telemetry. In the terminal execute: cd /usr/local/bin.

[Page 61: Update Vending Sdk For Ubuntu 16.04 Xenial](#)

All manuals and user guides at all-guides.com 4.2.3 Update vending SDK for Ubuntu 16.04
Xenial If you already have the SDK installed on Ubuntu 16.04 Xenial, please follow the steps
below to upgrade an existing system. Step 1 Copy the Ubuntu_16.04_Xenial_Release folder to
your Ubuntu machine. Step 2 Open a terminal and execute: sudo su Step 3 In the terminal
change directories to your copy of the Ubuntu_16.04_Xenial_Release folder...

[Page 62: Update Db In Vending Sdk For Ubuntu 16.04 Xenial](#)

All manuals and user guides at all-guides.com 4.2.4 Update DB in vending SDK for Ubuntu 16.04
Xenial If the upgrade requires a DB update, please follow the steps below. Step 1 In the terminal
execute: mysql -u root -p Step 2 When prompted enter root123 as the password. Step 3
Execute: source intel_vending.sql Step 4 After the above sql file has been installed execute exit
to exit.