 




# Whirlpool SW8 AM2 D XR 2 Quick Start Manual



1  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11  
Table Of Contents  
12



•

[Table of Contents](#)

•

 
## Bookmarks

Available languages


- EN
- FR
- DE
- IT
- PT
- SE
- DK
- FI



NO



UA

 

More

### Quick Links

 
[Download this manual](#)







Read the Instructions for Use carefully before using the appliance.

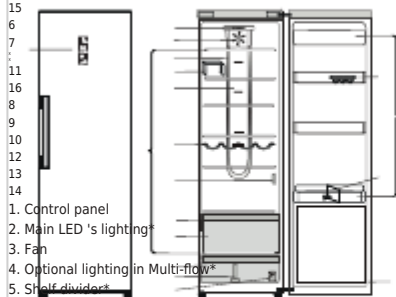

1. Control panel
2. Main LED 's lighting\*
3. Fan
4. Optional lighting in Multi-flow\*
5. Shelf divider\*
6. Multi-flow cold air area\*
7. Bottle rack \*
8. Sensor cover
9. Rating plate with commercial name
10. Cooler compartment(best for meat and fish)\*
11. Area shelves
12. Fruits and vegetables crisper
13. Crisper divider\*
14. Door reversibility kit\*
15. Egg tray\*
16. Bottle separator\*
17. Door trays
18. Door seal

\* Available on selected models

**HOW TO START THE APPLIANCE**

After plugging the appliance to the mains, it starts the operation automatically. After starting the appliance, wait at least 4-6 hours before placing food into the appliance. When the appliance is connected to the power supply, the display lights up and all the icons appear on the display for approximately 1 second.

The default (factory) values of the fridge compartment settings light-up.

**HOW TO REVERSE THE DOOR SWING**

- see enclosed Instructions for Use (Version\_1)
- Is recommended to reverse door swing by two persons. There is not foreseen door reversibility for:
  - models with integrated handle
  - models with glass panel on the door.

Specifications, technical data and images may vary from model.

**SMART DISPLAY**

This optional function can be used to save energy. To activate /deactivate the Smart Display, press and hold Fast Cool and Vacation the same time for 3 seconds until an audible signal sounds. To temporary reactivate the display, press any button. Remember that this function does not disconnect the appliance from the power supply, but only reduce the power consumed by external display (see the Instructions for Use).

Note: When the "6th Sense Fresh Control" is deactivated and the Smart

display will be activated: all LEDs on the display will turn off.

**ON/STANDBY**

To put the product in Stand-by, press and hold the appliance presence indicator button (see the Instructions for Use).

**TEMPERATURE DISPLAY**

Press the temperature button to change the temperature: the value changes cyclically between 8°C ad 2°C.

Note: The set point corresponds to the average temperature in the refrigerator.

**FAN**

The Fan improves temperature distribution inside the product, allowing better preservation of stored food. By default, the fan is switched on. To switch off the FAN press and hold Fast Cool and ON/STANDBY

same time for 3 seconds until an audible signal sounds and the Fan Sense Fresh Control\* icon will turn off as confirmation that the fan has been switched off. To switch on the FAN repeat the same procedure. As a confirmation audible signal sounds and the icon turns on.

Note: Reasons why switch off the fan look for "ENERGY-SAVING TIPS" in the Instructions for Use.

**ALARM TYPE**

 
 
 
**Signal**

The acoustical alarm is activated. The Alarm Indicator Door open alarm Open Alarm indicator (even if other alarms have been reset) Malfunction. The letter "E" blinks on the display (°C)

- DE
- FR
- IT
- PT
- DA
- FI
- NO

**QUICK START GUIDE**

buttons at for 3 seconds. To reactivate the 6TH SENSE FRESH CONTROL This function automatically works to ensure the optimal conditions to

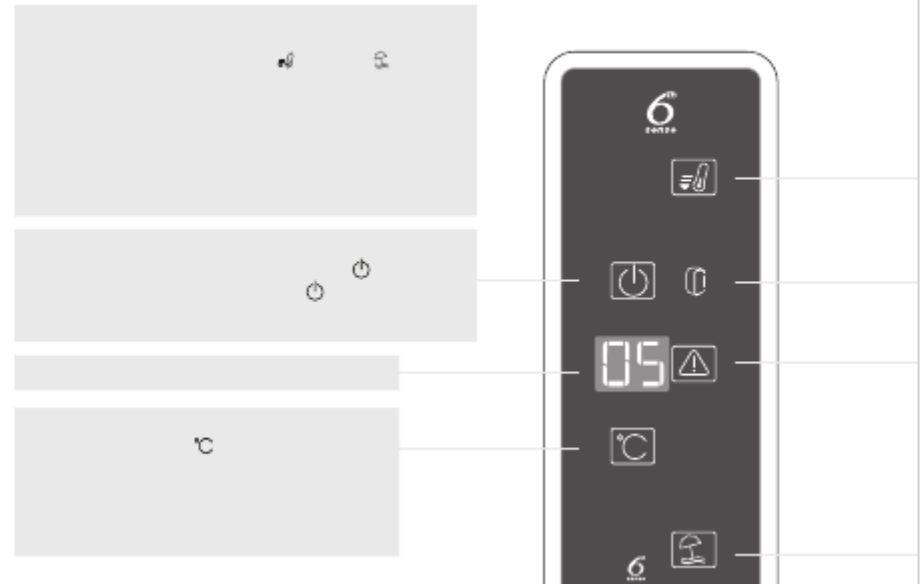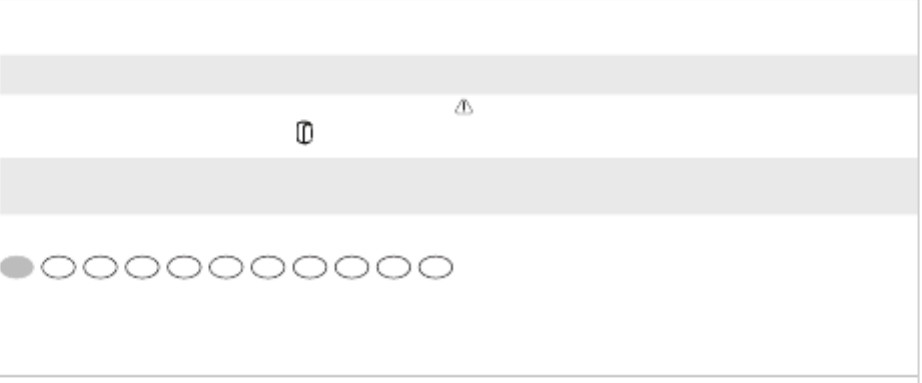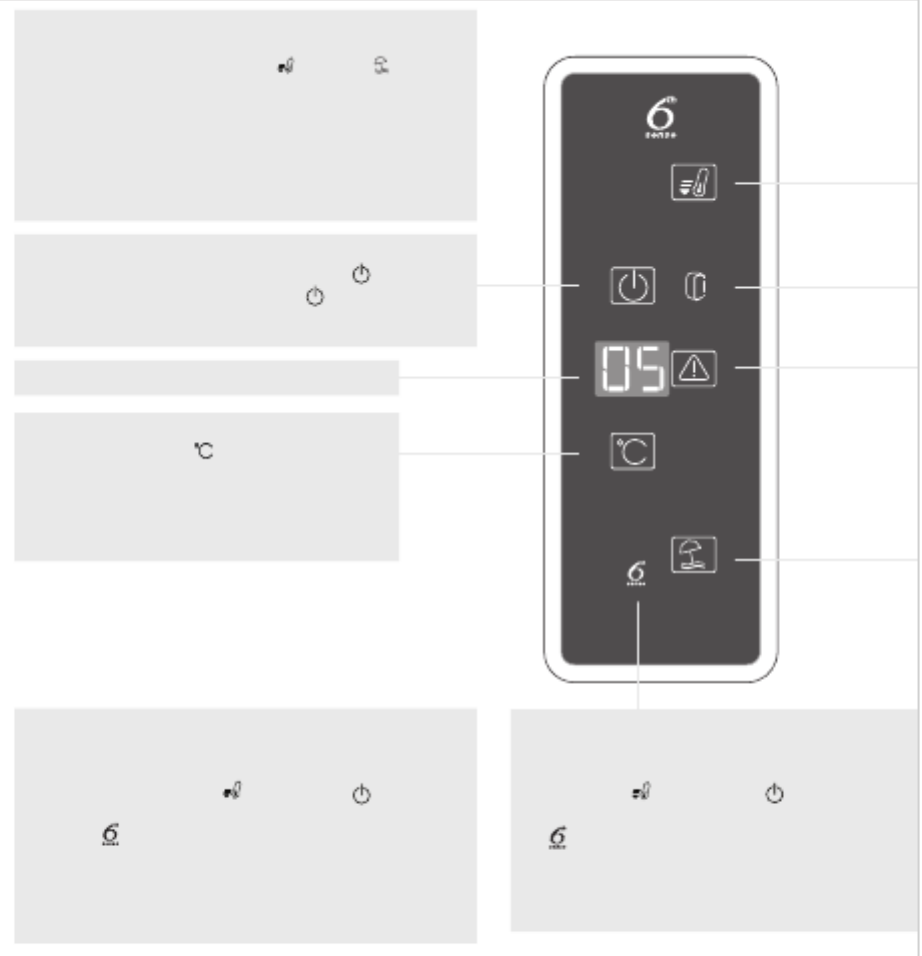

preserve the stored food. To deactivate the "6th Sense Fresh Control", press buttons at the top of the control panel and hold Fast Cool and ON for 3 seconds until the "6th Sense Fresh Control" icon turns off as confirmation that the feature has been deactivated. To reactivate this function repeat the same procedure.  
 Note: Deactivation of the function switch-off the FAN in the fridge.

**ALARMS TABLE**

**Cause**  
 The door has remained open for more than 2 minutes and the door is still visible until the door is closed.  
**SV**  
**UK**  
**AR**  
**FAST COOL button**  
 Using fast Cool function it is possible to increase the cooling capacity in the refrigerator compartment. The use of this function is recommended when placing a very high quantity of food in the refrigerator compartment. Press the Fast Cool button to activate Fast Cool function. When activated, the Fast Cool indicator turns on. The function is automatically disabled after 6 hours, or can be manually disabled by pressing F35 Cool button.  
**DOOR OPEN ALARM indicator**  
 (see the below alarms table)  
**ALARM indicator**  
 (see the below Alarms Table)  
**STOP ALARM button**  
 Press in case of alarm to mute the acoustic alarm.  
**VACATION button**  
 This function can be activated to reduce the energy consumption of the appliance during a prolonged period of time. Before activating the feature, all perishable food should be removed from the refrigeration compartment and make sure that the door is closed properly, since the refrigerator will maintain a suitable temperature to prevent the formation of unpleasant odors (+12°C). To activate/deactivate press the Vacation mode button for 3 seconds. When the function is enabled, the related symbol will light up and the temperature of the refrigerator compartment will be set to a higher setpoint (the temperature display will show the new temperature setpoint of +12°C). Changing the temperature setpoint will automatically deactivate the function.  
**Cure**  
 Close the door or press the Stop Alarm to mute the acoustical alarm. Contact the After-sales Service.

again.  
 400005221602

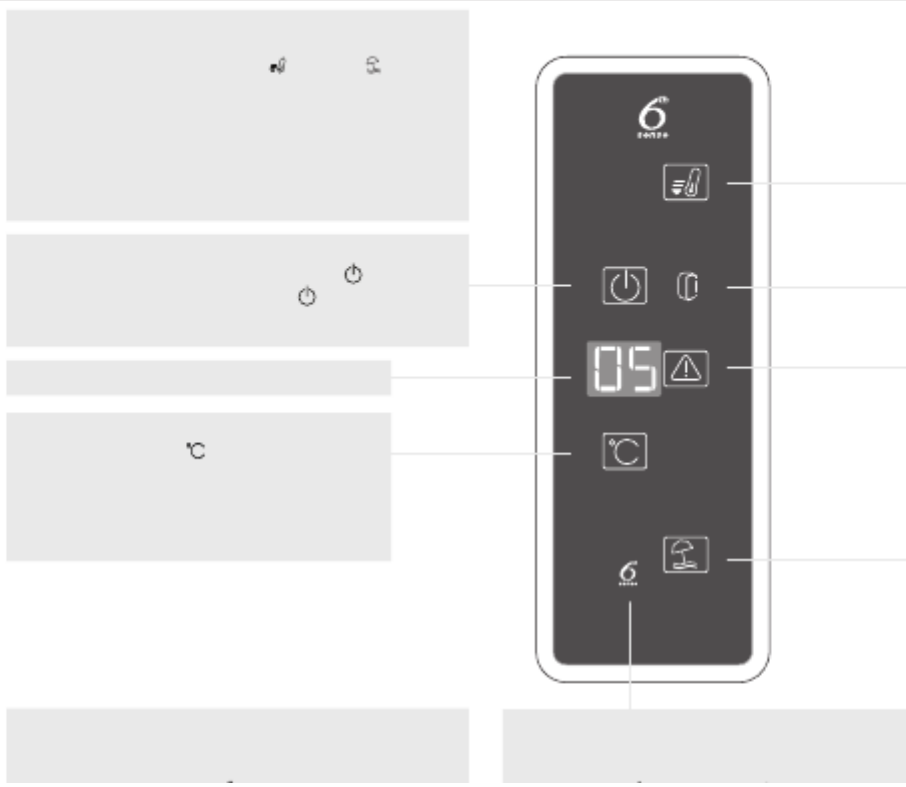 
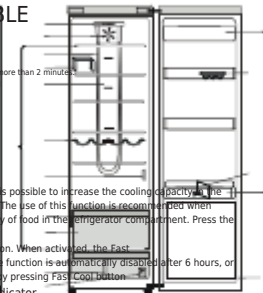 


Table of Contents

[Next Page](#)

1  
2  
3  
4  
5

## Related Manuals for Whirlpool SW8 AM2 D XR 2

[Refrigerator Whirlpool SW8 AM2C XR Instructions For Use Manual](#)

(208 pages)

[Refrigerator Whirlpool SW8 AM2C XRL Quick Manual](#)

(49 pages)

[Refrigerator Whirlpool SW8 AM1Q W 1 Instructions For Use Manual](#)

(184 pages)

[Refrigerator Whirlpool SW8 AM2Y XR 2 Instructions For Use Manual](#)

(64 pages)

[Refrigerator Whirlpool SW8 AM2Y XR 2 Instructions For Use Manual](#)

(80 pages)

[Refrigerator Whirlpool SW8AM2QX2 Quick Start Manual](#)

(22 pages)

[Refrigerator Whirlpool SW8 AM2C XR2 Instructions For Use Manual](#)

(240 pages)

[Refrigerator Whirlpool SS22AEXHW00 Use & Care Manual](#)

Side by side refrigerator (24 pages)

[Refrigerator Whirlpool ST14CKXHW00 Use & Care Manual](#)

Top-mount refrigerator (20 pages)

[Refrigerator Whirlpool ST14CKXKQ00 Use & Care Manual](#)

Top-mount refrigerator (16 pages)

[Refrigerator Whirlpool Kirkland Signature ST14CKCHW00 Use & Care Manual](#)

14" top-mount refrigerator (25 pages)

[Refrigerator Whirlpool SIDE BY SIDE REFRIGERATOR Use & Care Manual](#)

(14 pages)

[Refrigerator Whirlpool Side by side Refrigerator/Freezer Use & Care Manual](#)

Side by side refrigerator/freezer (92 pages)

[Refrigerator Whirlpool S20B RSB21-A Service Manual](#)

(17 pages)

[Refrigerator Whirlpool SKT60 Series Installation Instructions Manual](#)

Trim kit (24 pages)

[Refrigerator Whirlpool WHSW8AM2CWREX Instructions For Use Manual](#)

(16 pages)

## Summary of Contents for Whirlpool SW8 AM2 D XR 2

[Page 1](#) QUICK START GUIDE SMART DISPLAY Read the Instructions for Use carefully before This optional function can be used to save energy. To activate /deactivate using the appliance. the Smart Display, press and hold Fast Cool and Vacation buttons at FAST COOL button the same time for 3 seconds until an audible signal sounds.

## [Page 2: Inbetriebnahme Des Gerätes](#)

KURZANLEITUNG SMART-DISPLAY Lesen Sie vor Gebrauch des Geräts die Mit dieser optionalen Funktion können Sie Energie sparen. Halten Sie zur Gebrauchsanleitung aufmerksam durch. Taste SCHNELLKÜHLEN Aktivierung/Deaktivierung des Smart-Displays die Tasten Schnellkühlen Mithilfe der Funktion Schnellkühlen kann die Kühlleistung im Kühlfach Urlaub 3 Sekunden lang gleichzeitig gedrückt, bis ein akustisches Signal ertönt.

## [Page 3: Guide De Démarrage Rapide](#)

GUIDE DE DÉMARRAGE RAPIDE ÉCRAN INTELLIGENT Lisez attentivement la notice d'utilisation Cette fonction optionnelle peut être utilisée pour réaliser des économies avant d'utiliser l'appareil. TOUCHE REFROIDISSEMENT RAPIDE d'énergie. Pour activer/désactiver l'écran intelligent, appuyez en même Il est possible à l'aide de la fonction de Refroidissement rapide d'augmenter temps sur les touches Refroidissement rapide et Vacances pendant...

## [Page 4: Accensione Dell'apparecchio](#)

GUIDA RAPIDA INTRODUTTIVA DISPLAY INTELLIGENTE Prima di utilizzare l'apparecchio, leggere Questa funzione opzionale può essere usata per risparmiare energia. Per attivare/ attentamente le Istruzioni per l'uso. TASTO RAFFREDDAMENTO RAPIDO disattivare il Display intelligente, tenere premuti i tasti Raffreddamento rapido La funzione Raffreddamento rapido consente di aumentare la capacità di e Vacanza per 3 secondi fino a udire un segnale acustico.

## [Page 5: Guia De Iniciação Rápida](#)

GUIA DE INICIAÇÃO RÁPIDA VISOR INTELIGENTE Antes de utilizar o aparelho, leia Esta função opcional pode ser usada para poupar energia. Para ativar/ cuidadosamente as Instruções de Utilização. Botão de ARREFECIMENTO RÁPIDO desativar o Visor Inteligente, prima e mantenha premidos em simultâneo Com a função Arrefecimento Rápido, é...

## [Page 6: Ændring Af Dørens Åbningsretning](#)

OVERSIGTSVEJLEDNING SMART DISPLAY Før man anvender apparatet, skal man Denne valgfri funktion kan bruges til at spare energi. Smart Display aktiveres/ omhyggeligt læse den medfølgende vejledning. deaktiveres ved at trykke og holde på knapperne til Lynafkøling og Ferie KNAPPEN TIL LYNAFKØLING samtidig i 3 sekunder, indtil der høres et lydsignal.

## [Page 7: Laitteen Käynnistäminen](#)

PIKAOPAS SMART-NÄYTTÖ Lue käyttöohjeet huolellisesti ennen laitteen Tällä lisätoiminnolla voidaan säästää energiaa. Smart-näyttö otetaan käyttöön käyttöä. PIKAJÄÄHDYTYYS -painike / poistetaan käytöstä painamalla pikajäähdytys- ja lomapainikkeita Pikajäähdytystoiminnolla voidaan parantaa jääkaappiosaston jäähdytystehoa. samanaikaisesti 3 sekunnin ajan, kunnes kuuluu äänimerkki. Näytön voi Tätä toimintoa kannattaa käyttää silloin, kun jääkaappiosastoon asetetaan kytkä...

[Page 8](#) HURTIGSTARTVEILEDNING SMART DISPLAY Les brukerveiledningen nøye før du bruker Denne tilleggsfunksjonen kan brukes til å spare energi. For å aktivere/ apparatet. Knapp FOR RASK NEDKJØLING deaktivere Smart Display, trykk og hold nede knappene for Rask nedkjøling Bruk funksjonen for rask nedkjøling til å øke nedkjølingskapasiteten i og Ferie samtidig i 3 sekund til du hører et signal.

## [Page 9: Sätta På Apparaten](#)

SNABBGUIDE SMART DISPLAY Läs bruksanvisningen noggrant innan du Den här tilläggfunktionen kan användas för att spara energi. Du slår på/av använder apparaten. Smart Display genom att trycka samtidigt på knapparna Snabbkylning SNABBKYLNINGSKNAPP och Semester hålla dem intryckta samtidigt i 3 sekunder tills det hörs en Snabbkylningsfunktionen används för att öka kylskåpets kylkapacitet.

[Page 10](#) КОРОТКИЙ ПОСІБНИК ІЗ ПОЧАТКУ РОБОТИ СМАРТ-ДИСПЛЕЙ Перш ніж використовувати прилад, уважно Цю додаткову функцію можна використовувати для заощадження прочитайте інструкції з використання. Кнопка ШВИДКЕ ОХОЛОДЖЕННЯ електроенергії. Щоб увімкнути або вимкнути функцію «Смарт-дисплей», Функція «Швидке охолодження» допомагає підвищити рівень холодопродуктивності протягом 3 секунд утримуйте натиснутими кнопки «Швидке охолодження» в...

[Page 11](#) دليل البدء السريع وطريقة العرض الذكي. راجع تعليمات الاستخدام بعناية قبل استخدام الجهاز يمكن أن يُستخدم هذا الخيار لتوفير الطاقة. لتفعيل /إيقاف تفعيل العرض الذكي اضغط واستمر في نفس الوقت لمدة 3



ٲوان حتى ٲسمع صوت والعطلة الضغط على أزرار ٲٲبريد السريع)...

This manual is also suitable for:

[859991608320](#)