



# Toshiba TD-H80SEM Owner's Manual



1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17



- 

[Table of Contents](#)

- 

Troubleshooting

•

## Bookmarks

## Table of Contents

1 Table of Contents

2 Safety Instructions

3 Installation

4 Product Description

5 Operations

6 Quick Start



[7 Before each Drying](#)

[8 Control Panel](#)


[9 Drying Programmes Table](#)

[10 Cleaning and Care](#)

[11 Trouble Shooting](#)

[12 Technical Specifications](#)

[Download this manual](#)

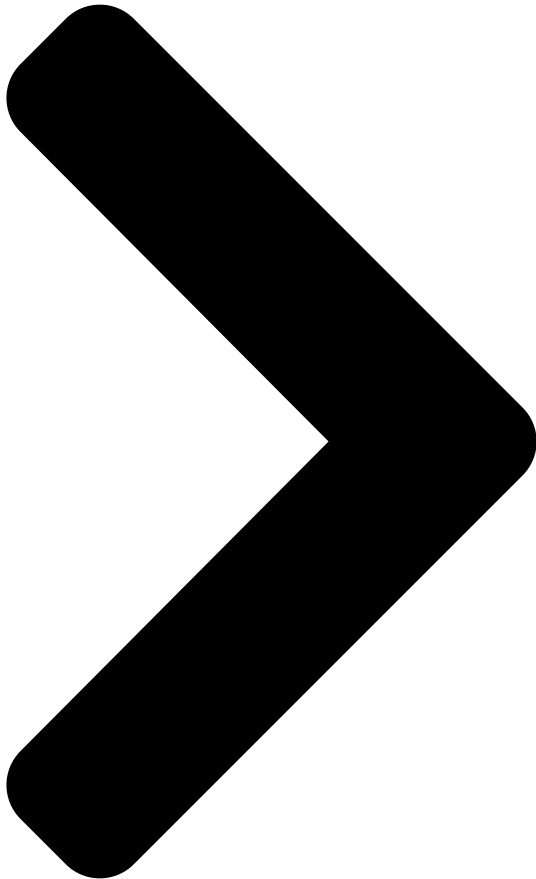

Tumble Dryer  
**TOSHIBA**  
OWNER'S MANUAL

MODEL

TD-H80SEM

## Read This Manual

Use all instructions and explanations of the installation before use. Follow the instructions carefully. Keep the operation instructions handy for later use. If the application is sold or passed on then ensure that the new owner always receives those operation instructions.

[Table of Contents](#)

[Next Page](#)

1  
2  
3  
4  
5

# Related Manuals for Toshiba TD-H80SEM

[Dryer Toshiba TD-BK100GH Series Owner's Manual](#)

(31 pages)

## Summary of Contents for Toshiba TD-H80SEM

[Page 1](#) Tumble Dryer OWNER'S MANUAL MODEL TD-H80SEM Read This Manual Use all instructions and explanations of the installation before use. Follow the instructions carefully. Keep the operation instructions handy for later use. If the application is sold or passed on then ensure that the new owner always receives those operation instructions.

### [Page 2: Table Of Contents](#)

CONTENTS SAFETY INSTRUCTIONS Safety Instructions ..... INSTALLATION Product Description .....Installation ..... OPERATIONS Quick Start .....Before Each Drying .....Control Panel .....Drying Programmes Table .....MAINTENANCE Cleaning And Care ..... Trouble Shooting ..... Technical Specifications .....

### [Page 3: Safety Instructions](#)

SAFETY INSTRUCTIONS Safety Instructions • The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

[Page 4](#) SAFETY INSTRUCTIONS • Items such as foam rubber (latex form), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer. • Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.

[Page 5](#) To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling. Rated capacity Model 7.0kg TD-H80SEM...

[Page 6](#) SAFETY INSTRUCTIONS • Power supply and grounding The dryer employs alternative current with the rated voltage and frequency. When the voltage fluctuates between 6% of rated voltage, the dryer can work normally. A special power socket with a capacity 10A for the dryer had better be set beside the ≥...

[Page 7](#) CONTENTS Do not wash or dry articles that have been Never attempt to operate this appliance if it is damaged, malfunctioning, partially cleaned in, washed in, soaked in or spotted disassembled, or has missing or broken parts, with combustible or explosive substances including a damaged cord or plug.

### [Page 8: Installation](#)

INSTALLATION Product Description Top board Side panel Control panel Tumble Door Switch Power plug Door Filter Flexible duct Front panel Note: Please see the products you purchased in kind prevail. Installation >10cm Installation Position Selection • Dryer should be placed in a ventilated area with not less than 10cm distance from the wall.

[Page 9](#) INSTALLATION Level Adjusting • Once in its permanent operating position, check that the dryer is absolutely level with the aid of a spirit level. If it is not, adjust the feet with a tool. Note! if dryer could not be placed horizontally (the lean angle is no more than 2°, the dryer will work unbalanced or stop working sometimes.

## [Page 10: Operations](#)

OPERATIONS Quick Start Note! Before using, please make sure it's installed properly. plug in load close door Drying select function start or default After Drying Buzzer beep or " :00"on display. unload clean filter unplug...

## [Page 11: Before Each Drying](#)

OPERATIONS Before Each Drying 1.Before drying, thoroughly spin the laundry in washing machine. High spin speed can reduce the drying time and save energy consumption. 2.For uniform drying result, sort the laundry according to fabric type and drying programme. 3.Before drying, please close zips, hooks and eyelets, button up, tie fabric belts, etc. 4.Do not over dry the clothes, because over dried clothes can easily get creases.

## [Page 12: Control Panel](#)

OPERATIONS Control Panel Display On/Off This display shows the setting, estimated Product is switched on or off. remaining time and status messages of your dryer. Start/Pause Press the button to start or pause the Programmes drying cycle. Different Dryer cycle can be selected according to the user's needs to make the Option clothes have more effective drying results.

[Page 13](#) OPERATIONS Option INTENSVIE Press the button to select adjust the dryness level of the laundry. The level has three grades . The drying time increases 3 minutes in every grade. 1.The intensity function can be activated only before the programme start. 2.Press the □INTENSVIE□button repeatedly to select the drying time.

## [Page 14: Drying Programmes Table](#)

OPERATIONS Drying Programmes Table Note! • The programmes above are only recommended for using, users can choose the appropriate programme according to the personal habits. Thick and multi-layered fabrics e.g. bedlinen, jeans, jackets etc, are not easy to dry, you'd better choose Jeans programme and maximum drying intensity level.

## [Page 15: Cleaning And Care](#)

MAINTENANCES Cleaning And Care Filter clean • Clean the lint filter after each use. Remove by pulling straight up. • Cleaning filter Use wiping cloth or your fingers. • Install filter If the filter is cleaned by damp cloth or water, please install after the sun dry.

## [Page 16: Trouble Shooting](#)

MAINTENANCES Trouble Shooting Trouble Cause Solution Wait for switching on electricity. Power cut. Check the power socket,make sure plug tight. The power plug is not The clothes in drier must be after spinning, Will not start plugged tight. and drying clothes can not exceed 7kg. Dry clothes exceed.

## [Page 17: Technical Specifications](#)

Temperature Sensor Stop the program Temperature is open or short and go to fault Sensor error state Technical Specifications Model TD-H80SEM Parameter Dimension 595\*555\*840(mm) ( \*D\*H) Rated input power 2000W Rated voltage 220-240V~ Rated frequency 50Hz Weight of product...