

 


Sanyo au W22SA Basic Manual

1
2
3
4
5
6
7
Table Of Contents
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106



•

[Table of Contents](#)

-


Troubleshooting

•

Bookmarks

[Download this manual](#)

Quick Links

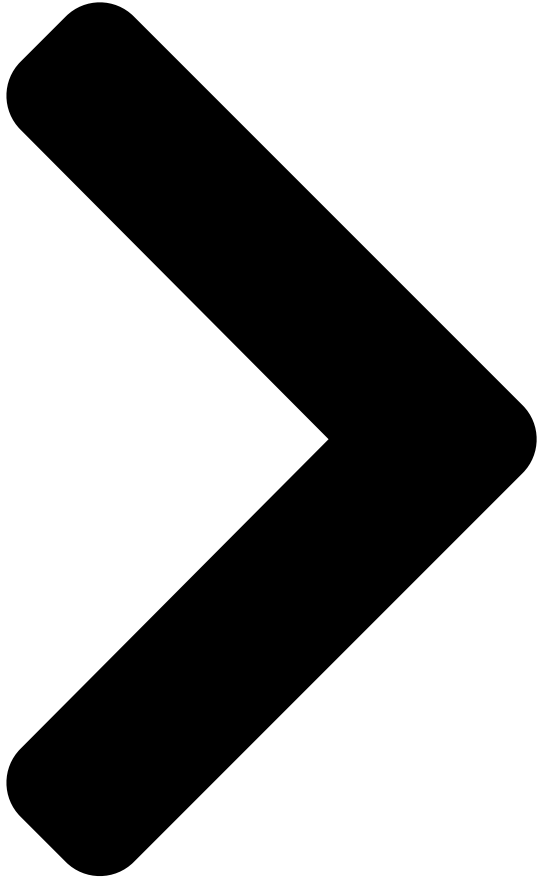

Before Use
How to Use
the Phone
Address Book
Mail
Camera



al

EZweb

EZchannel

EZnaviwalk

FM Radio

Infrared Data

Exchange Feature

Inputting Text

Troubleshooting

Other Features/

Index



[Table of Contents](#)

[Next Page](#)

- 1
- 2
- 3
- 4
- 5

Related Manuals for Sanyo au W22SA

[Cell Phone Sanyo A5514SA Basic Manual](#)

(104 pages)

[Cell Phone Sanyo A5514SA Operating Instructions Manual](#)

(30 pages)

[Cell Phone Sanyo A5527SA Basic Manual](#)

(92 pages)

[Cell Phone Sanyo A1303SA Operating Instructions Manual](#)

(22 pages)

[Cell Phone Sanyo SANYO Innuendo User Manual](#)

(140 pages)

[Cell Phone Sanyo SCP-3200 User Manual](#)

(141 pages)

[Cell Phone Sanyo Sprint SCP-7200 User Manual](#)

Pcs vision ready link phone (197 pages)

[Cell Phone Sanyo Sprint SCP-3810 User Manual](#)

(160 pages)

[Cell Phone Sanyo SCP-6200 Specifications](#)

Sanyo scp-6200: specifications (2 pages)

[Cell Phone Sanyo Sprint KATANA User Manual](#)

Sprint service (198 pages)

[Cell Phone Sanyo SCP-3100 User Manual](#)

Pcs vision phone (270 pages)

[Cell Phone Sanyo SCP-2400 User Manual](#)

Sanyo cell phone user guide (140 pages)

[Cell Phone Sanyo SCP-7000 User Manual](#)

Sanyo scp-7000: users guide (254 pages)

[Cell Phone Sanyo SCP-2700 User Manual](#)

Sprint cell phone (160 pages)

[Cell Phone Sanyo SCP-3810 Operating Manual](#)

(68 pages)

[Cell Phone Sanyo PRO-700 User Manual](#)

Sanyo cell phone user guide (236 pages)

Summary of Contents for Sanyo au W22SA

[Page 1](#) Before Use How to Use the Phone W22SA Address Book Basic Manual Mail Camera EZweb EZchannel EZnaviwalk FM Radio Infrared Data Exchange Feature Inputting Text Troubleshooting Other Features/ Index...

[Page 2](#) Preface Thank you very much for purchasing the W22SA. Before using your W22SA, be sure to read the W22SA Basic Manual (PDF manual) to ensure correct use of your W22SA. After you have finished reading this manual, store this PDF manual and the printed manuals in a safe

place so you can retrieve them whenever you need them.

[Page 3: Manners For Using Mobile Phones](#)

Manners for Using Mobile Phones A mobile phone always generates weak electric waves while its power is ON. Be considerate of others and the environment around you, and have fun using your mobile phone safely. There are places where the use of mobile phones is prohibited.

[Page 4: Basics Of The Mobile Phone](#)

Basics of the Mobile Phone What You Can Do with the W22SA Mail Camera EZchannel You can take You can automatically You can send mails photographs and easily receive information other mobile phones or personal computers. send them by E-mail. by simply registering programs.

[Page 5: Useful Manner Mode And Answer Phone](#)

Useful Manner Mode and Answer Phone Manner Mode With manner mode, you can set the ringer not to sound so as not to bother the people around you. Press for more than one second while the standby screen is displayed. Page 28 Answer Phone The caller can leave a message when you cannot answer the phone.

[Page 6: Check The Power, Reception And Battery](#)

Check the Power, Reception and Battery Keep the "power" ON for normal use. Keep the power ON to make or answer calls. Press for more than one second. Page 11 Confirm the "electric waves". It is sometimes difficult to receive electric waves in some places even within a service area.

[Page 7: Beware Of Junk Mail And One-Ring Calls](#)

Beware of Junk Mail and One-Ring Calls! If you receive junk mail... Using the mail filter function, you can reject mail sent from specific addresses or mail that bears " ☐☐☐☐※ (Unsolicited Ad)" in the title, which is the biggest source of junk mail. The following mail functions are available for preventing arrival of junk mail.

[Page 8: Table Of Contents](#)

Contents Manners for Using Mobile Phones1 What You Can Do with the W22SA2 Basics of the Useful Manner Mode and Answer Phone3 Mobile Phone Making Rear Key Operation Invalid3 Check the Power, Reception and Battery4 Beware of Junk Mail and One-Ring Calls!

[Page 9](#) What You Can Do with the Camera Camera Taking Photos60 Recording Movies61 Viewing Recorded Images63 Attaching a Photo or Movie to an E-mail Message ..64 Photo Mail 64 EZweb65 EZweb Understanding Basic Operations

[Page 10: Before Use](#)

Before Use Confirming the Package Contents The W22SA phone and accessories are included in the package. W22SA Phone Battery Pack SANYO AC Adapter 03 (Assembled inside of phone) Desktop Holder SANYO Flat-type Warranty (Japanese) Stereo Earphones 02 Precautions in Use...

[Page 11: Names Of Parts](#)

Names of Parts Receiver (Earpiece) Infrared Port Main Display Center Key Flexible Keys Cursor Key Mail Key EZ Key Clear/Manner Key Power/End Key Start Key Dial Keys Microphone Built-in Antenna Incoming Illuminator Built-in Camera Flat-type Earphone- Camera Key Microphone Flash/Pocket Light Jack Side External...

[Page 12: Charging The Battery Pack](#)

Check the pin configuration and orientation of the connector before connecting the adapter. Plug the power plug of the SANYO AC Adapter 03 into an AC outlet. Attach the W22SA phone in which the battery pack is installed to the Desktop Holder.

enter the phone number starting with the area code.

[Page 25: Calling Back \(Outgoing Calls/Incoming Calls\)](#)

Calling Back (Outgoing Calls/Incoming Calls) Press r or l while the standby screen is displayed. Press r Pressing r displays the Outgoing Calls. Press l Pressing l displays the Incoming Calls. The list shows the most latest ...

[Page 26: Changing Ringer Type](#)

Changing Ringer Type Press c (q) while the standby screen is displayed. The Main Menu appears. Use a to select "Basic Settings" and press c (x). The Basic Settings screen appears. Use j to select "Sounds/..."

Page 27 "Name de Call" : The caller's name registered in the address book can be read with a voice function. (Example: When "Hanako Sanyo" is registered as the caller's name in the address book, it is read as "Calling from H-a-n-a-k-o S-a-n-y-o (Japanese)" ...)

Page 28 Use j to select "Original" and press c (z). The ringer selection screen appears. Pressing L (Z) plays back the selected ringer. Use a to select a melody ...

[Page 29: Adjusting Ringer Volume](#)

Adjusting Ringer Volume Perform steps 1 to 5 on pages 24 and 25 to display the Call Notice setting screen. Use j to select " " and press c (z). The Ringer Volume setting screen appears.

[Page 30: Adjusting The Other Party's Voice Volume](#)

Adjusting the Other Party's Voice Volume Use j to adjust volume during a call. Press u to increase the volume. Press d to decrease the volume. The voice volume can be adjusted in 9 levels during the call. Setting the Manner Mode The W22SA notifies you of the incoming call by vibrating.

[Page 31: Using Answer Phone](#)

Using Answer Phone Press y for more than one second. Answer Phone is turned ON and " " appears on the screen. To Turn Answer Phone OFF Press y for more than one second. Information • Answer Phone can hold up to about 20 seconds for each message, and up to 3 messages can be recorded including Rec.Phone Memo.

[Page 32: Playing Back/Erasing Messages On Answer Phone](#)

Playing Back/Erasing Messages on Answer Phone When a message is recorded on Answer Phone: "New Notice" appears on the standby screen, therefore press d. Use s to select " " and press c (N). delete and press R ...

Page 33 Use j to select the recorded message to delete and press R (S). ...

[Page 34: Address Book](#)

Address Book The receiver's phone number can be automatically dialed and a call easily placed by saving frequently called phone numbers in the address book. Storing Data in the Address Book Press L (y) for more than one second while the ...

Page 35 Enter a phone number and press c (3). The Phone No. Type selection screen appears. Enter the area code when saving a landline telephone number. Use j to select a type of ...

Page 36 Use j to select a type of address and press **c** (x). The address book edit screen returns. Press R (w). The number of memory entries and of option items remaining appear.

Page 37: Making A Call To A Saved Phone Number

Making a Call to a Saved Phone Number Press L (y) while the standby screen is displayed. The address book list screen appears. Use s to switch between headings (, , , etc.). ...

Page 38: Editing Address Book Data

Editing Address Book Data Example: To change a phone number Press L (y) while the standby screen is displayed. The address book list screen appears. Use s to switch between headings (, , , etc.), ...

Page 39 Use j to select " " (Phone No.) and press 0900002XXXX c (x). XX Edit data and press c (3). Pressing C erases the selected character. Press C for more than one second erases all characters.

Page 40: Registering Data From Outgoing/Incoming Calls

Registering Data from Outgoing/Incoming Calls Press r while the standby screen is displayed. The Outgoing Calls history appears. If l is pressed while the standby screen is displayed, the Incoming Outgoing Calls Calls history appears.

Page 41: Mail

Mail You must subscribe to the EZweb service to use the E-mail feature. Please contact the au shop or the au Customer Service Center if you did not subscribe for the service at the time of purchase. Be sure to perform initialization before using the E-mail and EZweb services. If you have not performed initialization yet, see page 18.

Page 42: Creating And Sending E-Mail

Creating and Sending E-mail Press M while the standby screen is displayed. The E-Mail Menu appears. Use j to select "Create New" and press c (x). The Create Mail screen appears. Icons : "Address"...

Page 43 Use j to select "Use Address Book" and press c (3). The address book list screen appears. There are 3 types of addresses: To, Cc and Bcc. You can send your mail (max. 640 one-byte characters total including Cc and Bcc) up to 5 addresses at a time.

Page 44 Use j to select " " (Body) and press c (x). The Body input screen appears. Enter the body and press c (3). The Create Mail screen returns. ...

Page 45: Reading Received E-Mail

Reading Received E-mail When You Receive E-mail: "New Notice" appears on the standby screen, therefore press d. Use s to select " " and press c (N). The Inbox appears. Use j to select the folder ...

Page 46 To View Photos/Movies Received by E-mail Example: Playing back a movie Perform steps 1 to 3 on page 43 to display the Attached data received mail. Use j to select the movie

(attached data) and press c (Z).

[Page 47: Reading E-Mail From The Inbox](#)

Reading E-mail from the Inbox Press M while the standby screen is displayed. The E-Mail Menu appears. Use j to select "Inbox" and press c (x). X

[Page 48: Replying To Received E-Mail](#)

Replying to Received E-mail Press M while the standby screen is displayed. The E-Mail Menu appears. Use j to select "Inbox" and press c (x). X The Inbox appears.

[Page 49](#) Use j to select " (Body) and press c (x). The Body input screen appears. Enter the body and press c (3).

[Page 50: Blocking Junk Mail](#)

Blocking Junk Mail Junk mail can be rejected with the mail filter feature. Press M while the standby screen is displayed. Use j to select "E-Mail Settings" and press c (x). Use j to select "Other Settings" and press c (x). Use j to select "...

[Page 51: C-Mail](#)

C-mail C-mail is a service for sending/receiving text messages to/from "C-mail" compatible mobile phones. Phone numbers can be used for sending/receiving C-mail. (Example) 090-0000-XXXX Via au C-mail can be sent to au mobile phones. All you have to do is to enter a message and select the receiver's phone number.

[Page 52: Creating And Sending C-Mail](#)

Creating and Sending C-mail Press M for more than one second while the standby screen is displayed. The C-Mail Menu appears. Use j to select "Create New" and press c (x). The Body input screen appears. Enter the body and press ...

[Page 53](#) Use j to select "Use Address Book" and press c (3). The address book list screen appears. Search the address book with a, select a desired phone number, and press ...

[Page 54: Reading Received C-Mail](#)

Reading Received C-mail When You Receive C-mail: "New Notice" appears on the standby screen, therefore press d. Use s to select " " and press c (N). X The Inbox appears. The received C-mail is usually stored in ...

[Page 55: Reading C-Mail From The Inbox](#)

Reading C-mail from the Inbox Press M for more than one second while the standby screen is displayed. The C-Mail Menu appears. Use j to select "Inbox" and press c (x). X

[Page 56: What You Can Do With The Camera](#)

What You Can Do with the Camera Shooting Photos/Movies Taking Photos (Still Pictures) (See page 60) Recording Movies (Moving Pictures) (See page 61) How to Hold the W22SA The way to hold the W22SA during photo/movie shooting differs according to the size of the photo/movie.

■ ...

[Page 57](#) ■ Taking Landscape-Oriented Pictures Photo: Suited for VGA or SXGA size photos Hold with proper way so that appears on the left and take the photo. ● Shooting with the ● Shooting with the main display sub display Shutter key Shutter key Picture-Taking Posture Open your feet to the breadth of your shoulders and maintain your back and sides firm.

[Page 58](#) Key Operation in Picture-Taking When shooting photos/movies, the icons along the bottom of the display correspond to the following keys. ■ Shooting with the ■ Shooting with the main display sub display White balance Photo size/ Recoding mode Moving up/down through items Zooming/Wide angle adjustment Light/Flash...

[Page 59](#) Selecting the Photo Size/Recording Mode. Before taking a photo or recording a movie, select an appropriate photo size and recording mode. (See page 62) ■ Photo Mobile Size (120 x 160 dots) VGA Size (640 x 480 dots) Select this size to take a photo that Select this size if you wish to save can be attached to E-mails and sent memory with images used on personal...

[Page 60](#) What You Can Do With the Camera Use photos with the W22SA. It is possible to display the photos you take on the standby screen, display them when a call comes in and register them in the address book. Send photos/movies by E-mail. Photos or movies of a max.

[Page 61](#) Print photos you have taken. Using the USB Cable WIN (optional), it is possible to print high-quality pictures even at home. Compatible with PictBridge It is possible to output images and image information directly to the printer from the W22SA, without going through a personal computer.

[Page 62: Taking Photos](#)

Camera Photos can be taken and movies can be recorded using the W22SA camera feature. The saved photos or movies can be attached to E-mail and sent to other cell phones or personal computers. Taking Photos Press V for more than one second while the standby screen is displayed.

[Page 63: Recording Movies](#)

Recording Movies Press V for more than one second while the standby screen is displayed and then press L (w). 00:00:15 The view seen from the lens appears on the main display. Pressing j switches between 24 zoom levels. Pressing \$ turns the light ON/OFF. Aim the object and press c (l).

[Page 64](#) Title of a Photo You Take *1 Photo Size Title of a Photo Where to Save Mobile/Wallpaper Size date that the photo was taken_time that the photo was taken~consecutive "Photo Folder" in the Data number Folder VGA/SXGA Size date that the photo was taken + consecutive number (Example) For the first photo taken at 19:30 on December 24 2004 Mobile/Wallpaper Size: 041224_1930~01...

[Page 65: Viewing Recorded Images](#)

Viewing Recorded Images Press V for more than one second while the standby screen is displayed and then press R (S). To view a movie, start the camera, press L (w), then press R (S).

[Page 66: Attaching A Photo Or Movie To An E-Mail Message](#)

Attaching a Photo or Movie to an E-mail Message Perform steps 1 and 2 on page 60 or 61 to take/record images. Press L (k). The Create Mail screen appears with the image attached. For the subsequent procedure, see steps 3 to 11 on pages 40 to Photo Mail...

[Page 67: Ezweb](#)

EZweb You must subscribe to the EZweb service to use this service. Please contact the au shop or the au Customer Service Center if you did not subscribe for the service at the time of purchase. Be sure to perform initialization before using the E-mail and EZweb services. If you have not performed initialization yet, see page 18.

[Page 68: Understanding Basic Operations](#)

Understanding Basic Operations Press E while the standby screen is displayed. The EZ Menu appears. Use j to select “Top Menu” and press c (x). The EZ (EZ Top Menu) appears. It may take some time to display the screen. ...

[Page 69: Viewing Information Sites](#)

Viewing Information Sites The EZweb can be accessed from the EZ (EZ Top Menu). Many useful and entertaining information sites (programs) can be accessed via the EZweb. Example: How to access the “ ” site in the “ ” (Business & News information) “EZ ...

[Page 70: Downloading Chaku-Uta](#)

Downloading Chaku-Uta Example: Download the latest Chaku-Uta and set it for the Ringer. Press E while the standby screen is displayed. The EZ Menu appears. Use j to select “Top Menu” and press c (x). Image The EZ (EZ Top Menu) appears.

Use j to select and download a Chaku-Uta Download the Chaku-Uta prompted by on-screen instructions. An EZ password is required to use pay sites. The EZ password is a 4-digit number set when content for a fee is subscribed to for the first time.

[Page 72: Bookmarking Frequently-Accessed Sites](#)

Bookmarking Frequently-Accessed Sites Display the site to bookmark and press R (e). The Browser Menu appears. Use j to select “New bookmark” and press c (x). ...

[Page 73: Viewing Charges](#)

Viewing Charges Calls and transmission charges can be viewed on EZweb. Press c (q) while the standby screen is displayed and press 1 twice. The Inquire Toll selection screen appears. Use j to select “YES” and ...

[Page 74: What You Can Do With Ezchannel](#)

EZWeb subscription required What You Can Do with EZchannel With EZ channels, the latest content is distributed and downloaded to the W22SA automatically just by registering the program you want to subscribe to in the W22SA. Displaying the EZchannel Menu Displaying the EZchannel Menu select “EZ...”

“Program Guide” to Search for the Desired Programs Search for programs amongst the program introductions and recommendations provided on EZchannel. to select “Program Guide” and ... Select a program. press (x). ...

[Page 76: Ezchannel](#)

EZchannel Registering Programs Playing Back Programs Saving Programs Information • Perform initialization before using the EZchannel service. If you have not performed initialization yet, see page 18. • With EZchannel, a single program download can be as much as 3MB of data. It is recommended that you subscribe to the flat rate packet communication plan, “Double- Flat”.

Use j to select “EZ Service Menu” and press c (x). The EZ Service Menu appears. Use j to select “EZchannel” and press c (x). The EZchannel Menu appears.

[Page 78: Playing Back Programs](#)

Playing Back Programs Programs can be played back by simply selecting one from the Program list of the EZchannel Menu. Perform steps 1 to 3 on pages 74 and 75 to display the EZchannel

Menu. Use j to select the **PROGRAM LIST** **PROGRAM** ...

Page 79 Key Operation in Program Playback L (c) Lowers the volume. R (d) Raises the volume. Pauses the program. (While the program is paused, "Restart", "Play from Start" and "End" can be selected from the screen.) c (Restart) Presses "Restart" to resume playback of a paused program (while the program is paused). Moves upward Moves downward c (x)

Page 80: Saving Programs

Saving Programs By saving downloaded programs and e-books, you can play them back at any time. Perform steps 1 to 3 on pages 74 and 75 to display the EZchannel Menu. Use j to select the **PROGRAM LIST** **PROGRAM** **PROGRAM** **PROGRAM** **PROGRAM** Program list and press **PROGRAM** **PROGRAM** ...

Page 81 Use j to select "YES" and press c (3). Program data is saved in the "Multi Folder", and e-book data is saved in the "Book Folder". Some programs cannot be saved because of copyright protection. Information Data in the Multi Folder can be played back as follows. 1.

Page 82: What You Can Do With Eznaviwalk

EZWeb subscription required What You Can Do with Eznaviwalk A Mobile Phone attached Car Navigation! A Mobile Phone attached Car Navigation! A Mobile Phone attached Car Navigation! The Eznaviwalk is a real navigation service that can walk you to your destination. to select **PROGRAM** **PROGRAM** ...

Page 83 "Going-Out Menu" for When You Go Out Displays various menus that are useful when you are out. Provides the latest news and event information. **PROGRAM** It is possible to search train exchange and train (Connection Search) timetable. **PROGRAM** Provides voice directions to a target destination. You can also register (Navigation) "My Spots".

Page 84: Eznaviwalk

Eznaviwalk The Eznaviwalk service can be of great help for an outing or if you get lost on the way to your destination. Information • Perform initialization before using this service. If you have not performed initialization yet, see page 18. •...

Page 85: Checking Ways To Return Home

Use j to select "MySpot", **PROGRAM** **PROGRAM** press c (x). **PROGRAM** **PROGRAM** The MySpot list screen appears. **PROGRAM** **PROGRAM** Use j to select "Home" **PROGRAM** **PROGRAM** **PROGRAM** and press L (w). **PROGRAM** **PROGRAM** **PROGRAM** **PROGRAM** **PROGRAM** **PROGRAM** The registration method selection **PROGRAM** **PROGRAM** **PROGRAM** ...

Page 86: Fm Radio

You can listen to FM Radio using the earphone cord as an antenna. You can also adjust volume and tune in stations. FM Radio broadcasts cannot be received without the included SANYO Flat-type Stereo Earphones 02. Connecting the SANYO Flat-type Stereo Earphones 02 to the W22SA Rotate the cover of the flat earphone terminal (Ⓢ) and...

Page 87: Ending The Fm Radio

How to Operate the FM Radio Screen Tuning and other operations are possible from the FM Radio screen. Press C on the FM Radio screen and use j to select an area. Press c to start an operation in the selected area. Frequency <FM Radio screen>...

Page 88: Recording From Fm Radio

Recording from FM Radio You can record audio broadcasted over FM Radio. Perform steps 1 to 2 on page 84 to display the FM Recording Radio screen. Press C . Use j to select the recording area. Press c (B). FILE 041224 ...

Page 89: Playing Back Recorded Audio

Rewinds through the recorded audio or to the beginning (press for more than one second). For Good FM Radio Reception • The SANYO Flat-type Stereo Earphones 02 serves as an antenna. Extend the earphone cable all the way and point it in the direction where reception is best.

□ ...

[Page 101: Troubleshooting](#)

Troubleshooting Symptom What to Check Correction Page
I s t h e b a t t e r y p a c k Attach the battery pack properly. Cannot turn the - attached properly? power ON. I s t h e b a t t e r y p a c k Charge the battery pack.

[Page 102: Other Features](#)

Other Features The W22SA is provided with other useful features. EZ Chaku-Uta-Full Using this service, you can enjoy music data from EZweb information sites. Just like buying a CD, you can enjoy the whole song as well as the CD jacket and lyrics. □□□□□...

[Page 103](#) W22SA. These dictionaries can be very useful as you can also translate English into Japanese and vice-versa while entering characters. Dictionary Downloads It is possible to download dictionaries from "SANYO □□□□□□□ □" and use information therein as prediction candidates when entering characters. Voice Recorder The W22SA can record up to 6.5 hours of audio.

[Page 104: Index](#)

Index Accessories8 Electric Waves Reception4, 11 □ Address Book32 EZappli (BREW)17, 100 Edit 36 EZ Chaku-Uta-Full100 Make a Call to a Saved EZchannel17, 74 Phone Number 35 Play Back Program

[Page 105](#) Adjust Ringer Volume27 Change Ringer Type24 Mail Create and Send C-mail50 Create and Send E-mail40 SANYO AC Adapter 03 8, 10 C-mail49 SANYO Flat-type Stereo E-mail39 Earphones 02 8, 84 Read C-mail

[Page 106](#) "157" on your au cellphone. Sales : KDDI CORPORATION • OKINAWA CELLULAR TELEPHONE COMPANY SANYO Electric Co., Ltd. Manufactured by : Cellphone and PHS operators collect and recycle unused telephones, batteries and battery chargers at stores bearing the logo regardless of brand and manufacturer to protect the environment and reuse valuable resources.