



# Toshiba RC-18DR1NMY Instruction Manual

Electric rice cooker



1  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11  
12  
13  
14  
15  
16  
17  
18

19  
20  
21  
22  
23

• PAGE

OF 23 GO

•

[Table of Contents](#)

•

## Bookmarks

## Quick Links

[1 How to Cook Delicious Rice](#)

[2 Setting the Timer](#)

[Download this manual](#)





ELECTRIC RICE COOKER

# Instruction Manual

# **TOSHIBA**

Model

RC-18DR1NMY

RC-10DH1NMY

RC-18DH1NMY

Thank you for purchasing Toshiba rice cooker.

Please read the instruction manual and use it correctly for

●  
your own safety.

Before using, please read "Safety Cautions" and "Please follow the instructions". (page 2 - 7)

After reading, please keep the instruction manual at a place

• **TOSHIBA**  
where any person who is going to use this cooker can find and see it.

For household use

With cooking menu

## Contents

.....  
[Safety Cautions](#)

[Please observe and follow](#)

[Parts Identification](#)

[Basic steps to cook rice](#)

[How to cook delicious rice](#)

[Rice cooking procedures](#)

[Standard of cooking amounts and cooking times](#)

[Display of cooking times](#)

..... 12

[Setting the timer](#)

[Clock Adjustment](#)

["Keep Warm"](#)

.....  
[Food preparation methods](#)

[How to use "Steam" with steam stand](#)

[Cake & Crispy Rice](#)

.....  
[Sushi](#)

[Soup & Congee](#)

.....  
[Clean & Care](#)


How to take out and put in the inner lid,

.....  
[steam vent](#)

[Cleaning by boiling](#)

[In case of problems](#)

[Power failure](#)

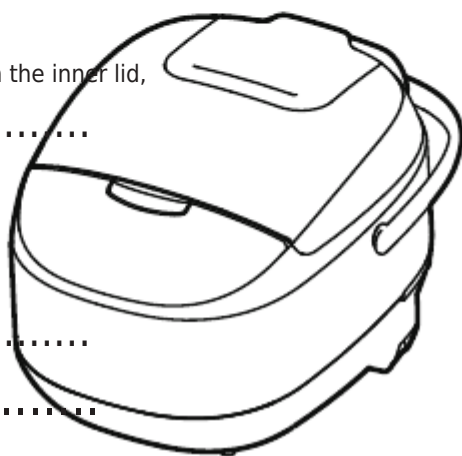

.....  
[Error indication](#)

.....  
[Specifications](#)

Before Use	
Rice Cooking	
Making proper use	• • • •
notices	• •

# TOSHIBA

7

8

9

10

11

11

11

12

13

14

15

16

17

18

19


19

19

20

22

23

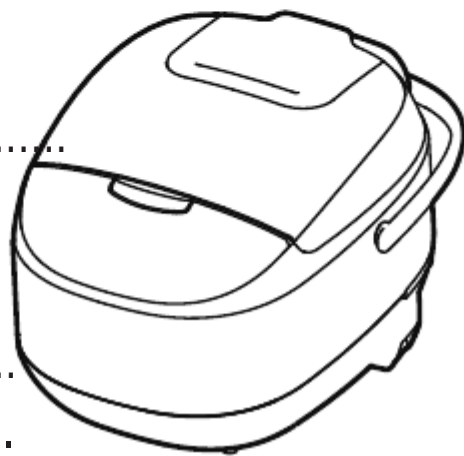

Before Use	
Rice Cooking	
Making proper use	<ul style="list-style-type: none"><li>•</li><li>•</li><li>•</li><li>•</li></ul>
Notices	<ul style="list-style-type: none"><li>•</li><li>•</li></ul>

[Next Page](#)

1  
2  
3  
4  
5

## Related Manuals for Toshiba RC-18DR1NMY

[Toshiba RC-18DR1NMY, RC-10DH1NMY, RC-18DH1NMY - ELECTRIC RICE COOKER Manual](#)

(article)

[Rice Cooker Toshiba RC-10NMF Instruction Manual](#)

Electric rice cooker/warmer (13 pages)

[Rice Cooker Toshiba RC-10NMF Instruction Manual](#)

Electric rice cooker/warmer (13 pages)

[Toshiba RC-10NMF, RC-18NMF, RC-10NMF, RC-18NMF, RC-10NMF, RC-18NMF - Toshiba Electric Rice Cooker/Warmer Manual](#)

(article)

[Rice Cooker Toshiba RC-10NMF Instruction Manual](#)

Electric rice cooker/warmer (17 pages)

[Rice Cooker Toshiba RC-18DH1NP Instruction Manual](#)

Electric rice cooker/warmer (20 pages)

[Rice Cooker Toshiba RC-18DSUMY User Manual](#)

Electric rice cooker (68 pages)

[Rice Cooker Toshiba RC-10NAF Series Instruction Manual](#)

Electric rice cooker/warmer (24 pages)

[Rice Cooker Toshiba RC-10RHI Instruction Manual](#)

Electric rice cooker/warmer (13 pages)

[Rice Cooker Toshiba RC-10JR1NP Instruction Manual](#)

Mechanical rice cooker / warmer, 1.0l/1.8l type (8 pages)

[Rice Cooker Toshiba TRCS02 User Manual](#)

(28 pages)

[Rice Cooker Toshiba TRCS01 User Manual](#)

(26 pages)

[Rice Cooker Toshiba RC-10JRNH Instruction Manual](#)

Toshiba mechanical rice cooker / warmer (16 pages)

[Rice Cooker Toshiba RC-DS10K Instruction Manual](#)

Vacuum & pressure ih rice cooker (44 pages)

[Rice Cooker Toshiba RC-5MM Instruction Manual](#)

Electric rice cooker/warmer (17 pages)

[Rice Cooker Toshiba TRSH01 User Manual](#)

(28 pages)

## Summary of Contents for Toshiba RC-18DR1NMY

### [Page 1: Table Of Contents](#)

How to take out and put in the inner lid, ..... steam vent .....  
Cleaning by boiling Thank you for purchasing Toshiba rice cooker. .... In case of  
problems Power failure ..... Please read the instruction manual and use it  
correctly for ●...

## [Page 2: Safety Cautions](#)

SAFETY CAUTIONS Please follow for your own safety ■ This is to explain the extent of injuries and damages that may occur if the instructions are not followed. Probable causes of Probable causes of WARNING CAUTION “severe injuries”or “bodily harm”or “death”...

[Page 3](#) Store from which Especially Do not insert any foreign the product was bought or metal articles object. Toshiba service center for e.g. pins, wire, etc. air vent examination and repair. Do not immerse The power plug / cord is Do not ●...

[Page 4](#) To prevent fires, burns, electric shocks, electric leakage, WARNING short circuit, etc. Use the power plug/cord correctly. (continued) ● Do not use damaged Handle the power cords with ● cords/power plugs, etc., or care. Do not pull, tuck, twist, those with loose insertion. bend them with force in unnatural ways or turn on Do not let steam reach the...

[Page 5](#) To prevent electricity leakage, electric shocks, bodily CAUTION harm, burn wounds, fire hazards, and property damages. To prevent boiling over or spilling out ● Rice porridge is to be made Do not increase water too ● with lots of water, so we don't much more than the indicated use “White Rice”...

[Page 6](#) SAFETY CAUTIONS Please follow for your own safety To prevent electricity leakage, electric shocks, bodily harm, CAUTION burn wounds, fire hazards, and property damages. Do not use the cooker in the following places A place where near the naked The high electromagnetic area. ●...

## [Page 7: Please Observe And Follow](#)

Please contact the store from which the product was bought (such as the air vent, etc..) may cause malfunctions of the or Toshiba service center for examination and repair. cooker. Do not use the cooker in the following ways to prevent coating inside the inner pot from getting scratched and getting unstuck ●...

## [Page 8: Parts Identification](#)

(remove foreign matters) Cooking Heater cord Safety Please remove strap from cord Steam Vent when using rice cooker Warning Label (remove and wash Accessories every time) Measuring cup Scoop Spoon (approximately 180 ml.) For Model: For Model: RC-10DH1NMY RC-18DR1NMY RC-18DH1NMY Operation Panel...

## [Page 9: Basic Steps To Cook Rice](#)

Basic Steps to Cook Rice Preparation Measure rice with the measuring cup provided. A level cup = 180ml It might differ from other food measuring cups (200ml) ● □Good □Bad or other rice measuring vessels. example□ example□ ① Fill plenty of water, swirl the rice around quickly and Wash rice.

## [Page 10: How To Cook Delicious Rice](#)

How to cook delicious rice About Rice Measure rice accurately (level off the top). Buy a proper amount of new rice of which the rice- ● Do not shake the measuring cup polishing date indicates that it can be completely consumed within 2 weeks - 1 month.

## [Page 11: Rice Cooking Procedures](#)

Rice Cooking Procedures Operation Method Select the cooking menu with Every time we press the “Menu” key, ● “ ” mark will move and the selection Adjust to the cooking menu will consequently change. ● Press the “COOK” key, the lamp of the Cooking starts, after pressing corresponding menu will be from flashing to being on all the time.

## [Page 12: Setting The Timer](#)

Setting the timer Cooking at the preset time. Please do not use pre-programmed settings for germed brown rice, rice mixed with cereals, and rice seasoned and cooked with various ingredients. Put the inner pot in the cooker and close the lid. With set the cooking menu, ...

## [Page 13: Keep Warm](#)

Possible pre-programmed menus Please do not use pre-programmed function to each of the following items marked with “X”. ● white rice brown rice sticky rice crispy rice steam soup

cake sushi Pre-programmed Time Please do not set preprogrammed times so long over 14 hours ( maximum 8 hours in summer). ●...

## [Page 14: Food Preparation Methods](#)

Food Preparation Methods WARNING Please do not cook or use any ingredients which are not mentioned. Because they may cause steam or ingredients to spill over or scatter, resulting in burn wounds, injuries, damages, etc. Besides, they may be causes of inner-pot corrosion, bad odors, etc. Basic procedures Select menu by Every time the "MENU"...

## [Page 15: How To Use "Steam" With Steam Stand](#)

How to use "STEAM" with steam stand How to pour water Take the model of RC-10DH1NMY & RC-18DH1NMY as an example: steam stand steam stand inner pot water Water level Rice cooker 1.0L type Follow "White Rice" wate level 2 1.8L type...

## [Page 16: Cake & Crispy Rice](#)

CAKE Ingredients preparation: Small amount: 3 eggs, 100g caster sugar, 120g cake flour (baking powder), 30g butter (not melted). Large amount: 5 eggs, 180g caster sugar, 200g cake flour (baking powder), 50g butter (not melted). (Cake tests for Large amount are not carried out for below models: RC-10DH1NMY. Put in sugar and eggs, stir with a whisk until it is frothy.

## [Page 17: Sushi](#)

SUSHI Ingredients (for 4 people): China's northeast rice or special rice for sushi 300 g Seasoned vinegar (mixed in advance): Vinegar (6 big spoons), sugar (1 big spoon) and salt (1 small spoon) Wash rice quickly until the water is clear, add water to the water level scale 2 for "WHITE RICE", and close the lid. Select the "Sushi"...

## [Page 18: Soup & Congee](#)

SOUP Prepare soup ingredients (such as chicken, corn, carrots etc.), wash all ingredients and cut into small pieces, then put them into the inner pot, and add water not more than Max water line. Close the lid, press the "MENU" button to select the "SOUP", then press the "COOK" button, and wait for cooking to be completed.

## [Page 19: Clean & Care](#)

Clean & Care Using an unclean cooker will result in bad odors, etc. Therefore, please keep it clean all the time. Always make sure to wipe off the water droplets from the steam vent, inner pot /packing. Please do not use the following materials CAUTION (They are causes of deformation, decoloration, corrosion, cracks scratches) Unplug the cooker before...

## [Page 20: In Case Of Problems](#)

In Case of Problems Before making repair requests, please investigate once more. If cannot investigate or take further action by yourself, please make an inquiry to Toshiba service center. Trouble Cases Causes / points of investigation The cooker doesn't power on.

[Page 21](#) Trouble Cases Causes / Points of investigation Mushy, Sticky Please cook rice with less water, then keep it warm. After the rice has cooked, loosen it immediately and entirely. Gather rice at the central part of the pot and sometimes mix together entirely, to prevent it from being left at the inner surface of inner pot.

## [Page 22: Power Failure](#)

Trouble Cases Causes / Points of investigation ● The setup time starts from the "ready-to-cook" temperature. However, it needs some time It takes a long time to prepare for heating until the temperature gets ready for cooking. Therefore, real cooking times will food. The setup time does not be longer than setup times.

## [Page 23: Error Indication](#)

Light on system error Light on Communication error Flash Communication error Specifications Power Body Model Name Power Supply Consumption Frequency Dimension Weight (COOK) RC-18DR1NMY 220-240V~ 780-928W L393\*W287\*H254(mm) 4.4kg 50/60Hz RC-10DH1NMY 605-720W L368\*W271\*H212(mm) 3.2kg 50/60Hz 220-240V~ RC-18DH1NMY 760-904W L393\*W287\*H254(mm) 3.9kg 50/60Hz...



This manual is also suitable for:

[Rc-10dh1nmyRc-18dh1nmy](#)