



Asus Turbo Drive BW-16D1H-U Quick Installation Manual

External blu-ray writer

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19

20

21

•

Troubleshooting


•

Bookmarks

--

[Download this manual](#)

Quick Links

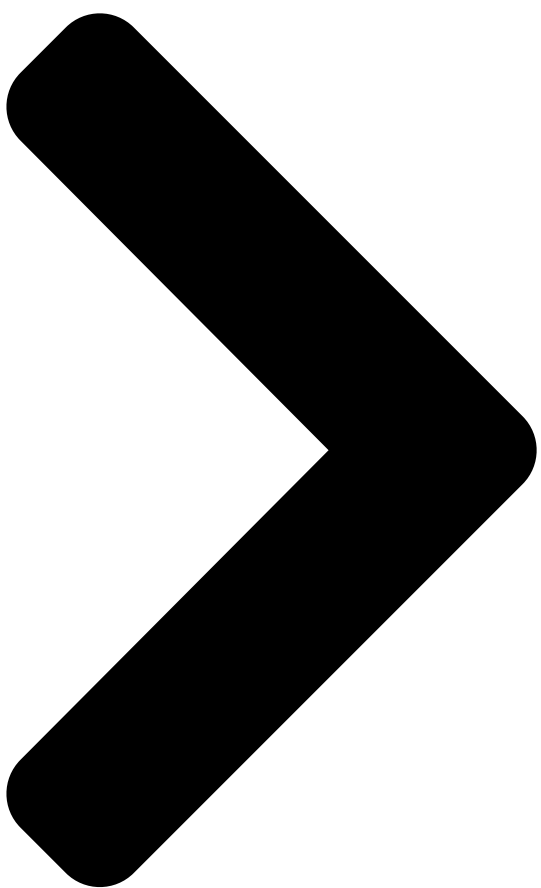

External Blu-ray Writer

ASUS[®]

IN SEARCH OF INCREDIBLE

Q

Quick Installation Guide

English



български

Česky

Dansk

Deutsch

Model / нормативная модель : BW-16D1H-U

v 1.4 Published May 2016

Copyright © 2016 ASUSTeK Computer INC. All Rights Reserved.

15060-34440300

Ελληνικά

Italiano

Español



Eesti

Қазақ

Suomi

Lietuvių

Français

Latviski

Magyar

Bahasa Malaysia

Bahasa Indonesia

Nederlands

Turbo Drive

External 16 X B L u-r ay Wr iter

BW-16D1H-U

In 35 Languages

Norsk

Polski

Português

Română

Русский

Slovensky



Slovenščina

PRO

Svenska

□□□

Türkçe

(Kurulum Kılavuzu)

Tiếng Việt

Українська

عربي

فارسی

1



[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Asus Turbo Drive BW-16D1H-U

[Blu-ray Drive Asus BW-16D1X-U Quick Installation Manual](#)

External 16x blu-ray writer (36 pages)

[Blu-ray Drive Asus TurboDrive BW-16D1H-U PRO Quick Installation Manual](#)

External 16x blu-ray writer external blu-ray writer (22 pages)

[Blu-ray Drive Asus BW-16D1X-U Quick Installation Manual](#)

External blu-ray writer (19 pages)

[Blu-ray Drive Asus SBC-06D2X-U Quick Installation Manual](#)

External slim (21 pages)

[Blu-ray Drive Asus SDRW-08U7M-U Quick Installation Manual](#)

External slim dvd-writer (19 pages)

[Blu-ray Drive Asus SBW-06D5H-U Quick Installation Manual](#)

External slim blu-ray drive (21 pages)

[Blu-ray Drive Asus BW-12D1S-U Quick Installation Manual](#)

External blu-ray writer (21 pages)

[Blu-ray Drive Asus SDRW-08U5S-U Quick Installation Manual](#)

External slim dvd-writer (21 pages)

[Blu-ray Drive Asus BW-14D1XT Datasheet](#)

Optical disc drive internal blu-ray writer (2 pages)

[Blu-ray Drive Asus SDRW-S1 Quick Start Manual](#)

External usb dvd / blu-ray writer with sound card (124 pages)

Summary of Contents for Asus Turbo Drive BW-16D1H-U

[Page 1](#) Turbo Drive External 16 X Blu-ray Writer BW-16D1H-U External Blu-ray Writer Quick Installation Guide In 35 Languages English Ελληνικά Italiano Norsk Svenska Español Polski 繁體中文 Eesti Қазақ Portuguese Türkçe (Kurulum Kılavuzu) български Suomi Lietuvių...

[Page 2: Safety Information](#)

Wait until the discs have reached room temperature. not amount to a major failure. If you require assistance please call ASUS Customer Service 1300 2787 88 or visit us at <http://support.asus.com>. WARNING This product may contain chemicals known to the State of California to cause cancer, and birth defects or other reproductive harm.

[Page 3: Package Contents](#)

REACH 符合 Complying with the REACH (Registration, Evaluation, Authorisation, and Restriction of Chemicals) regulatory framework, we published the chemical substances in our products at ASUS REACH website at <http://csr.asus.com/english/REACH.htm>. Die rechtliche Rahmenbedingungen für REACH (Registration, Evaluation, Authorisation, and Restriction of Chemicals) erfüllend, veröffentlichen wir die chemischen Substanzen in unseren Produkten auf unserer ASUS REACH-Webseite unter <http://csr.asus.com/english/REACH.htm>.

[Page 4](#) 4. Drag the files that you wish to burn into the application. ASUS BW-16D1H-U 5. Click Burn. •Mac OS supports DVD burning and playback. NOTES •Mac OS supports burning to a Blu-ray disc. You need to purchase third-party software if you want to play movies from Blu-ray discs.

[Page 5](#) Place the optical drive on a stable surface NOTE You can either lay the optical drive

horizontally on a stable surface, or use it with the bundled stand. To install the optical drive onto the vertical stand: 1. Place the vertical stand on a stable surface.

Page 6 Поместите оптический привод на устойчивую Поставете оптичното устройство на стабилна Az optikai meghajtót helyezze stabil felületre. Meletakkan optical drive (penggerak optik) pada permukaan. permukaan. MEGJEGYZÉS: Az optikai meghajtót helyezheti stabil, permukaan datar. Примечание: Вы можете установить оптический ЗАБЕЛЕЖКА: Можете или да поставите оптичното vízszintes felületre, vagy használhatja a mellékelt PERHATIAN: Anda juga bisa meletakkan optical...

Page 7 Așezați drive-ul optic pe o suprafață stabilă. Optickú mechaniku umiestnite na stabilný povrch. NOTĂ: Puteți fie așeza orizontal drive-ul optic pe o POZNÁMKA: Optickú mechaniku môžete položiť na : suprafață stabilă, sau să-l folosiți cu un suport. stabilný...

Page 8 Connect the optical drive to your computer. 1. Connect one end of the bundled USB 3.0 cable to your computer. 2. Connect the other end of the bundled USB 3.0 cable to the optical drive. NOTE Please use USB 3.0 cable to reach the maximum data transfer rate.

Page 9 Подключение оптического привода к Свържете оптичното устройство с компютъра. Az optikai meghajtót csatlakoztassa a Menyambungkan optical drive pada komputer. компьютеру. 1. Свържете единия край на включения в számítógéphez. 1. Sambungkan salah satu konektor kabel USB 3.0 1. Подключите один конец поставляемого в комплекта...

Page 10 Conectarea drive-ului optic la computerul dvs. Pripojte optickú mechaniku ku svojmu počítaču. 1. Conectați un capăt al cablului USB 3.0 inclus în 1. Pripojte jeden koniec dodávaného USB 3.0 1. USB 3.0 USB3.0 pachet la computer. kábľa k svojmu počítaču.

Page 11 ® Windows Click and then click ASUS BW-16D1H-U Device Manager. In Device Manager, click next to DVD/CD-ROM drives to expand the list. If the external optical drive is detected properly, the name of the drive is displayed on the list.

Page 12 Убедитесь, что система обнаружила внешний Уверете се, че системата е открила външното оптично Varmista, että järjestelmäsi havaitsee ulkoisen Σιγουρευτείτε ότι το σύστημά σας μπορεί να ανιχνεύσει оптический привод. устройство. optisen aseman. την εξωτερική οπτική μονάδα. Для проверки наличия оптического привода в Проверка...

Page 13 Pastikan bahawa sistem anda mengesan pemacu Kontroller at systemet oppdager den eksterne optiske Prepričajte se, da je vaš operacijski sistem zaznal Se till att ditt system upptäcker den externa optiska optik luaran. stasjonen. zunanji optični gonilnik. enheten. Untuk memeriksa sama ada pemacu optik dikesan Slik kan du sjekke om den optiske stasjonen er registrert Če želite preveriti ali je optični pogon zaznan, För att kontrollera att den optiska enheten hittas använd...

Page 14 Windows ® Windows ® XP SP3 > XP / Vista / 7 Windows ® Vista / 7 SP1 > Windows ® + <X> ® Windows ...

Page 15 Безопасное отключение внешнего оптического Безопасно премахване на външното оптично Safely remove the external optical drive. привода. устройство. Внешний оптический привод поддерживает Plug Внешний оптический привод поддерживает Plug & Play. Для отключения устройства выполните & Play. Для отключения устройства выполните The external optical drive supports Plug & Play. To safely remove the drive. следующие...

Page 16 Poista ulkoinen optinen asema. Αφαιρέστε με ασφάλεια την εξωτερική οπτική Keluarkan pemacu optik luaran dengan selamat. Trygg fjerning av den eksterne optiske stasjonen. μονάδα. Pemacu optik luaran menyokong Plug & Main. Ikut Den eksterne optiske stasjonen støtter Plug & Play. Ulkoinen optinen asema tukee Plug &...

Page 17 Pazljivo odstranite zunanji optični gonilnik. Säker borttagning av den externa optiska

enheten. Zunanji optični gonilnik podpira Plug & Play sistem. Den externa optiska enheten stödjer plug-and-play. Plug & Play Pri odstranitvi gonilnika, upoštevajte spodaj opisana Följ stegen nedan för att säkert ta bort enheten.

[Page 18: Troubleshooting](#)

2. Check if the USB 3.0 cable is connected properly. See Step 2 Connect the optical drive to your computer for details. 3. Turn on your computer. NOTE For more technical service, contact your retailer or the ASUS Technical Support. Dépannage Fehlerbehebung Si votre ordinateur ne parviens pas à détecter le...

[Page 19](#) PIEZĪME: Tehniskā servisa pakalpojumiem sazinieties ar pārdevēju vai ar ASUS tehnisko atbalstu. PASTABA: Jei reikia daugiau techninės pagalbos, společností ASUS. susisieki su pardavėju arba ASUS techninio aptarnavimo.

[Page 20](#) Để được hỗ trợ thêm về dịch vụ kỹ thuật, hãy ECKEPTPE: Қосымша техникалық қызмет алу контактирайте вашega prodajalca ali ASUS tehnično liên hệ với cửa hàng bán sản phẩm hoặc Bộ phận hỗ trợ ASUS компаниясының podpora.

[Page 21](#) Turbo Drive E x t e r n a l 16 X B l u - R a y W r i t e r B W - 16 D 1 H - U ...

This manual is also suitable for:

90dd01l0-m69000