



# Secure Boot - Asus AAEON COM-SKHB6 User Manual



1

2

3

4

5

6

7

8

9

10

Table Of Contents

11

12

13

14

 
15

16

17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67

68  
69  
70  
71  
72  
73  
74  
75  
76



•

•

## Bookmarks







### 3.6.1 Secure Boot

#### Options

Attempt Secure

Boot

Secure Boot activated when Platform Key (PK) enrolled, System mode is User/Deployed, and CSM function is disabled.

Secure Boot Mode

Secure Boot mode selector

Chapter 3 - AMI BIOS Setup

Disabled

Enabled

Aptio Setup Utility - Copyright (C) 2022 American Megatrend

Security

System Mode	Setup	Secure Bo
Secure Boot	Not Active	Platform
		System m

[Table of Contents](#)

[Previous Page](#)  
[Next Page](#)

1  
...  
57  
58  
59  
60  
61  
62  
63  
64

## Related Manuals for Asus AAEON COM-SKHB6

### [Control Unit Asus AAEON COM-SKUC6 User Manual](#)

Com express module (100 pages)

### [Control Unit Asus Aaeon COM-SKUC6 User Manual](#)

Com express module (99 pages)

### [Control Unit Asus AAEON COM-WHUC6 User Manual](#)

Com express module (110 pages)

### [Control Unit Asus AAEON COM-BYTC2 User Manual](#)

Com express module (91 pages)

### [Control Unit Asus AAEON COM-BT-A30 User Manual](#)

Com express module (98 pages)

### [Control Unit Asus AAEON COM-TGHB6 User Manual](#)

(88 pages)

### [Control Unit Asus AAEON COM-TGUC6 User Manual](#)

Com express module (103 pages)

### [Control Unit Asus AAEON COM-ADNC6 User Manual](#)

Com express module (89 pages)

### [Control Unit Asus Aaeon NanoCOM-APL User Manual](#)

Com express module (77 pages)

### [Control Unit Asus ThunderboltEX 3-TR User Manual](#)

(14 pages)

### [Control Unit Asus TPM-SPI Quick Start Manual](#)

14-1 pin (4 pages)

### [Control Unit Asus AAEON MXM-ACMA User Manual](#)

(26 pages)

### [Control Unit Asus AAEON MIPICSI Camera RVP Converter Kit User Manual](#)

Up expansion module (47 pages)

### [Control Unit Asus Aaeon NanoCOM-TGU User Manual](#)

Com express module (95 pages)

### [Control Unit Asus AAEON ASDM-L-CFS User Manual](#)

Smart display module (82 pages)

### [Control Unit Asus Aaeon NIM-S26B Quick Installation Manual](#)

Network interface module (23 pages)

## Related Content for Asus AAEON COM-SKHB6

### [AAEON COM-WHUC6 Security: Secure Boot](#)

Asus AAEON COM-WHUC6

### [Aaeon COM-SKUC6 Security: Secure Boot](#)

Asus Aaeon COM-SKUC6

[AAEON NanoCOM-APL-B10 Setup Submenu: Boot](#)

Asus AAEON NanoCOM-APL-B10

[AAEON COM-BT-A30 Setup Submenu: Boot](#)

Asus AAEON COM-BT-A30

[AAEON COM-BYTC2 Setup Submenu: Boot](#)

Asus AAEON COM-BYTC2

[Aaeon NanoCOM-APL Setup Submenu: Boot](#)

Asus Aaeon NanoCOM-APL