



Sanyo SI-10T3SCIC Series Operating Instructions Manual

Indoor/outdoor unit

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24

•

Bookmarks

[Download this manual](#)

Quick Links



Model No.

Indoor Unit

SI-10T3SCIC series

SI-10T5SCIC series

SI-15T3SCIC series

SI-15T5SCIC series

SI-20T3SCIC series

Outdoor Unit

SO-10T3SCIC series

SO-10T5SCIC series

SO-15T3SCIC series

SO-15T5SCIC series

SO-20T3SCIC series

ACI2PR13101

Operating Instructions

Air Conditioner

The logo consists of the letters 'SA' in a bold, black, sans-serif font. To the right of the 'A', there are three slanted parallel lines of varying lengths, suggesting motion or a stylized graphic element.

Table of Contents

[Next Page](#)

1
2
3
4
5

Related Manuals for Sanyo SI-10T3SCIC Series

[Air Conditioner Sanyo SI-10T3SDIA Series Operating Manual](#)

(23 pages)

[Air Conditioner Sanyo ECO G SGP-EGW190M2G2W Brochure & Specs](#)

Gas driven vrf m series (9 pages)

[Air Conditioner Sanyo STW-2 Series Owner's Manual](#)

Packaged terminal air conditioner (12 pages)

[Air Conditioner Sanyo SAP-K77RAX Technical & Service Manual](#)

Split system air conditioner (68 pages)

[Air Conditioner Sanyo SAP-KRV96EH Technical & Service Manual](#)

Dc inverter split system air conditioner (65 pages)

[Air Conditioner Sanyo Mini ECO-i SPW-ASR74GXH56\(A/B\) Installation Instructions Manual](#)

System air conditioner (49 pages)

[Air Conditioner Sanyo SPW-X253GH56 Service Manual](#)

Split system (105 pages)

[Air Conditioner Sanyo SPW-D253GH56 Service Manual](#)

Split system (108 pages)

[Air Conditioner Sanyo SPW-C483GYH8 Service Manual](#)

Eco multi system (235 pages)

[Air Conditioner Sanyo SAP-KR184GJH Technical & Service Manual](#)

Split system air conditioner (64 pages)

[Air Conditioner Sanyo SAP-K92A Technical & Service Manual](#)

Multi-split system (39 pages)

[Air Conditioner Sanyo SAP-K302A Technical & Service Manual](#)

Split system air conditioner (37 pages)

[Air Conditioner Sanyo SAP-DMRV93GJ Technical & Service Manual](#)

Dc inverter multi-system air conditioner (58 pages)

[Air Conditioner Sanyo SAP-KM97AHA Technical & Service Manual](#)

Multi-split system air conditioner (50 pages)

[Air Conditioner Sanyo SAP-K161GJA Technical & Service Manual](#)

Split system air conditioner (86 pages)

[Air Conditioner Sanyo SPW-CR1503GDYH8 Technical Data & Service Manual](#)

W-eco multi system series (377 pages)

Summary of Contents for Sanyo SI-10T3SCIC Series

[Page 1](#) Model No. Indoor Unit Outdoor Unit SI-10T3SCIC series SO-10T3SCIC series SI-10T5SCIC series SO-10T5SCIC series SI-15T3SCIC series SO-15T3SCIC series SI-15T5SCIC series SO-15T5SCIC series SI-20T3SCIC series SO-20T3SCIC series ACI2PR13101...

[Page 2](#) • Please note that the indication is on display to start the unit. 3 Select the desired temperature • Selection range: 16 °C ~ 30 °C. • Operating the unit within the recommended temperature range may save energy. COOL: 24 °C ~ 28 °C. DRY : 1 °C ~ 2 °C lower than room

temperature.

[Page 3](#) • Remote control • AAA or R03 batteries • Remote control holder TEMP • Screws for remote control MODE AIR SWING holder GLACIER FAN SPEED • PM 2.5 Filter SLEEP DISPLAY CLEAN CANCEL CHECK LOCK RESET...

[Page 6: Safety Precautions](#)

Safety precautions Prevent water leakage by ensuring drainage 2. Servicing 2-1. Service personnel pipe is: • Any qualified person who is involved with - Connected properly, working on or breaking into a refrigerant - Kept clear of gutters and containers, or circuit should hold a current valid certificate - Not immersed in water from an industry-accredited assessment...

[Page 10](#) TEMP MODE AIR SWING GLACIER FAN SPEED SLEEP DISPLAY CLEAN CANCEL CHECK LOCK RESET...

[Page 11](#) Press DISPLAY Key Times to DISPLAY turn ON/OFF the temperature display...

[Page 13](#) FAULT DETAILS LIGHT DISPLAY FLASH No fault Outdoor EEPROM fault Indoor to Outdoor communication fault Compressor starting abnormal Compressor out-of-step abnormal IPM module fault Compressor shell temperature overheat protection Compressor discharge temperature sensor fault Compressor Suction temperature sensor fault Outdoor condenser temperature sensor fault Outdoor ambient temperature sensor fault Outdoor DC fan motor fault Outdoor AC current protection...

[Page 14](#) To select operation mode AUTO - For your convenience Unit run with optimised settings. You can change the temperature according to your comfort. COOL - To enjoy cool air To reduce power consumption during COOL mode, Remote control use curtains to screen off sunlight and outdoor heat. receiver and indicator DRY - To dehumidify the environment Remote control...

[Page 15: Operation Conditions](#)

To set the timer To select fan speed To turn ON and OFF the unit at a preset times. (Remote control display) AUTO QUIET (Low) (Medium) (High) • For AUTO, the indoor fan speed is automatically adjusted according to the operation mode. CANCEL To adjust airflow direction (Remote control display)

[Page 20: Testing Guidelines](#)

BEE Regulation Testing Guidelines QUIET CLEAN (For Full Load) QUIET CLEAN (For Half Load)

[Page 21](#) Do's & Don't: E-waste (Management) Amendment Rules 2018 S.No. Do's Don't All electrical and electronic products are required The product should not be opened by the User to be handed over only to the Authorized himself / herself, but only by authorized service recycler.

[Page 24](#) ACI2PR13101 ACI2PR13101_R1...

This manual is also suitable for:

[Si-10t5scic series](#) [Si-15t3scic series](#) [Si-15t5scic series](#) [Si-20t3scic series](#) [So-10t3scic series](#) [So-10t5scic series](#) ... [Show all](#)