
 
Wiring Instructions - Sanyo C2432A Installation Instructions Manual

Table of Contents





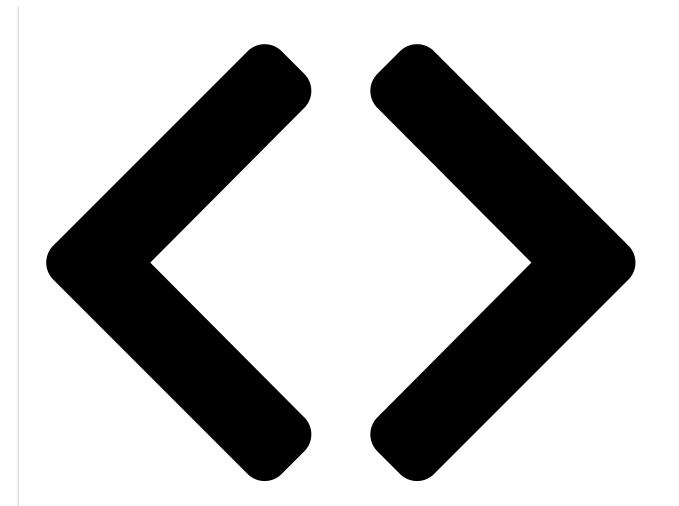

Arrangement for Right Tubing

(a) Remove the 2 screws and take off the side cover.

(Fig. 3-59)

(b) Cut out the L-shaped tubing outlet using a hacksaw

(Fig. 3-61)

(c)

Using the L-shaped tube (field supply), connect tubing between the indoor and outdoor units. (Fig. 3-63)

Arrangement for Left and Left-rear Tubing.

- (a) Remove the 4 screws (2 on each side) and take off both left and right side cover. (Fig. 3-62)
- (b) Remove 4 screws to remove the bottom cover.

(c)

Using the L-shaped tube (field supply), connect tubing as in Fig. 3-64.

Indoor unit

Left





Fig. 3-62

3-19. Wiring Instructions

General Precautions on Wiring

Before wiring, confirm the rated voltage of the unit as shown on its name plate, then carry out the wiring closely following the wiring diagram.

(2)

Provide a power outlet to be used exclusively for each unit a power supply disconnect and circuit breaker for overcurrent protection should be provided in the exclusive line.

(3)

To prevent possible hazards from insulation failure, the unit must be grounded.

(4)

All wiring must be connected tightly.

Do not allow wiring to touch refrigerant tubing, compressor, or any moving parts of the fan.

Unauthorized changes in the internal wiring can be very dangerous. The manufacturer will accept no responsibility for any damage or misoperation that occurs as

a result of such unauthorized changes.

Right side cover

L-shaped tube

1361_T_I

Fig. 3-63

27(1) S4359249

Tubing

from the

outdoor

unit

Fig. 3-60

Hack saw

Fig. 3-61

1360_T_I


Fig. 3-64

1357_T_I 1358 T I


L-shaped

tube

1359_T_I

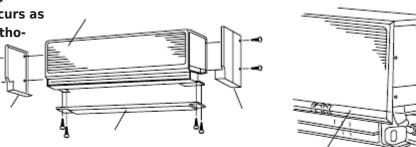



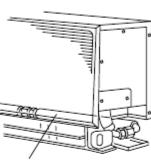



Previous Page Next Page

...

Quick Links:
Table of Contents
General
Indoor Unit
Outdoor Unit
Remote Control Unit
Remote Control Onit

Related Manuals for Sanyo C2432A

Air Conditioner Sanyo 24KLS32A Specification Sheet

Sanyo ductless split system air conditioners specification sheet (3 pages) $\,$

Air Conditioner Sanyo 24XS32A Submittal Sheet

Indoor/outdoor ceiling recessed (4-way) air conditioner (3 pages)

<u>Air Conditioner Sanyo XS4232 Technical Data And Service Manual</u>

(66 pages)

Air Conditioner Sanyo KS2432A Technical Data And Service Manual

(64 pages)

Air Conditioner Sanyo KS2432A Service Manual

Split system (63 pages)

Air Conditioner Sanyo KS3032 Service Manual

Split system air conditioner (56 pages)

Air Conditioner Sanyo C3032 Service Manual

Split system air conditioner (54 pages)

Air Conditioner Sanyo KS2432 Instruction Manual

Split system air conditioner; wall-mounted type ceiling-mounted type recessed type cool/fan model (24 pages)

Air Conditioner Sanyo KS2432A Instruction Manual

Cool/dry model (24 pages)

<u>Air Conditioner Sanyo KS2462R Instruction Manual</u>

Sanyo split system air conditioner instruction manual ks2462r (24 pages)

Air Conditioner Sanyo KS2432A Instruction Manual

(24 pages)

Air Conditioner Sanyo KS2432 Instruction Manual

Split system air conditioner cool/fan model (24 pages)

Air Conditioner Sanyo C2432 Installation Instructions Manual

Split system air conditioner (17 pages)

Air Conditioner Sanyo 24KS62R Specifications

Ductless split system air conditioners (3 pages)

Air Conditioner Sanyo 36TS32A Datasheet

Ceiling suspended air conditioner (3 pages)

Air Conditioner Sanyo KS2432A Instruction Manual

(1 page)

Related Content for Sanyo C2432A

KHS0951 Wiring Instructions

Sanyo KHS0951

SAP-KRV9AEH Wiring Instructions For The Outdoor Unit

Sanyo SAP-KRV9AEH

SAP-KRV9AEH Wiring Instructions For The Outdoor Unit

Sanyo SAP-KRV9AEH

SAP-KMRV74EH Wiring Instructions

Sanyo SAP-KMRV74EH

26 series Wiring Instructions

Sanyo 26 series

COOL Wiring Instructions

Sanyo COOL

SAP-CMRV1424EH Wiring Instructions

Sanyo SAP-CMRV1424EH

KS3082 Wiring Instructions

Sanyo KS3082

This manual is also suitable for:

Ks2432Ks2432aKs3032Cl2432aXs3632Ts3632 ... Show all