

Wiring Instructions For Inter-Unit Connections - Sanyo C2432A Installation Instructions Manual

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50

•


[Table of Contents](#)


•

Bookmarks



3-20. Wiring Instructions for Inter-Unit Connections

- (1) 
Insert the inter-unit wiring (according to local codes) into the through-the-wall PVC pipe. Run the wiring toward the indoor side allowing approx. 10 inch to extend from the wall face. (Fig. 65)
- (2)
Route the inter-unit wiring from the back of the indoor unit and pull it toward the front for connection.(Fig. 66, 67)
- (3)
Connect the inter-unit wiring to the corresponding terminals on the terminal plate (Fig. 66, 67) while referring to the wiring diagram.
- (4)
Be sure to secure the wiring with the provided

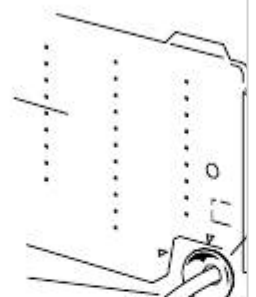

clamp.

How to remove the cover plate

To access the terminal plate inside the indoor unit, follow these steps.

(1) —

Using a Phillips screwdriver, take out the screw on the cover plate. (Fig. 66, 67)

(2)

Remove the cover plate.

KS2432A

Rear panel
Wiring
10 in.

Fig. 3-65

Cover plate

Fig. 3-66

Earth plate

Top of conduit connector

Fig. 3-67

28


S4359249

Wall
Plastic cover
2246_T_I

Terminal plate
2247_T_I

Inter-unit control line wiring

Lock nut
2248_T_I

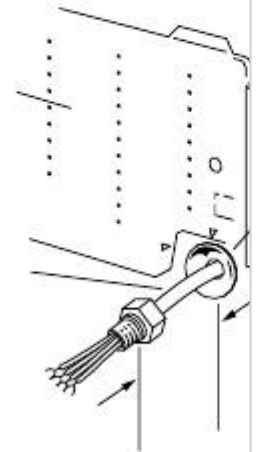

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
25
26
27
28
29
30
31
32

Quick Links:

[Table of Contents](#)

[General](#)

[Indoor Unit](#)

[Outdoor Unit](#)

[Remote Control Unit](#)

Related Manuals for Sanyo C2432A

[Air Conditioner Sanyo 24KLS32A Specification Sheet](#)

Sanyo ductless split system air conditioners specification sheet (3 pages)

[Air Conditioner Sanyo 24XS32A Submittal Sheet](#)

Indoor/outdoor ceiling recessed (4-way) air conditioner (3 pages)

[Air Conditioner Sanyo XS4232 Technical Data And Service Manual](#)

(66 pages)

[Air Conditioner Sanyo KS2432A Technical Data And Service Manual](#)

(64 pages)

[Air Conditioner Sanyo KS2432A Service Manual](#)

Split system (63 pages)

[Air Conditioner Sanyo KS3032 Service Manual](#)

Split system air conditioner (56 pages)

[Air Conditioner Sanyo C3032 Service Manual](#)

Split system air conditioner (54 pages)

[Air Conditioner Sanyo KS2432 Instruction Manual](#)

Split system air conditioner; wall-mounted type ceiling-mounted type recessed type cool/fan model (24 pages)

[Air Conditioner Sanyo KS2432A Instruction Manual](#)

Cool/dry model (24 pages)

[Air Conditioner Sanyo KS2462R Instruction Manual](#)

Sanyo split system air conditioner instruction manual ks2462r (24 pages)

[Air Conditioner Sanyo KS2432A Instruction Manual](#)

(24 pages)

[Air Conditioner Sanyo KS2432 Instruction Manual](#)

Split system air conditioner cool/fan model (24 pages)

[Air Conditioner Sanyo C2432 Installation Instructions Manual](#)

Split system air conditioner (17 pages)

[Air Conditioner Sanyo 24KS62R Specifications](#)

Ductless split system air conditioners (3 pages)

[Air Conditioner Sanyo 36TS32A Datasheet](#)

Ceiling suspended air conditioner (3 pages)

[Air Conditioner Sanyo KS2432A Instruction Manual](#)

(1 page)

Related Content for Sanyo C2432A

[XHS1271 Wiring Instructions For Inter-Unit Connections](#)

Sanyo XHS1271

[XS1872 Wiring Instructions For Inter-Unit Connections](#)

Sanyo XS1872

[KS1852 Wiring Instructions For Inter-Unit Connections](#)

Sanyo KS1852

[18KLS72 Wiring Instructions For Inter-Unit Connections](#)

Sanyo 18KLS72

[18KHS72 Wiring Instructions For Inter-Unit Connections](#)

Sanyo 18KHS72

[09KHS71 Wiring Instructions For Inter-Unit Connections](#)

Sanyo 09KHS71

[XMHS1272 Wiring Instructions For Inter-Unit Connections](#)

Sanyo XMHS1272

[XMS1272 Wiring Instructions For Inter-Unit Connections](#)

Sanyo XMS1272

This manual is also suitable for:

[Ks2432Ks2432aKs3032CI2432aXs3632Ts3632](#) ... [Show all](#)