 

Electrical Wiring; General Precautions On Wiring; Recommended Wire Length And Wire Diameter For Power Supply System; Wiring System Diagram -Sanyo C2432A Installation Instructions Manual

Table of Contents





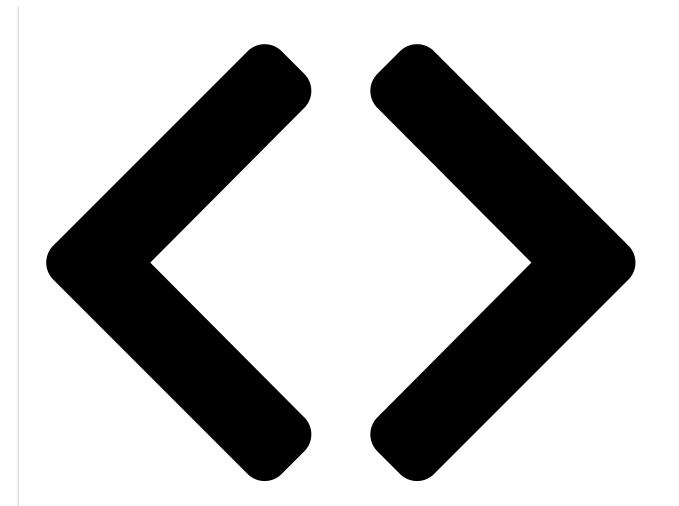

7. Electrical Wiring

7-1. General Precautions on Wiring

(I)

Before wiring, confirm the rated voltage of the unit as shown on its nameplate, then carry out the wiring closely following the wiring diagram.

(2)

Provide a power outlet to be used exclusively for each unit, and a power supply disconnect and circuit breaker for overcurrent protection should be provided in the exclusive line.

(3)

To prevent possible hazards from insulation failure, the unit must be grounded.

(4)

Each wiring connection must be done in accor-							
dance with the wiring system diagram. Wrong							
wiring may cause the unit to misoperate or	1						
become damageu.	」						
(5)							
Do not allow wiring to touch the refrigerant tubi	ing,						
compressor, or any moving parts of the fan.							
(6)							
Unauthorized changes in the internal wiring can							
be very dangerous. The manufacturer will accept							
no responsibility for any damage or misoperation							
that occurs as a result of such unauthorized							
changes.							
7-2. Recommended Wire Length and Wire Diameter for Power Supply System							
Models							
C2432A, CL2432A							
C3032A, CL3032A							
C3632A, CL3632A							
C4232A, CL4232A	L						
*1 Refer to the Wiring System Diagrams (See below	v diagram) for the meaning of "A", "B".						
AWG = American Wire Gauge NOTE							
To access the electrical component box, open the	he air						
intake grille and remove the electrical compone							
cover.							
7-3. Wiring System Diagram							
Outdoor Unit : "C", "CL" models							
Outdoor Unit : "C", "CL" models Single-phase							
Outdoor Unit : "C", "CL" models Single-phase 60 Hz, 208 / 230 V							
Outdoor Unit: "C", "CL" models Single-phase 60 Hz, 208 / 230 V (B)							
Outdoor Unit : "C", "CL" models Single-phase 60 Hz, 208 / 230 V							
Outdoor Unit: "C", "CL" models Single-phase 60 Hz, 208 / 230 V (B) *1 Inter-unit							
Outdoor Unit: "C", "CL" models Single-phase 60 Hz, 208 / 230 V (B) *1 Inter-unit *1 (A) Power Supply							
Outdoor Unit: "C", "CL" models Single-phase 60 Hz, 208 / 230 V (B) 1 Inter-unit (A) Power Supply AGW #14							
Outdoor Unit: "C", "CL" models Single-phase 60 Hz, 208 / 230 V (B) 1 Inter-unit (A) Power Supply AGW #14 69 ft. (AWG #12)							
Outdoor Unit: "C", "CL" models Single-phase 60 Hz, 208 / 230 V (B) 1 Inter-unit (A) Power Supply AGW #14 69 ft. (AWG #12) 101 ft. (AWG #10)							
Outdoor Unit: "C", "CL" models Single-phase 60 Hz, 208 / 230 V (B) 1 Inter-unit (A) Power Supply AGW #14 69 ft. (AWG #12) 101 ft. (AWG #10) 164 ft.							
Outdoor Unit: "C", "CL" models Single-phase 60 Hz, 208 / 230 V (B) 1 Inter-unit (A) Power Supply AGW #14 69 ft. (AWG #12) 101 ft. (AWG #10)							
Outdoor Unit: "C", "CL" models Single-phase 60 Hz, 208 / 230 V (B) *1 Inter-unit *1 (A) Power Supply AGW #14 69 ft. (AWG #12) 101 ft. (AWG #10) 164 ft. 86 ft. (AWG #10) 65 ft. (AWG #10) 38							
Outdoor Unit: "C", "CL" models Single-phase 60 Hz, 208 / 230 V (B) 1 Inter-unit (A) Power Supply AGW #14 69 ft. (AWG #12) 101 ft. (AWG #10) 164 ft. 86 ft. (AWG #10) 65 ft. (AWG #10) 38 (7) Regulations on wire diameters differ from localizations.							
Outdoor Unit: "C", "CL" models Single-phase 60 Hz, 208 / 230 V (B) Inter-unit (A) Power Supply AGW #14 69 ft. (AWG #12) 101 ft. (AWG #10) 164 ft. 86 ft. (AWG #10) 65 ft. (AWG #10) 38 (7) Regulations or wire diameters differ from lot to locality. For field wiring rules, please refer to							
Outdoor Unit: "C", "CL" models Single-phase 60 Hz, 208 / 230 V (B) 1 Inter-unit (A) Power Supply AGW #14 69 ft. (AWG #12) 101 ft. (AWG #10) 164 ft. 86 ft. (AWG #10) 38 (7) Regulations or wire diameters differ from lot to locality. For field wiring rules, please refer to your LOCAL ELEC RICAL CODES before							
Outdoor Unit: "C", "CL" models Single-phase 60 Hz, 208 / 230 V (B) Inter-unit (A) Power Supply AGW #14 69 ft. (AWG #12) 101 ft. (AWG #10) 164 ft. 86 ft. (AWG #10) 38 (7) Regulations or wire diameters differ from loto locality. For field wiring rules, please refer to your LOCAL ELECT RICAL CODES before beginning. You must ensure that installation							
Outdoor Unit: "C", "CL" models Single-phase 60 Hz, 208 / 230 V (B) Inter-unit (A) Power Supply AGW #14 69 ft. (AWG #12) 101 ft. (AWG #10) 164 ft. 86 ft. (AWG #10) 38 (7) Regulations or wire diameters differ from lot locality. For field wiring rules, please refer to your LOCAL ELECT RICAL CODES before beginning. You must ensure that installation complies with all relevant rules and regulations.							
Outdoor Unit: "C", "CL" models Single-phase 60 Hz, 208 / 230 V (B) 1 Inter-unit (A) Power Supply AGW #14 69 ft. (AWG #12) 101 ft. (AWG #10) 164 ft. 86 ft. (AWG #10) 38 (7) Regulations or wire diameters differ from locality. For field wiring rules, please refer to your LOCAL ELECT RICAL CODES before beginning. You must ensure that installation complies with all relevant rules and regulations. (8) To prevent malfunction of the air conditione							
Outdoor Unit: "C", "CL" models Single-phase 60 Hz, 208 / 230 V (B) *1 Inter-unit *1 (A) Power Supply AGW #14 69 ft. (AWG #12) 101 ft. (AWG #10) 164 ft. 86 ft. (AWG #10) 38 (7) Regulations or wire diameters differ from loto locality. For field wiring rules, please refer to your LOCAL ELECT RICAL CODES before beginning. You must ensure that installation complies with all relevant rules and regulations. (8) To prevent malfunction of the air conditione caused by electrical noise, care must be taken							
Outdoor Unit: "C", "CL" models Single-phase 60 Hz, 208 / 230 V (B) Inter-unit (A) Power Supply AGW #14 69 ft. (AWG #12) 101 ft. (AWG #10) 164 ft. 86 ft. (AWG #10) 38 (7) Regulations or wire diameters differ from lot locality. For field wiring rules, please refer to your LOCAL ELECT RICAL CODES before beginning. You must ensure that installation complies with all relevant rules and regulations. (8) To prevent malfunction of the air conditione caused by electrical noise, care must be taken when wiring as follows:							
Outdoor Unit: "C", "CL" models Single-phase 60 Hz, 208 / 230 V (B) *1 Inter-unit *1 (A) Power Supply AGW #14 69 ft. (AWG #12) 101 ft. (AWG #10) 164 ft. 86 ft. (AWG #10) 38 (7) Regulations or wire diameters differ from loto locality. For field wiring rules, please refer to your LOCAL ELECT RICAL CODES before beginning. You must ensure that installation complies with all relevant rules and regulations. (8) To prevent malfunction of the air conditione caused by electrical noise, care must be taken	control						

unit power wiring. G It is recommended that shielding wires or twisted pair wires be inter-unit d installed where it is exposed to the influence of electrical and/or electro-magnetic noise. Power Supply Terminal Base Time Delay (Outdoor Unit) Fuse or Wiring Circuit Capacity Capacity 25 A 30 A 50 A 35 A 50 A Disconnect sw (Field supply) Indoor Unit Outdoor Unit (B) 1 2 2 G G Ground 4 4 L1 L2 G **S4179694** Max. Wire Diameter

AWG #6
(A)
Ground
2258_M_I

Table of Contents

Previous Page Next Page

...

Quick Links:
Table of Contents
General
Indoor Unit
Outdoor Unit
Remote Control Unit
Remote Control Onit

Related Manuals for Sanyo C2432A

Air Conditioner Sanyo 24KLS32A Specification Sheet

Sanyo ductless split system air conditioners specification sheet (3 pages) $\,$

Air Conditioner Sanyo 24XS32A Submittal Sheet

Indoor/outdoor ceiling recessed (4-way) air conditioner (3 pages)

<u>Air Conditioner Sanyo XS4232 Technical Data And Service Manual</u>

(66 pages)

Air Conditioner Sanyo KS2432A Technical Data And Service Manual

(64 pages)

Air Conditioner Sanyo KS2432A Service Manual

Split system (63 pages)

Air Conditioner Sanyo KS3032 Service Manual

Split system air conditioner (56 pages)

Air Conditioner Sanyo C3032 Service Manual

Split system air conditioner (54 pages)

Air Conditioner Sanyo KS2432 Instruction Manual

Split system air conditioner; wall-mounted type ceiling-mounted type recessed type cool/fan model (24 pages)

Air Conditioner Sanyo KS2432A Instruction Manual

Cool/dry model (24 pages)

<u>Air Conditioner Sanyo KS2462R Instruction Manual</u>

Sanyo split system air conditioner instruction manual ks2462r (24 pages)

Air Conditioner Sanyo KS2432A Instruction Manual

(24 pages)

Air Conditioner Sanyo KS2432 Instruction Manual

Split system air conditioner cool/fan model (24 pages)

Air Conditioner Sanyo C2432 Installation Instructions Manual

Split system air conditioner (17 pages)

Air Conditioner Sanyo 24KS62R Specifications

Ductless split system air conditioners (3 pages)

Air Conditioner Sanyo 36TS32A Datasheet

Ceiling suspended air conditioner (3 pages)

Air Conditioner Sanyo KS2432A Instruction Manual

(1 page)

Related Content for Sanyo C2432A

SPW-C256VH Electrical Wiring

Sanyo SPW-C256VH

Big PACi 18 Series Electrical Wiring

Sanyo Big PACi 18 Series

SPW-C0705DZH8 Electrical Wiring

Sanyo SPW-C0705DZH8

SGP-EW120M2G2W Electrical Wiring System Diagram

Sanyo SGP-EW120M2G2W

SPW-X483GH56 Electrical Wiring

Sanyo SPW-X483GH56

26 series Electrical Wiring

Sanyo 26 series

SPW-C1155DXHN8 Electrical Wiring

Sanyo SPW-C1155DXHN8

SPW-CR365GXH56 Electrical Wiring

Sanyo SPW-CR365GXH56

This manual is also suitable for:

Ks2432Ks2432aKs3032Cl2432aXs3632Ts3632 ... Show all