

How To Connect Wiring To The Terminal - Sanyo C2432A Installation Instructions Manual

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18


19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50

•

[Table of Contents](#)

•


Bookmarks

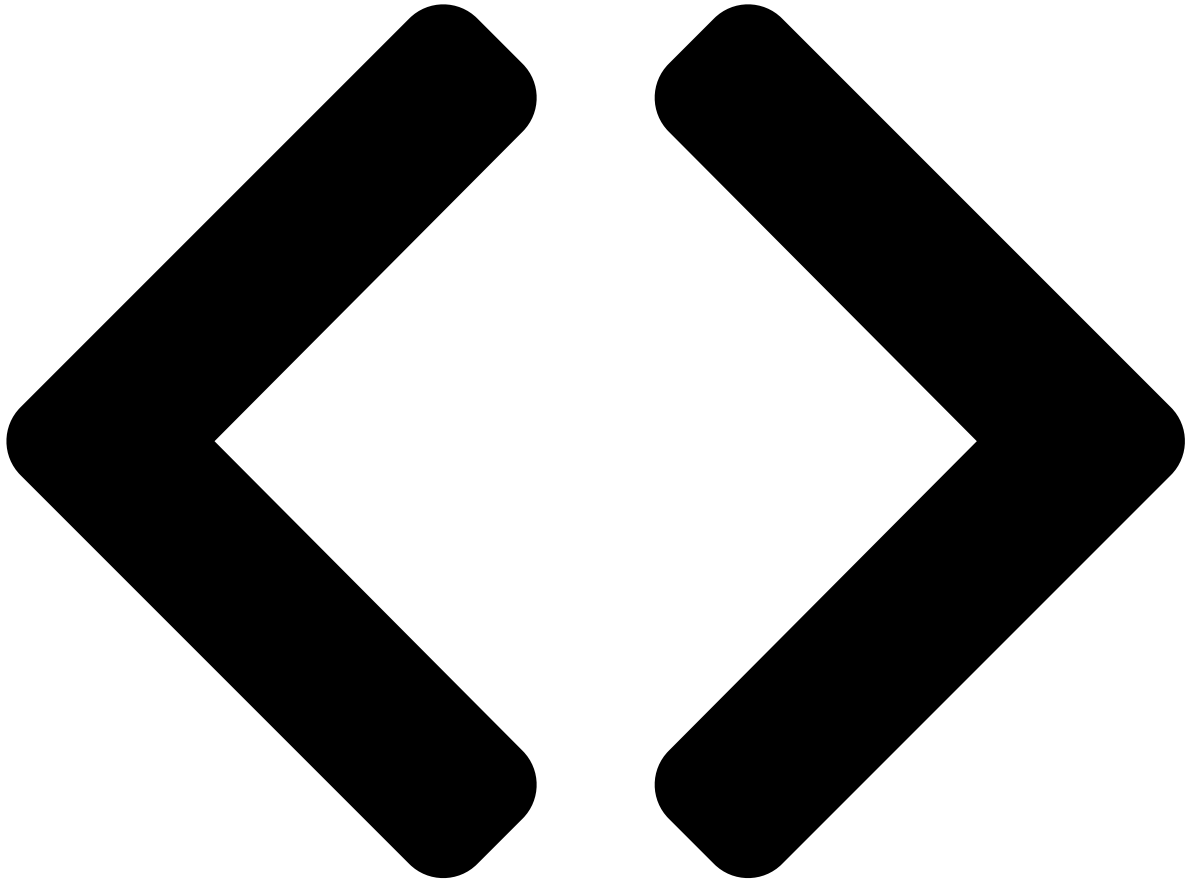

Loose wiring may cause the terminal to overheat or result in unit malfunction. A fire hazard may also exist.

Therefore, ensure that all wiring is tightly connected.

 When connecting each power wire to the corresponding terminal, follow the instructions on "How to connect wiring to the terminal" and fasten the wire securely with the fixing screw of the terminal.



WARNING

7-5. How to Connect Wiring to the Terminal

For solid core wiring (or F-cable)

- (1) Cut the wire end with a wire cutter or wire-cutting pliers, then strip the insulation to expose the solid wire about 1 in.. (Fig. 7-1)
- (2) Using a screwdriver, remove the terminal




screw(s) on the terminal plate.

(3) Using the pliers, bend the solid wire to form a loop suitable for the terminal screw.

(4) Shape the wire loop properly, position it on the terminal plate and fix it securely with the terminal screw using a screwdriver.

For stranded wiring

(1) Cut the wire end with a wire cutter or wire-cutting pliers, then strip the insulation to expose the stranded wiring about 3/8 in. 

(2) Using a Phillips head screwdriver, remove the terminal screw(s) on the terminal plate.

(3) Using a ring connector fastener or pliers, securely clamp each stripped wire end with a ring connector. (Fig. 7-2)

(4) Place the ring connector, and replace and tighten the removed terminal screw using a screwdriver.

(Fig. 7-3)

Solid wire

Insulation

Fig. 7-1

Stranded wire

Fig. 7-2

Special

Screw

washer

Ring connector

Terminal plate

Wire

Fig. 7-3

40

S4179694

Loop

1004_M_I

Ring

pressure

terminal

1106_M_I

Screw and



Special washer

Ring

connector

Wire

012001

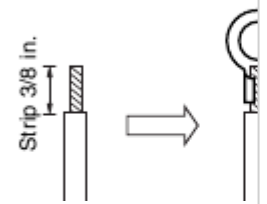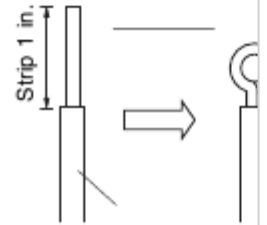

[Previous Page](#)
[Next Page](#)

1
...
37
38
39
40
41
42
43
44

Quick Links:

[Table of Contents](#)

[General](#)

[Indoor Unit](#)

[Outdoor Unit](#)

[Remote Control Unit](#)

Related Manuals for Sanyo C2432A

[Air Conditioner Sanyo 24KLS32A Specification Sheet](#)

Sanyo ductless split system air conditioners specification sheet (3 pages)

[Air Conditioner Sanyo 24XS32A Submittal Sheet](#)

Indoor/outdoor ceiling recessed (4-way) air conditioner (3 pages)

[Air Conditioner Sanyo XS4232 Technical Data And Service Manual](#)

(66 pages)

[Air Conditioner Sanyo KS2432A Technical Data And Service Manual](#)

(64 pages)

[Air Conditioner Sanyo KS2432A Service Manual](#)

Split system (63 pages)

[Air Conditioner Sanyo KS3032 Service Manual](#)

Split system air conditioner (56 pages)

[Air Conditioner Sanyo C3032 Service Manual](#)

Split system air conditioner (54 pages)

[Air Conditioner Sanyo KS2432 Instruction Manual](#)

Split system air conditioner; wall-mounted type ceiling-mounted type recessed type cool/fan model (24 pages)

[Air Conditioner Sanyo KS2432A Instruction Manual](#)

Cool/dry model (24 pages)

[Air Conditioner Sanyo KS2462R Instruction Manual](#)

Sanyo split system air conditioner instruction manual ks2462r (24 pages)

[Air Conditioner Sanyo KS2432A Instruction Manual](#)

(24 pages)

[Air Conditioner Sanyo KS2432 Instruction Manual](#)

Split system air conditioner cool/fan model (24 pages)

[Air Conditioner Sanyo C2432 Installation Instructions Manual](#)

Split system air conditioner (17 pages)

[Air Conditioner Sanyo 24KS62R Specifications](#)

Ductless split system air conditioners (3 pages)

[Air Conditioner Sanyo 36TS32A Datasheet](#)

Ceiling suspended air conditioner (3 pages)

[Air Conditioner Sanyo KS2432A Instruction Manual](#)

(1 page)

Related Content for Sanyo C2432A

[CLM1972 How To Connect Wiring To The Terminal](#)

Sanyo CLM1972

[CH2442 How To Connect Wiring To The Terminal](#)

Sanyo CH2442

[PNR-XS2432 How To Connect Wiring To The Terminal](#)

Sanyo PNR-XS2432

[C4272R S/C How To Connect Wiring To The Terminal](#)

Sanyo C4272R S/C

[SAP-KRV9AEH Connect The Indoor And Outdoor Wiring](#)

Sanyo SAP-KRV9AEH

[SPW-C0705DZH8 How To Connect Wiring To The Terminal](#)

Sanyo SPW-C0705DZH8

[SPW-CR365GXH56 How To Connect Wiring To The Terminal](#)

Sanyo SPW-CR365GXH56

[C4272R How To Connect Wiring To The Terminal](#)

Sanyo C4272R

This manual is also suitable for:

[Ks2432Ks2432aKs3032CI2432aXs3632Ts3632 ...](#) [Show all](#)