
I Pump Down - Sanyo C2432A Installation Instructions Manual

Table of Contents

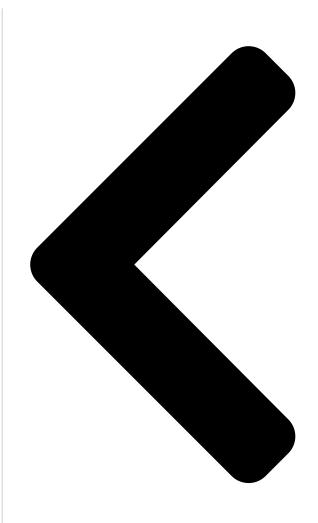





Pump Down

Pump down means collecting all refrigerant gas in the system back into the author unit without losing ant of the gas. Pump down is used when the unit is to be moved or before servicing the refrigerant circuit.

Pump down procedure
Be sure to carry out pump
CAUTION
down with the unit in cooling
mode.

- (1) Connect the low pressure side (wide tube valve service port) charging hose of the manifold valve to the service port (B) on the wide tube service valve.
- (2) Using a hex wrench, turn the narrow tube service valve clockwise all the way to close the service valve.



(3) Press the operation button and start cooling operation.

(4) When the law pressure gauge reading falls to 1 to 0.5 kg/¢m

2____

 $(\overline{14.2}$ to 7.1 psi), fully close the wide tube valve stem with a standard screwdriver. Then quickly stop the unit.

- (5) Disconnect all gauges and hoses, and replace the bonnets and the valve caps as they were previously.
- (6) Purge all air remaining inside the tubing before operating the air conditioner.

50 54179694

Table of Contents



Previous Page

1

...

47

48

49

50

Quick Links:

Table of Contents

General

Indoor Unit

Outdoor Unit

Remote Control Unit

Related Manuals for Sanyo C2432A

Air Conditioner Sanyo 24KLS32A Specification Sheet

Sanyo ductless split system air conditioners specification sheet (3 pages)

Air Conditioner Sanyo 24XS32A Submittal Sheet

Indoor/outdoor ceiling recessed (4-way) air conditioner (3 pages)

Air Conditioner Sanyo XS4232 Technical Data And Service Manual

(66 pages)

Air Conditioner Sanyo KS2432A Technical Data And Service Manual

(64 pages)

Air Conditioner Sanyo KS2432A Service Manual

Split system (63 pages)

Air Conditioner Sanyo KS3032 Service Manual

Split system air conditioner (56 pages)

Air Conditioner Sanyo C3032 Service Manual

Split system air conditioner (54 pages)

Air Conditioner Sanyo KS2432 Instruction Manual

Split system air conditioner; wall-mounted type ceiling-mounted type recessed

type cool/fan model (24 pages)

Air Conditioner Sanyo KS2432A Instruction Manual

Cool/dry model (24 pages)

Air Conditioner Sanyo KS2462R Instruction Manual

Sanyo split system air conditioner instruction manual ks2462r (24 pages)

Air Conditioner Sanyo KS2432A Instruction Manual

(24 pages)

Air Conditioner Sanyo KS2432 Instruction Manual

Split system air conditioner cool/fan model (24 pages)

Air Conditioner Sanyo C2432 Installation Instructions Manual

Split system air conditioner (17 pages)

Air Conditioner Sanyo 24KS62R Specifications

Ductless split system air conditioners (3 pages)

Air Conditioner Sanyo 36TS32A Datasheet

Ceiling suspended air conditioner (3 pages)

Air Conditioner Sanyo KS2432A Instruction Manual

(1 page)

Related Content for Sanyo C2432A

SAP-URV96EH Pump Down

Sanyo SAP-URV96EH

SAP-CMRV3656EH I Pump Down

Sanyo SAP-CMRV3656EH

SPW-C256VH Caution For Pump Down

Sanyo SPW-C256VH

KHS0951 Pump Down

Sanyo KHS0951

Big PACi 18 Series Caution For Pump Down
Sanyo Big PACi 18 Series
SAP-KRV9AEH Pump Down
Sanyo SAP-KRV9AEH
SAP-KRV9AEH Pump Down
Sanyo SAP-KRV9AEH
SPW-C0705DZH8 Caution For Pump Down
Sanyo SPW-C0705DZH8

This manual is also suitable for:

Ks2432Ks2432aKs3032Cl2432aXs3632Ts3632 ... Show all