



# TOSHIBA

Toshiba BMS-IFKX0AWR-E Installation Manual

Kn interface



1  
2  
3  
4

--



•

## Bookmarks

[Download this manual](#)

## Quick Links



Installation Manual

KN Interface **TOSHIBA**

Model name: **Leading Innovation >>>**

**BMS-IFKX0AWR-E**





[Next Page](#)

1  
2  
3  
4

## Related Manuals for Toshiba BMS-IFKX0AWR-E

[Recording Equipment Toshiba Black Pear Installation And User Manual](#)

Bms interface for toshiba air-conditioning (40 pages)

[Recording Equipment Toshiba BMS-IFWH4E2 Installation Manual](#)

Energy monitoring relay interface (12 pages)

[Recording Equipment Toshiba BMS-IWF0320E Installation Manual](#)

Smart device control interface (15 pages)

[Recording Equipment Toshiba BMS-IFMB0AWR-E Installation Manual](#)

Mb interface (4 pages)

[Recording Equipment Toshiba BMS-IFDD02E2 Installation Manual](#)

Digital input/output relay interface (12 pages)

[Recording Equipment Toshiba BMS-IFMB1280U-E Installation Manual](#)

(16 pages)

[Recording Equipment Toshiba BMS-IFMB1280U-E Installation Manual](#)

Modbus (22 pages)

[Recording Equipment Toshiba BMS-IFBN1280U-E Installation Manual](#)

Central control device for commercial use bn interface (20 pages)

[Recording Equipment Toshiba BMS-IFBN1280U-E Installation Manual](#)

Bn interface (52 pages)

[Recording Equipment Toshiba BMS-IFDD03E Installation Manual](#)

(44 pages)

[Recording Equipment Toshiba TCB-IFMB641TLE Installation Manual](#)

Modbus interface (12 pages)

[Recording Equipment Toshiba ESTiA Owner's Manual](#)

Wireless interface for air to water heat pump (20 pages)

[Recording Equipment Toshiba GR 200 Series Instruction Manual](#)

Interface unit (22 pages)

[Recording Equipment Toshiba RAV-DXC010 Installation Manual](#)

Lc dx interface (28 pages)

[Recording Equipment Toshiba TCS-NET Setting Tool Manual](#)

Tcs-net general purpose interface (12 pages)

[Recording Equipment Toshiba TCS-NET Service Manual](#)

General purpose interface (38 pages)

## Summary of Contents for Toshiba BMS-IFKX0AWR-E

[Page 1](#) Installation Manual KN Interface Model name: BMS-IFKX0AWR-E English...

[Page 2](#) • Follow the instructions on the user's manual for configuring and commissioning the interface. See below how to obtain the user's manual and the ETS database. NOTE The cable used for connection of BMS-IFKX0AWR-E to A B bus can be any two-core cabtyre cable, the maximum distance for bus A B is 50 meters, consult the manual of the Hydro unit for more details.

[Page 3](#) KN Interface Installation Manual Dimensions External dimensions Wall mount During installation, secure the metal plate and mold case (bottom) together with screws. After wiring,

attach the mold case (top), install the metal plate cover, and secure with a screw. Secure with screws Mold case (bottom) (2 locations) Mold case (top)

[Page 4](#) TOSHIBA CARRIER EUROPE S.A.S Route de Thil 01120 Montluel France  
DEB2019101-1...