



Sanyo SI-10T3SDIA Series Operating Manual

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23

•

Bookmarks

[Download this manual](#)

Quick Links



Model No.

Indoor Unit

SI-10T3SDIA series

SI-10T5SDIA series

SI-15T3SDIA series

Outdoor Unit

SO-10T3SDIA series

SO-10T5SDIA series

SO-15T3SDIA series

ACI2PR22201

SA

Operating Instructions

Air Conditioner

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Sanyo SI-10T3SDIA Series

[Air Conditioner Sanyo SI-10T3SCIC Series Operating Instructions Manual](#)

Indoor/outdoor unit (24 pages)

[Air Conditioner Sanyo SPW-C1155DXHN8 Technical Data & Service Manual](#)

2-way eco-i multi system (242 pages)

[Air Conditioner Sanyo SAP241KC Installation Instructions Manual](#)

(14 pages)

[Air Conditioner Sanyo SA-97P Instruction Manual](#)

Room air conditioner (21 pages)

[Air Conditioner Sanyo SAP-CRV93EHN Technical & Service Manual](#)

Dc inverter split system air conditioner (77 pages)

[Air Conditioner Sanyo SPW-X253G56 Service Manual](#)

Split system (72 pages)

[Air Conditioner Sanyo SAP-KRV96EH Technical & Service Manual](#)

Dc inverter split system air conditioner (65 pages)

[Air Conditioner Sanyo SAP-URV96EH Installation Instructions Manual](#)

Split system (47 pages)

[Air Conditioner Sanyo SPW-X483GH56 Installation Instruction](#)

Eco multi system air conditioner (91 pages)

[Air Conditioner Sanyo SPW-D253GH56 Service Manual](#)

Split system (108 pages)

[Air Conditioner Sanyo SPW-C0705DZH8 Technical Data Manual](#)

3-way eco-i multi system 5 series (703 pages)

[Air Conditioner Sanyo SAP-K92A Technical & Service Manual](#)

Multi-split system (39 pages)

[Air Conditioner Sanyo SAP-KR165QS5 Installation Instructions Manual](#)

Split system (54 pages)

[Air Conditioner Sanyo SPW-CR1503GDYH8 Technical Data & Service Manual](#)

W-eco multi system series (377 pages)

[Air Conditioner Sanyo SAP- FR99EH Technical Data & Service Manual](#)

Split system air conditioner (35 pages)

[Air Conditioner Sanyo SAP-K71GJA Technical & Service Manual](#)

Split system air conditioner (81 pages)

Summary of Contents for Sanyo SI-10T3SDIA Series

[Page 1](#) Model No. Indoor Unit Outdoor Unit SI-10T3SDIA series SO-10T3SDIA series
SI-10T5SDIA series SO-10T5SDIA series SI-15T3SDIA series SO-15T3SDIA series ACI2PR22201...

[Page 2](#) • Please note that the indication is on display to start the unit. 3 Select the desired temperature • Selection range: 16 °C ~ 30 °C. • Operating the unit within the recommended temperature range may save energy. COOL: 24 °C ~ 28 °C. DRY : 1 °C ~ 2 °C lower than room

temperature.

[Page 3](#) Emergency operation key....13-14 16-18 • Remote control • AAA or R03 batteries • Remote control holder TEMP • Screws for remote control MODE AIR SWING holder GLACIER FAN SPEED • PM 2.5 Filter SLEEP DISPLAY CLEAN CANCEL CHECK LOCK RESET...

[Page 6: Safety Precautions](#)

Safety precautions Prevent water leakage by ensuring drainage 2. Servicing 2-1. Service personnel pipe is: • Any qualified person who is involved with - Connected properly, working on or breaking into a refrigerant - Kept clear of gutters and containers, or circuit should hold a current valid certificate - Not immersed in water from an industry-accredited assessment...

[Page 10](#) TEMP MODE AIR SWING GLACIER FAN SPEED SLEEP DISPLAY CLEAN CANCEL CHECK LOCK RESET...

[Page 12](#) FAULT DETAILS LIGHT DISPLAY FLASH H 00 No fault Outdoor EEPROM fault H 11 Indoor to Outdoor communication fault F9 3 Compressor starting abnormal Compressor out-of-step abnormal IPM module fault Compressor shell temperature overheat protection H 15 Compressor discharge temperature sensor fault Compressor Suction temperature sensor fault H 28 Outdoor condenser temperature sensor fault...

[Page 13](#) To select operation mode AUTO - For your convenience Unit run with optimised settings. You can change the temperature according to your comfort. Remote control COOL - To enjoy cool air display To reduce power consumption during COOL mode, Remote control use curtains to screen off sunlight and outdoor heat.

[Page 14: Operation Conditions](#)

To set the timer To select fan speed To turn ON and OFF the unit at a preset times. (Remote control display) AUTO QUIET (Low) (Medium) (High) • For AUTO, the indoor fan speed is automatically adjusted according to the operation mode. CANCEL To adjust airflow direction (Remote control display)

[Page 19: Testing Guidelines](#)

BEE Regulation Testing Guidelines Cooling Capacity Test Method Cooling Capacity Test Method QUIET CLEAN (For Full Load) QUIET CLEAN (For Half Load)

[Page 20](#) Do's & Don't: E-waste (Management) Amendment Rules 2018 S.No. Do's Don't All electrical and electronic products are required The product should not be opened by the User to be handed over only to the Authorized himself / herself, but only by authorized service recycler.

[Page 23](#) ACI2PR22201 ACI2PR22201_R0...

This manual is also suitable for:

SI-10t5sdia series SI-15t3sdia series So-10t3sdia series So-10t5sdia series So-15t3sdia series