



# **TOSHIBA**

Toshiba EM128A2EC-ESHA0L Instruction Manual



1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34

--

---

•

[Table of Contents](#)

•

## Bookmarks

[Download this manual](#)

## Quick Links





MICROWAVE OVEN  
INSTRUCTION MANUAL  
**TOSHIBA**  
EM128A2EC-ESHA0L

Please review this instruction manual before operating.

## Table of Contents

[Next Page](#)

1  
2  
3  
4  
5

## Related Manuals for Toshiba EM128A2EC-ESHA0L

[Microwave Oven Toshiba EM245A5C-BS Instruction](#)

Microwave solo oven (32 pages)

[Microwave Oven Toshiba EM245A5C-BS Instructions Manual](#)

Solo oven (52 pages)

[Microwave Oven Toshiba EM131A5C-BS Instruction Manual](#)

Microwave solo oven (32 pages)

[Microwave Oven Toshiba EM131A5C-BS Instruction Manual](#)

Microwave solo oven (40 pages)

[Microwave Oven Toshiba EM925A5A-BS Instructions Manual](#)

Microwave solo oven (33 pages)

[Microwave Oven Toshiba EM925A5A-BS User Manual](#)

(47 pages)

[Microwave Oven Toshiba EM131A5C-SS Instruction Manual](#)

Microwave solo oven (28 pages)

[Microwave Oven Toshiba EM925A2EA-PS0A Instruction Manual](#)

(32 pages)

[Microwave Oven Toshiba EM9P022XC Instruction Manual](#)

(36 pages)

[Microwave Oven Toshiba EM925A5A-SS Instruction Manual](#)

Microwave solo oven (40 pages)

[Microwave Oven Toshiba EM925A5A-SS Instructions Manual](#)

Microwave solo oven (32 pages)

[Microwave Oven Toshiba EM245A5C-SS Instructions Manual](#)

Microwave solo oven (32 pages)

[Microwave Oven Toshiba EM245A2XC-PV Instruction Manual](#)

Microwave solo oven (28 pages)

[Microwave Oven Toshiba EC042A5C-BS Instruction Manual](#)

Microwave convection oven (44 pages)

[Microwave Oven Toshiba EC042A5C-BS Instructions Manual](#)

Microwave convection oven (37 pages)

[Microwave Oven Toshiba EC042A5C-SS Instructions Manual](#)

Microwave convection oven (36 pages)

## Summary of Contents for Toshiba EM128A2EC-ESHA0L

[Page 1](#) MICROWAVE OVEN INSTRUCTION MANUAL EM128A2EC-ESHA0L Please review this instruction manual before operating.

### [Page 2: Table Of Contents](#)

CONTENTS PRODUCT SAFETY Precautions to avoid possible exposure to excessive microwave energy Important safety instructions Grounding instructions Radio interference Utensils Materials you can use in microwave oven Materials can not be used in microwave oven PRODUCT SETTING Setting up your oven INSTRUCTION FOR USE Before using for the first time Operation...

[Page 3](#) 12. Inquiring Function 13. Wifi Function 14. Special Auto Menu 15. Auto Menu  
MAINTENANCE Trouble shooting One year limited warranty BEFORE OPERATING THIS PRODUCT,  
READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS. NOTE BE SURE TO SAVE THIS  
BOOKLIST FOR FUTURE REFERENCE. The hardware and software after-sale service can be  
received from the authorized dealer.

#### [Page 4: Product Safety](#)

(2). HINGES AND LATCHES (broken or loosened) (3). DOOR SEALS AND SEALING SURFACES (d).  
The oven should not be adjusted or repaired by anyone except properly qualified service  
personnel. SPECIFICATIONS MODEL EM128A2EC-ESHA0L 120 V~ 60 Hz RATED VOLTAGE  
MICROWAVE INPUT 1550W MICROWAVE OUTPUT...

#### [Page 5: Important Safety Instructions](#)

IMPORTANT SAFETY INSTRUCTIONS When using electrical appliances basic safety precautions  
should be followed, including the following. To reduce the risk of burns, electric shock, fire,  
injury to persons or WARNING exposure to excessive microwave energy. Read all instructions  
before using When cleaning surfaces of door the appliance.

[Page 6](#) IMPORTANT SAFETY INSTRUCTIONS Oversized food or oversized metal Liquids, such as  
water, coffee, or utensils should not be inserted in tea are able to overheat beyond a  
microwave/toaster oven as they may the boiling point without create a fire or risk of electric  
shock. appearing to be boiling.

[Page 7](#) IMPORTANT SAFETY INSTRUCTIONS Do not let cord hang over edge of Use this  
appliance only for its table or counter. intended use as described in the manual. Do not use  
corrosive chemicals or vapors in this appliance. This type Do not use paper products when of  
oven is specifically designed to appliance is operated in the toaster heat, cook or dry food.

#### [Page 8: Grounding Instructions](#)

GROUNDING INSTRUCTIONS This appliance must be grounded. In the event of an electrical short  
circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric  
current. This appliance is equipped with a cord having a grounding wire with a grounding plug.  
The plug must be plugged into an outlet that is properly installed and grounded.

#### [Page 9: Radio Interference](#)

RADIO INTERFERENCE 1. Operation of the microwave oven may cause interference to your  
radio, TV or similar equipment. 2. When there is interference, it may be reduced or eliminated  
by taking the following measures: (1). Clean door and sealing surface of the oven. (2).

#### [Page 10: Materials You Can Use In Microwave Oven](#)

MATERIALS YOU CAN USE IN MICROWAVE OVEN UTENSILS REMARKS Follow manufacturer's  
instructions. The bottom of browning dish must be at least 3/16 inch (5mm) above the  
turntable. Incorrect usage may cause Browning dish the turntable to break. Microwave-safe  
only. Follow manufacturer's instructions. Do not use cracked or chipped dishes.

[Page 11](#) MATERIALS YOU CAN USE IN MICROWAVE OVEN UTENSILS REMARKS Microwave-safe  
only. Follow the manufacturer's instructions. Should be labeled "Microwave Safe". Some plastic  
containers soften, as the food inside gets hot. "Boiling bags" and tightly closed plastic bags  
should be Plastic slit, pierced or vented as directed by package.

#### [Page 12: Materials Can Not Be Used In Microwave Oven](#)

MATERIALS CAN NOT BE USED IN MICROWAVE OVEN UTENSILS REMARKS May cause arcing.  
Transfer food into microwave-safe dish. Aluminum tray May cause arcing. Transfer food into  
microwave-safe dish. Food carton with metal handle Metal shields the food from microwave  
energy. Metal trim may cause arcing.

#### [Page 13: Product Setting](#)

PRODUCT SETTING SETTING UP YOUR OVEN NAMES OF MICROWAVE OVEN PARTS AND  
ACCESSORIES Remove the oven and all materials from the carton and oven cavity. Glass  
turntable Instruction Manual A. Control panel E. Door assembly B. Glass turntable F. Observation  
window C.

[Page 14](#) **SETTING UP YOUR OVEN TURNTABLE INSTALLATION** Cleaning the cooking compartment and putting the turntable in place. For new installations, make sure all packaging and shipping tape has been removed from the turntable shaft. Before using the appliance to prepare food for the first time, you will need to put the turntable in place correctly.

[Page 15](#) **COUNTERTOP INSTALLATION** Remove all packing material and accessories. Examine the oven for any damage such as dents or broken door. Do not install if oven is damaged. Cabinet: Remove any protective film found on the microwave oven cabinet surface. Do not remove the light brown Mica cover that is attached to the oven cavity to protect the magnetron.

### [Page 16: Instruction For Use](#)

**INSTRUCTION FOR USE BEFORE USING FOR THE FIRST TIME** It is normal that the stove may produce unpleasant odors when it is used for the first time. This section tells you what you need to do before using your microwave to prepare food for the first time.

### [Page 17: Operation](#)

OPERATION CONTROL PANEL AND FEATURES...

### [Page 18: Power Levels](#)

1. **POWER LEVELS** Ten power levels are available. LEVEL POWER DISPLAY 100% P100 2. **CLOCK SETTING** When the microwave oven is plugged into an outlet, "0:00" will display. Press Clock once. Press number keys to set the hour figures, it should be within 1:00~12:59.

### [Page 19: Kitchen Timer](#)

3. **KITCHEN TIMER** When the microwave oven is plugged into an outlet, "0:00" will display. Timer Press Timer once. Press number keys to set the time, it should be within 00:01~99:99. Press to start counting down. • The Kitchen Timer setting is different from the Clock setting; it is simply a timer.

### [Page 20: Defrost](#)

Press number keys to set the power level. Press to start cooking. • Press to increase the cook time by 30 seconds during cooking. NOTE 5. **DEFROST** Press Auto Defrost repeatedly to choose the defrost menu, "dEF1", "dEF2", "dEF3" are available. Press number keys to set the defrost weight. it should be within 2~96 Oz.

### [Page 21: Multi-Stage Cooking](#)

6. **MULTI-STAGE COOKING** Press Auto Defrost twice, "dEF2" will display. Press number keys to set the defrost weight, it should be within 2~96 Oz. Press Power Level once, "PL10" will display. Press number keys to set the power level. Press to start cooking. •...

### [Page 22: Memory Function](#)

7. **MEMORY FUNCTION** Press Memory to program and choose up to three cooking procedures. Each procedure will be indicated by 1, 2 or 3 in the display. Press to start cooking. two cooking stages can be set for each procedure. To program a procedure, follow the steps listed below.

### [Page 23: Speed Cooking](#)

• Press "Memory " to save the procedure. Oven beeps once. • To choose the procedure from the memory list, press "Memory" twice. Screen will display "2". • Press to start the procedure. • "Defrost " and "Auto Cook " cannot be set in memory function.

### [Page 24: Silent Mode](#)

9. **Silent mode** To activate the mute mode: In waiting state, press and hold "8" for 3 seconds. A long beep will sound. When you press the keys, it does not make a sound. To deactivate the mute mode: In silent mode, press and hold "8" for 3 seconds. A long beep will sound.

[Page 25](#) 12. **INQUIRING FUNCTION** When oven is cooking or in paused mode, press Clock, the current time will appear for three seconds in the display. 13. **WIFI CONNECTION** Connect the network Press and hold " " for 3 seconds, till a beep sounds, "AP" and flashing " "...

[Page 26](#) 13. **SPECIAL AUTO MENU** Press the desired menu key to choose correspond menu.

Press to start cooking. MENU CHART WEIGHT/ MENU DISPLAY POWER LEVEL PORTION REHEAT  
SC-1 8-32 Oz P100 P100 FROZEN PIZZA SC-2 6-12 Oz FROZEN ENTREES SC-3 8-32 Oz P100  
P100 BAKED POTATO...

[Page 27](#) 14. AUTO MENU Press Menu repeatedly to choose the menu. Press to start confirm  
the menu. Press number keys to set the type of weight (For example:Press"1"to choose the first  
weight of the menu) Press to start cooking. MENU CHART WEIGHT/ MENU DISPLAY...

[Page 28](#) MENU CHART WEIGHT/ MENU DISPLAY POWER LEVEL PORTION 1 STICH MELT-  
BUTTER 2 STICHS P100 /MARGARINE 3 STICHS 4 Oz MELT-CHOCOLATE 8 Oz 8 Oz MELT-CHEESE  
16 Oz 5 Oz P100 MELT-MARSHMALLOWS 10 Oz 1 STICH SOFTEN-BUTTER 2 STICHS 3 STICHS 6  
Oz SOFTEN-ICE CREAM P100...

[Page 29](#) MENU CHART WEIGHT/ MENU DISPLAY POWER LEVEL PORTION 1 PIECE 2 PIECES 3  
PIECES CUSTOM COOK-FROZEN A-11 4 PIECES ROLL/MUFFIN-REHEAT 5 PIECES 6 PIECES 1 CUP  
P100 CUSTOM COOK A-12 2 CUPS -BEVERAGE CUSTOM COOK A-13 0.5LB-2.0LB -CHICKEN  
PIECES 20 Oz CUSTOM COOK-OATMEAL A-14 P50/P100...

[Page 30](#) CLEANING With good care and cleaning, your appliance will retain its appearance  
and remain fully functioning for a long time to come. We will explain here how you should  
correctly care for and clean your appliance. • Scratched glass in the appliance door may  
develop into a crack. Do not use a glass scraper, sharp or abrasive cleaning aids or detergents.

[Page 31](#) APPLIANCE FRONT WITH STAINLESS STEEL Hot soapy water: Clean using a dish cloth  
and then dry with a soft cloth. Remove splashes and patches of limescale, grease, starch and  
albumin immediately. Corrosion can form under these patches or splashes. Do not use glass  
cleaners or metal or glass scrapers for cleaning.

[Page 32](#) MAINTENANCE TROUBLE SHOOTING Check your problem by using the chart below  
and try the solutions for each problem. If the microwave oven still does not work properly,  
contact the nearest authorized service center. TROUBLE POSSIBLE CAUSE POSSIBLE REMEDY a.  
Electrical cord for oven is not a.

[Page 33](#) If service is required during the warranty period, properly pack your unit. We  
recommend using the original carton and packing materials. If additional assistance is needed,  
please contact customer assistance at: [customer care@us.toshiba-lifestyle.com](mailto:customer care@us.toshiba-lifestyle.com) 855-204-5313  
Midea America Corp. expressly disclaims all responsibility for consequential damages or  
incidental losses caused by use of the appliance.

[Page 34](#) #DetailsMatter [Customer care@us.toshiba-lifestyle.com](mailto:Customer care@us.toshiba-lifestyle.com) 855-204-5313...