

Using The Set Rating Feature; Mpa Rating Blocking (Independent Rating System For Movies) - Toshiba 36HF72 Owner's Manual

1

2

3

4

Table Of Contents

5

6

7

8

9

10

11

12

13

 
14

15

16

17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47



•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks



Using the SET RATING feature (V-Chip control)

Some TV programs and movies include signals that classify the content of the program (dialog, language, sex, violence). The

SET RATING feature in the V-CHIP CONTROL menu detects these signals and blocks programs according to your rating selections.

This feature includes blocking for MPAA, YOUTH TV, and TV ratings, as described below and on the next page.

MPAA rating blocking

(Independent rating system for movies)

To enable MPAA rating blocking and select the level of blocking:

1. Press MENU, and then press x or • until the SET UP menu appears.
2. Press y or z to highlight V-CHIP CONTROL, and then press •. The PIN code entry screen opens.
3. Press the Channel Numbers (0-9) to enter your 4-digit PIN code (see page 29). The V-CHIP CONTROL menu

Using the SET RATING feature (V-Chip control)

Some TV programs and movies include signals that classify the content of the program (dialog, language, sex, violence). The SET RATING feature in the V-CHIP CONTROL menu detects these signals and blocks programs according to your rating selections. This feature includes blocking for MPAA, YOUTH TV, and TV ratings, as described below and on the next page.

MPAA rating blocking

(Independent rating system for movies)

To enable MPAA rating blocking and select the level of blocking:

1. Press MENU, and then press ◀ or ▶ until the SET UP

Note:

The V-Chip function U.S. V-Chip system (Puce-V) is



opens.

4. Press y or z to highlight ENABLE BLOCKING.

5. Press x or • to select "Y" to enable blocking.

Note: The ENABLE BLOCKING setting does not affect the BLOCK CHANNEL feature.

6. Press y or z to highlight SET RATING, and then

press • to open the SET RATING menu.

7. Press y or z to highlight MPA A RATING.

8. Press • to block ("X") or x to unblock ("✓").

Using the SET RATING feature (V-Chip control)
 Some TV programs and movies include signals that classify the content of the program (dialog, language, sex, violence). The SET RATING feature in the V-CHIP CONTROL menu detects these signals and blocks programs according to your rating selections. This feature includes blocking for MPAA, YOUTH TV, and TV ratings, as described below and on the next page.

Note:

The V-Chip function is only available for the U.S. V-Chip system. The Canadian V-Chip system (Puce-V) is not supported.

SET UP
 ENABLE BLOCKING: [Y] N
 SET RATING
 SET BLOCKING OPTIONS
 NEW PIN CODE
 BLOCK CHANNEL
 VIDEO LOCK
 OFF
 GAME TIMER
 OFF
 []
 []
 []
 MOVE
 SELECT

**MPAA rating blocking
 (Independent rating system for movies)**

To enable MPAA rating blocking and select the level of blocking:

1. Press MENU, and then press ◀ or ▶ until the SET UP menu appears.
2. Press ▲ or ▼ to highlight V-CHIP CONTROL, and then press ▶. The PIN code entering screen opens.
3. Press the Channel Numbers (0–9) to enter your 4-digit PIN code (see page 29). The V-CHIP CONTROL menu opens.
4. Press ▲ or ▼ to highlight ENABLE BLOCKING.

5. Press ▶ or ◀ to select "Y" to enable blocking.
Note: The ENABLE BLOCKING setting does not affect the BLOCK CHANNEL feature.

6. Press ▲ or ▼ to highlight SET RATING, and then press ▶ to open the SET RATING menu.

7. Press ▲ or ▼ to highlight MPA A RATING.

8. Press ▶ to block ("X") or ◀ to unblock ("✓").

 
 
 
 
MPAA (movie) ratings that can be blocked

- X
X-rated (For adults only)
- NC17
Not intended for anyone 17 and under
- R
Restricted (Under 17 requires accompanying parent or adult guardian.)
- PG13
Parents Strongly Cautioned (Some material may be inappropriate for children under 13)
- PG
Parental Guidance Suggested (Some material may not be suitable for children)
- G
General Audience (Appropriate for all ages)

To disable (unblock) MPAA rating blocking:

Follow steps 1-5 above, but select "N" in step 5 to disable blocking.

Note: This also will unblock TV and YOUTH TV rating blocking (see next page).

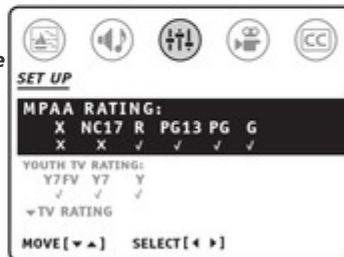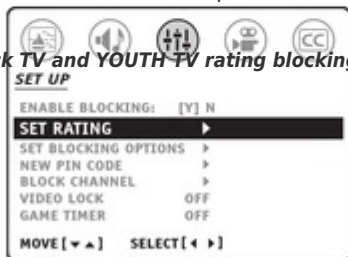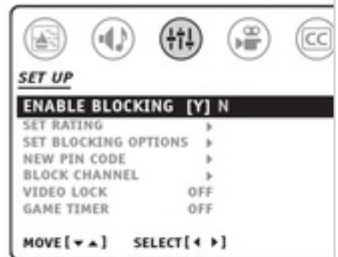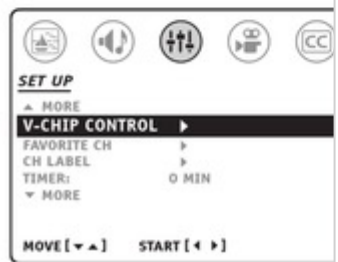

MPAA (movie) ratings that can be blocked	
X	X-rated (For adults only)
NC17	Not intended for anyone 17 and under
R	Restricted (Under 17 requires accompanying parent or adult guardian.)
PG13	Parents Strongly Cautioned (Some material may be inappropriate for children under 13)
PG	Parental Guidance Suggested (Some material may not be suitable for children)
G	General Audience (Appropriate for all ages)

To disable (unblock) MPAA rating blocking:

30
 Using the TV's Features


SET UP
 SET UP
 SET UP
 SET UP
 MPA A RATING:
 X NC17 R PG13 PG G
 X X ✓ ✓ ✓ ✓ ✓
 YOUTH TV RATING:
 Y7FV Y7 Y
 ✓ ✓ ✓
 TV RATING:
 []
 []
 []
 MOVE
 SELECT

Note:

The V-Chip function is only available for the U.S. V-Chip system. The Canadian V-Chip system (Puce-V) is not supported.

Selecting V-CHIP CONTROL in the SET UP menu

 MORE
 V-CHIP CONTROL
 FAVORITE CH
 CH LABEL
 TIMER:
 0 MIN
 MORE

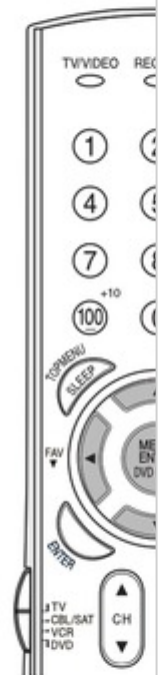

[
]
MOVE
[
]
START
V-CHIP CONTROL
menu open, with
ENABLE BLOCKING
ENABLE BLOCKING [Y]
N
highlighted
SET RATING
SET BLOCKING OPTIONS
NEW PIN CODE
BLOCK CHANNEL
VIDEO LOCK
OFF
GAME TIMER
OFF
[
]
[
]
MOVE
SELECT
YZX •
MENU

Using the SET RATING feature (V-Chip control)

Some TV programs and movies include signals that classify the content of the program (dialog, language, sex, violence). The SET RATING feature in the V-CHIP CONTROL menu detects these signals and blocks programs according to your rating selections. This feature includes blocking for MPAA, YOUTH TV, and TV ratings, as described below and on the next page.

MPAA rating blocking (Independent rating system for movies)

To enable MPAA rating blocking and select the level of blocking:

Note:
The V-Chip function
U.S. V-Chip system
system (Puce-V) is

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
27
28
29
30
31
32
33
34

Related Manuals for Toshiba 36HF72

[TV Toshiba 32HF72 Service Manual](#)

N2ps chassis (111 pages)

[CRT TV Toshiba N2PS CHASSIS 32HF72 Service Manual](#)

Toshiba crt television user manual (111 pages)

[TV Toshiba 36HFX72 Service Manual](#)

(109 pages)

[CRT TV Toshiba 32HF72 Owner's Manual](#)

Colorstream color television (55 pages)

[TV Toshiba 32HF72 Owner's Manual](#)

(55 pages)

[TV Toshiba 36HF73 Specifications](#)

Brochure (2 pages)

[TV Toshiba TAC0326 Service Manual](#)

(122 pages)

[TV Toshiba 32HFX72 Owner's Manual](#)

Colorstream color television (58 pages)

[TV Toshiba 32HFX72 Owner's Manual](#)

(58 pages)

[TV Toshiba 36HF12 Owner's Manual](#)

Colorstream color television (54 pages)

[TV Toshiba 32HFX71 Owner's Manual](#)

Colorstream color television (56 pages)

[TV Toshiba 36HFX71 Service Manual](#)

(54 pages)

[TV Toshiba COLORSTREAM 32HFX71 Owner's Manual](#)

(56 pages)

[TV Toshiba 32HFX73 Owner's Manual](#)

Colorstream color television (64 pages)

[TV Toshiba 36HF13 Owner's Manual](#)

Colorstream color television (55 pages)

[TV Toshiba 36HF71 Owner's Manual](#)

Colorstream color television (50 pages)

Related Content for Toshiba 36HF72

[STAR SIGHT CN35F90 Installing Your Tv Set](#)

Toshiba STAR SIGHT CN35F90

[51HX84 Bipaa Rating \(Independent Rating System F'or Movies\)](#)

Toshiba 51HX84

[55 XL9C Series Using Satellite Channel Table Feature](#)

Toshiba 55 XL9C Series

[32HFX72 Tv Rating \(Independent Rating System For Broadcasters\)](#)

Toshiba 32HFX72

[CZ19M21 Feature](#)

Toshiba CZ19M21

[43 UL23 Series Using Satellite Channel Table Feature](#)

Toshiba 43 UL23 Series

[24 WA3E Series Usb Auto Play Feature](#)

Toshiba 24 WA3E Series

[MW20FP1 Temporary Disabling Of Rating Level By Dvd Disc](#)

Toshiba MW20FP1

This manual is also suitable for:

[32hf72](#)