 




# Toshiba VC-CLS1BF User Manual



1  
Table Of Contents  
2  
3  
4  
5  
6  
7  
8  
9  
10



•

[Table of Contents](#)

•

## Bookmarks

[Download this manual](#)

## Quick Links







Vacuum Cleaner

# User's Manual

(Household)

VC-CLS1BF



[Table of Contents](#)

[Next Page](#)

1  
2  
3  
4  
5

## Related Manuals for Toshiba VC-CLS1BF

[Toshiba VC-CLS1BF - HAND STICK VACUUM CLEANER Manual](#)

(article)

[Vacuum Cleaner Toshiba VC-GC33BSA Owner's Manual](#)

(48 pages)

[Vacuum Cleaner Toshiba VC-GC32BSA Owner's Manual](#)

Household vacuum cleaner (40 pages)

[Vacuum Cleaner Toshiba VC-EA100CV Owner's Manual](#)

(5 pages)

[Vacuum Cleaner Toshiba VC-PD9 Instructions](#)

(2 pages)

[Vacuum Cleaner Toshiba VC-GC31CPT Owner's Manual](#)

Household vacuum cleaner (38 pages)

[Vacuum Cleaner Toshiba VC-CL3000XBF User Manual](#)

(18 pages)

[Toshiba VC-CLX50BF - 1.5KG HAND STICK VACUUM CLEANER Manual](#)

(article)

[Vacuum Cleaner Toshiba HCV-6KALU Instruction Manual](#)

Vacuum contactor (30 pages)

## Summary of Contents for Toshiba VC-CLS1BF

[Page 1](#) Vacuum Cleaner User's Manual (Household) VC-CLS1BF...

### [Page 2: Table Of Contents](#)

Product Introduction Safety Warning Precautions manual before use. Keep it properly for future reference. and it is strictly forbidden to suck the following objects: Contents 1. All liquids such as water and solvents; 2. Building dust and garbage such as lime and cement ash; 3.

### [Page 3: Name Of Each Part](#)

Product Introduction Name of Each Part Main unit Extension tube Electric floor brush Flat nozzle Round brush Power adapter Dust cup cleaning brush Press and hold the button to disassemble Press and hold the button to disassemble...

### [Page 4: Description Of Indicators](#)

Product Introduction Instructions for Use Description of Indicators Charging Charging/operation indicators The battery is not charged when the product is delivered. Please be sure to fully charge the battery before use. Function Status Indication Place the cleaner on the charging stand and the charging start when the charging indicator light (red) turns on.

### [Page 5: Cleaning](#)

Instructions for Use Instructions for Use Cleaning Accessories Before you start cleaning, please clean up large garbage, such as rocks and packaging film, Interworking Accessories Scenes in order to prevent blocking the air duct or scratching the cleaner. Main unit Extension tube 1.

### [Page 6: Cleaning And Maintenance](#)

1. Do not use detergent or other agents for cleaning; 2. After washing, it must be completely dried before putting it back into use; 3. Do not use hair dryer for drying; 4. The dust cup cotton

filter is consumable. To replace it, please contact the TOSHIBA After Sales.

### [Page 7: Electric Floor Brush Cleaning](#)

2. After washing, it must be completely dried before putting it back into use; 3. Do not use hair dryer for drying; Gear Roller Be careful not to cut 4. The dust cup cotton filter is consumable. To replace it, please contact the TOSHIBA After Sales. Roller the bristles...

### [Page 8: Other Cleaning](#)

Cleaning and Maintenance Cleaning and Maintenance Other Cleaning After cleaning, install in the order as shown in the figure below a. Align the roller brush with the hole and insert; Main unit b. Put the belt on the gear position of the roller brush; Wipe with a dry cloth.

### [Page 10: Troubleshooting And Specifications](#)

Troubleshooting and Specifications Product Disposal Except for discarded products, it is strictly prohibited to disassemble the battery without authorization in order to avoid danger. It is strictly prohibited to use discarded batteries. This appliance contains batteries that are only replaceable by service technicians . When you are going to discard the product, please strictly follow the steps below.